





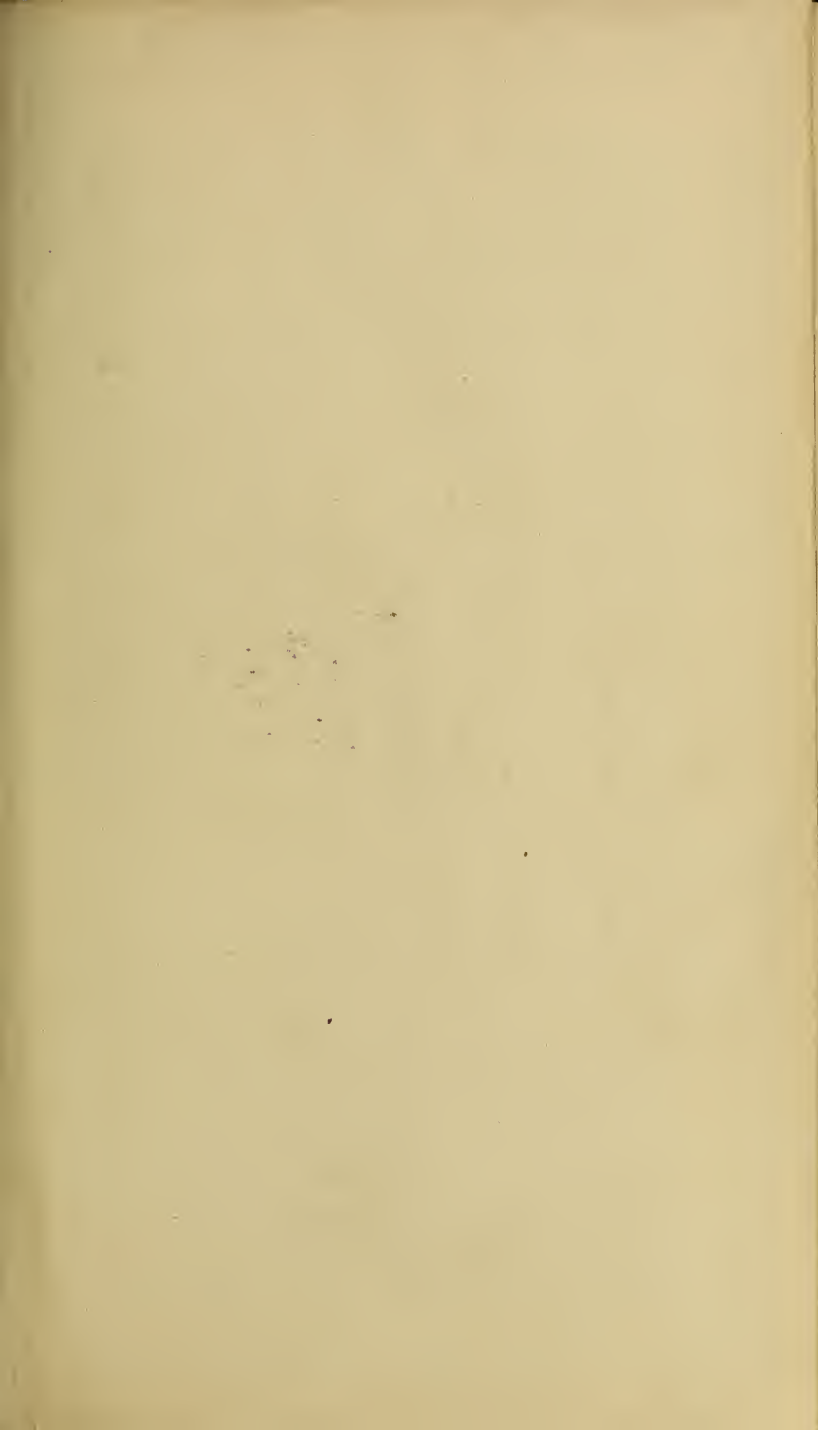
Class TL 703

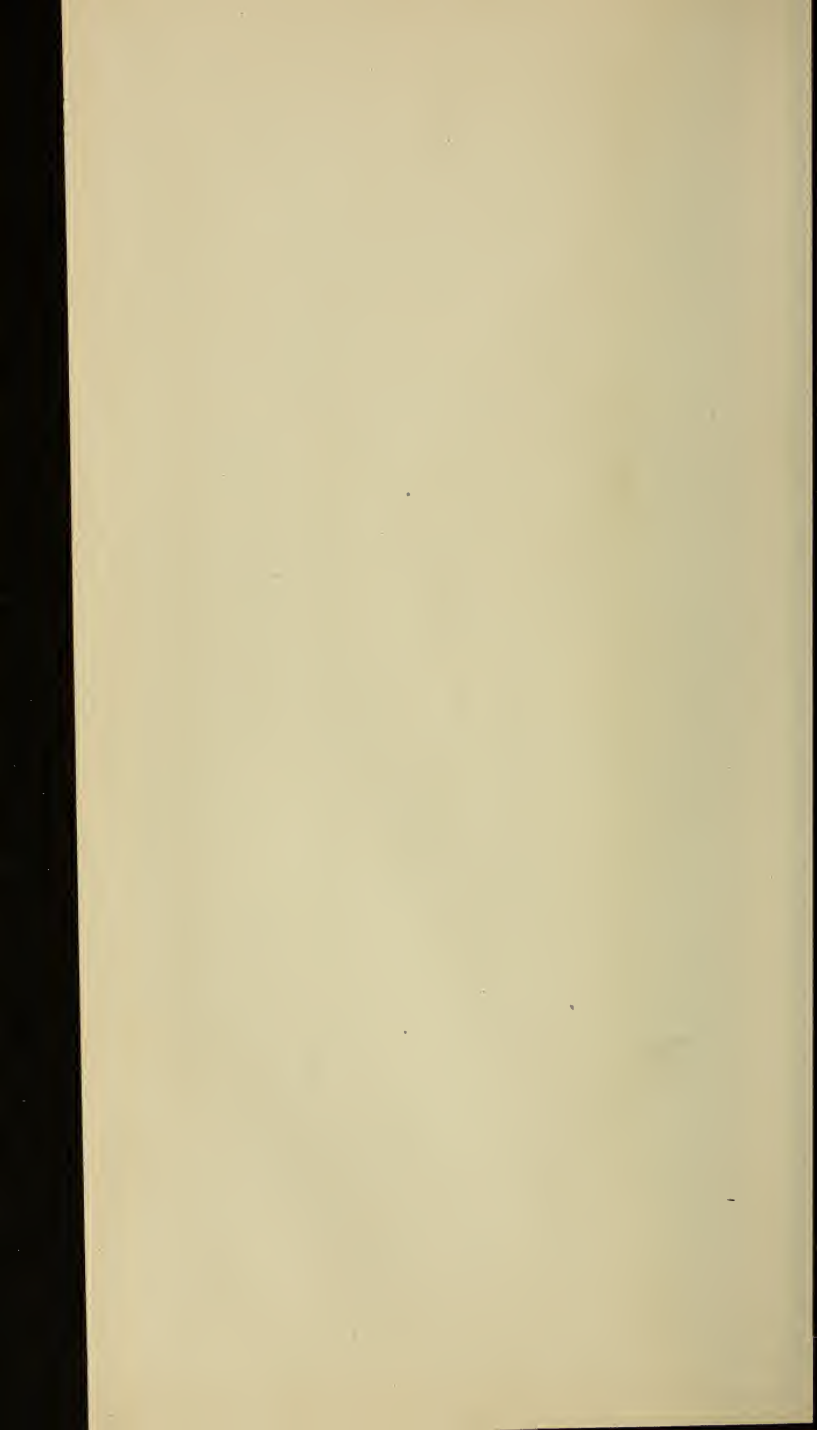
Book H5W8

1918

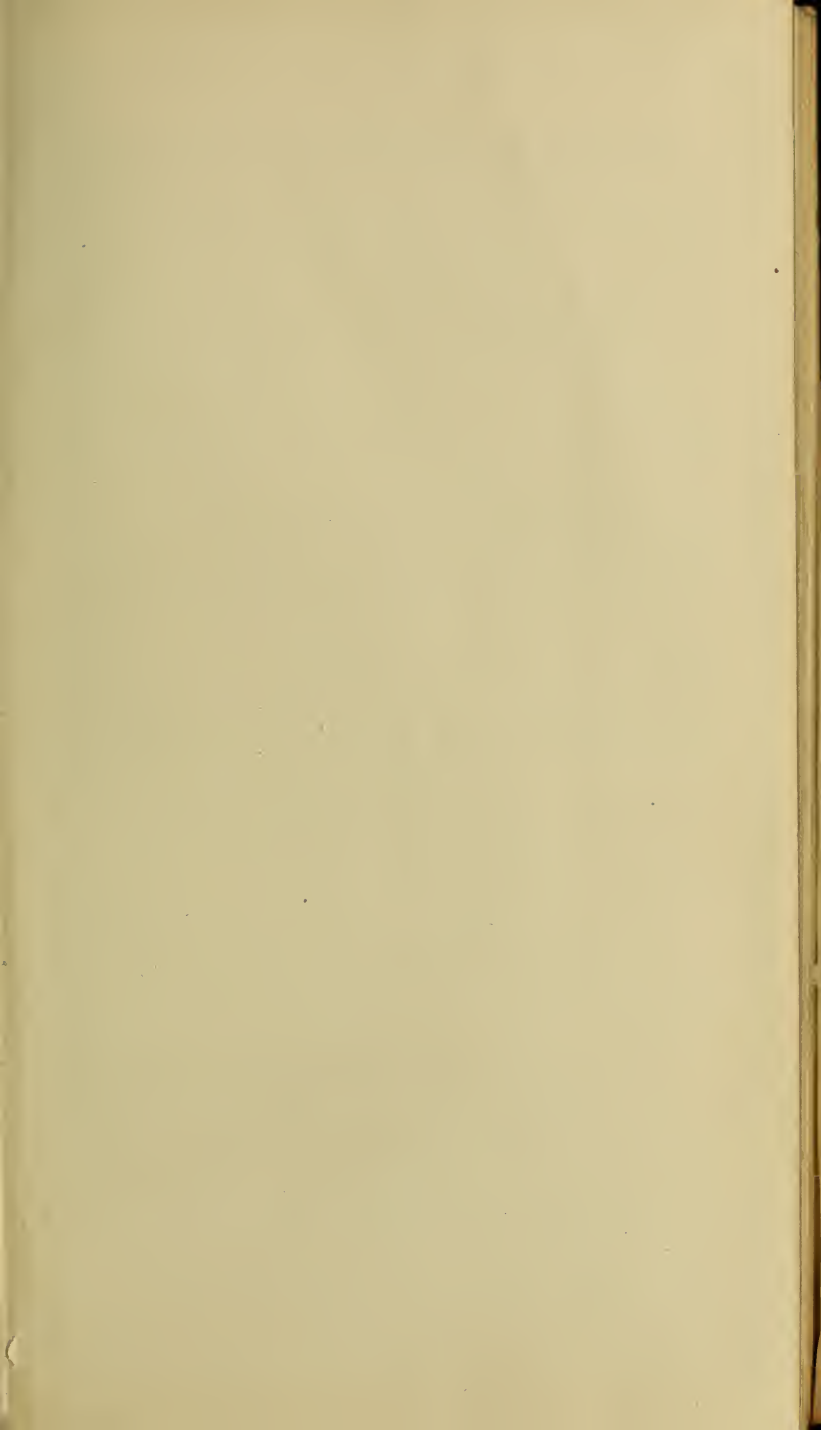
Copyright N<sup>o</sup>                     

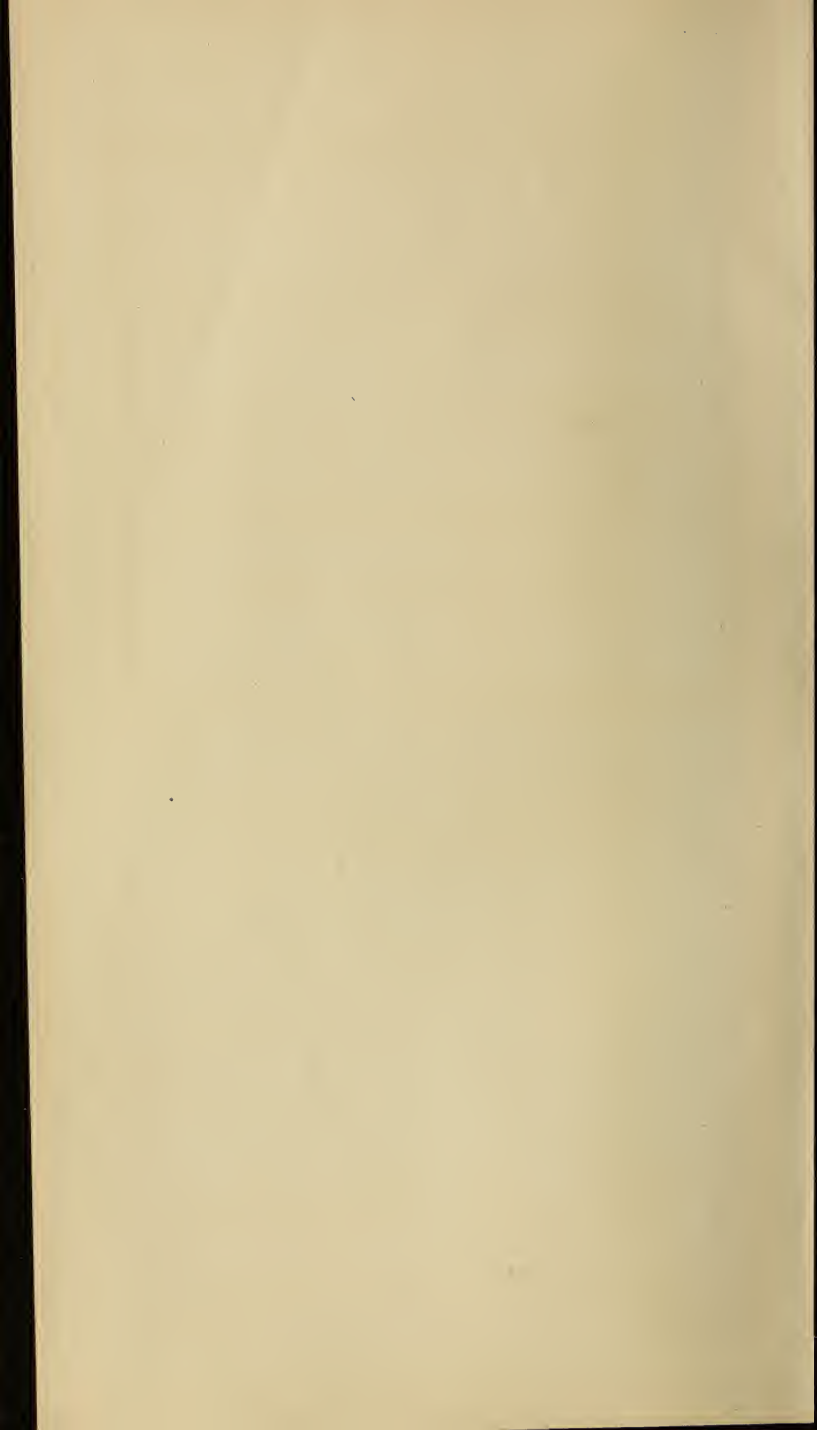
**COPYRIGHT DEPOSIT.**












INSTRUCTIONS  
For the  
CARE and OPERATION  
Of  
MODEL A-I. and E.  
Hispano-Suiza  
AERONAUTICAL  
ENGINES



Wright-Martin  
Aircraft Corporation

New Brunswick.

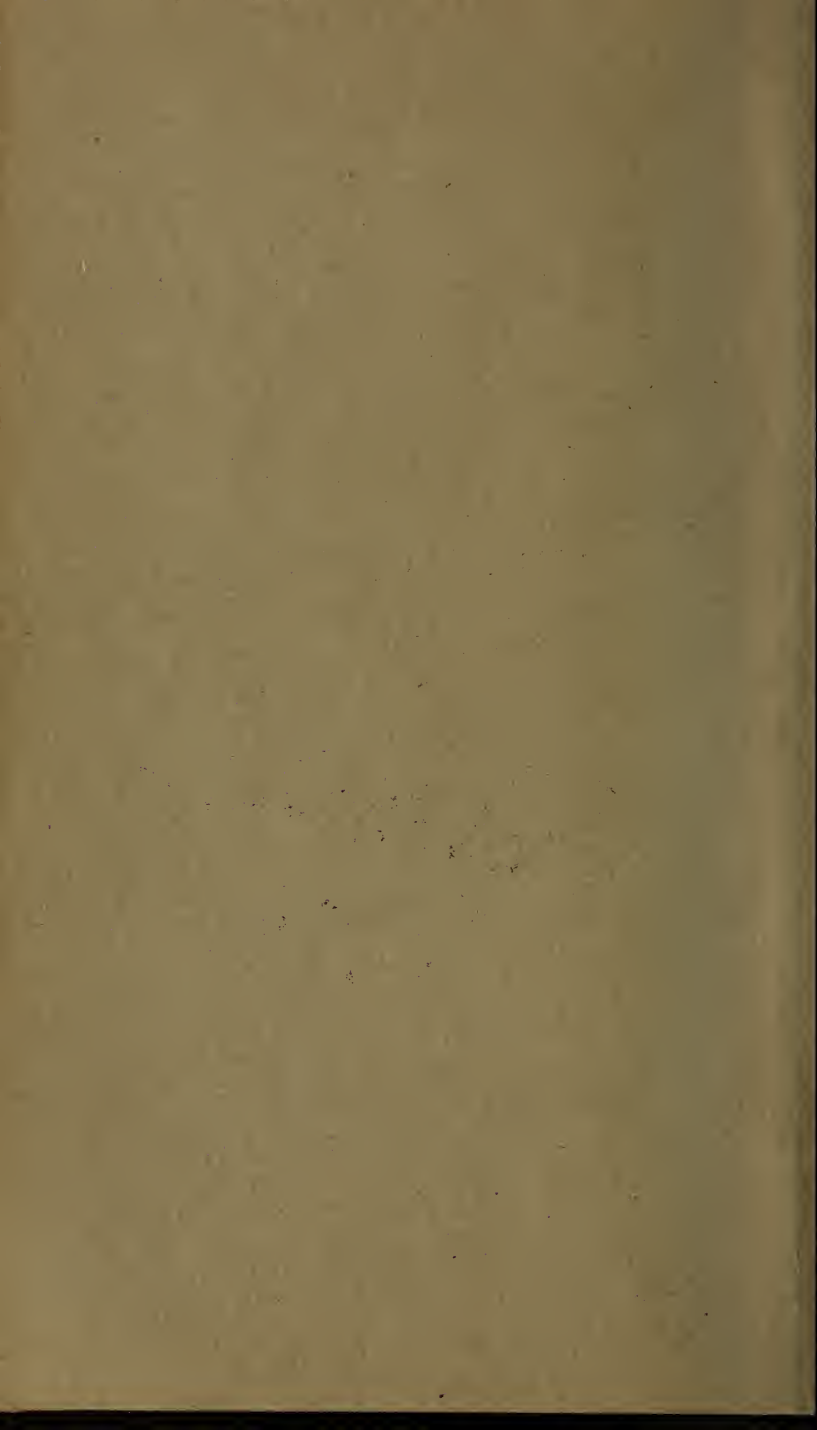New Jersey, U.S.A.



# Hispano-Suiza

AERONAUTICAL ENGINES

BIRKIGT PATENTS

INSTRUCTION BOOK

JULY, 1918

SERIES No. 4A

Wright-Martin  
Aircraft Corporation

New Brunswick

New Jersey, U. S. A.

TL703  
H5W8  
1918

Copyright, 1918,  
by  
Wright-Martin Aircraft Corporation  
New Brunswick, N. J., U. S. A.



AUG -3 1918

©CL A501379

18-15492

ms 1

# INTRODUCTION

---

The remarkable progress that has taken place in the field of aviation during the past few years has been due largely to the rapid developments made in aeronautical engines.

Most of the early aeroplanes were equipped with rotary engines. These engines had the advantage of being light in weight, but they lacked power and reliability. Moreover, they were uneconomical in oil and gasoline. It soon became apparent that any further progress in aeronautical engines must necessarily come from developments along the lines of the more powerful stationary engines.

During the spring of 1916, the Societe Hispano-Suiza of France presented the first Hispano-Suiza engine to the Technical Section of the French Aviation. This was a stationary "V" type engine of 150 H. P.

This type "A" Hispano-Suiza was soon after adopted by the French military authorities. Fitted on the Spad plane, it was brought up to the front in August 1916, and underwent the most severe practical tests during the battle of the Somme.

It was due largely to the performance of the Hispano-Suiza engine during this battle that the French were able to gain the supremacy of the air.

The success of the type "A" 150 H. P. having been fully demonstrated, the Societe Hispano-Suiza began experimenting with a more powerful engine and in December, 1916, a new Type "E" 180 H. P. engine was produced.

In general construction this engine was practically the same as the former Type "A," but the compression had been increased, and a larger carburetor had

been added. The engine was designed to run 300 revolutions faster, and was correspondingly reinforced.

This engine gave more satisfaction than the first one. It had the great advantage of having high compression and allowed the pilot to keep his power at high altitudes. The Germans at that time did not have such fast machines, and were trying to get the advantage in altitude. On that point they were also beaten. Between 15,000 and 18,000 feet, where most of the fighting took place, the performance of the Hispano-Suiza engine was absolutely uniform and reliable.

In March, 1917, the Societe Hispano-Suiza produced a 200 H. P. engine, which permitted an extra gun to be carried. This engine was used throughout the Battle of the Aisne and in Flanders. In July a new type of 200 H. P. was manufactured. This was the 200 H. P. high compression engine. Very soon after the appearance of this engine, tests were made on the 300 H. P. Hispano-Suiza engine in service at the front at the present time.

The original Societe Hispano-Suiza not having had the facilities for turning out their engines in sufficient quantities to meet the demands of the French and allied nations, rights were given to other companies in France and to the Wright-Martin Aircraft Corporation of America.

The Wright-Martin Aircraft Corporation is building not only for the great work of the present, but for the greater work of the future.

This Company represents one of the pioneers and leaders what will be, during the years to come, one of the world's foremost industries.

WRIGHT-MARTIN AIRCRAFT CORPORATION,  
New Brunswick, N. J., U. S. A.



*The following photographs represent only  
a few of the Aces who have staked their  
success and reputation upon the Hispano-  
Suiza engines.*

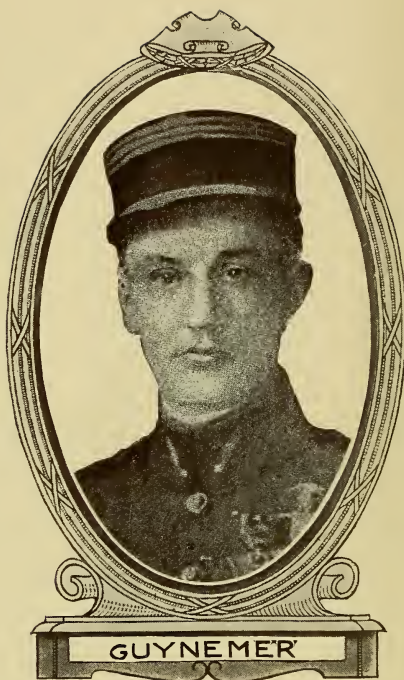




(56 Boches)

Born the 27th of March, 1894, at Sauley-sur-Meurthe: pilot of remarkable bravery and daring, having fought many aerial duals. Rendered the greatest services to his country during the early part of the war, making daily reconnoitering flights over enemy territory in the face of great danger.

Citation—"At the present time the most decorated of our pilots, having fought with valor on the English, French and Belgian fronts."



(53 Boches—20 Citations)

*(Born in Paris, December 24, 1894)*

"Captain Guynemer, commanding escadrille No. 3, died gloriously after three years of arduous fighting. He will remain the purest symbol of the qualities of the race: Unconquerable tenacity, fierce energy, sublime courage. Animated by a most unfailing faith in Victory, he leaves to France a lasting remembrance which has exalted the spirit of sacrifice and steadfastness among the soldiers of France." Last citation.

Following Decorations:

- War Cross with 25 palms
- Military medal (July 21, 1915)
- Chevalier of the Legion of Honor (Dec. 24, 1915)
- Chevalier of the Danile de Montenegro
- Cross of Saint-George of Russia
- Cross of Mitchell the Brave of Roumania
- Star of Kara George of Serbia, (Mar. 21 1917)
- Officer of the Legion of Honor, (June 11, 1917)
- Distinguished Service Order (August 1917)



(38 Boches)

Remarkable example of physical and moral energy, courage, audacity and coolness, which characteristics have won him his name of "King of the Air." Few pilots put more variety into their system of attack.

Although convalescing from serious wounds, fought every day and in many cases executed flights which lasted nine hours.

Served in two branches of the army, having first enlisted at the outbreak of the war in the 2nd Regiment of the Hussars. After the death of George Guynemer, the title of Ace of Aces passed to Nungesser.

His victories were accomplished under conditions which called for skill, endurance and heroism.

Military medal gained when with the Hussars after one month's fighting. Croix de guerre with 16 palms and 2 stars, Military cross of England, Crown of Leopold with silver palms, Belgian Croix de Guerre, Danilo de Montenegro, la Bravoure Serbe, Italian Cross of Valor, and the Cross of St. George of Russia.



(27 Boches)

Lieut. Flachaire, one of the most daring of French pilots, having 27 Boches to his credit. He demonstrated his flying qualities with his Hispano-Suiza equipped Spad to thousands in America.

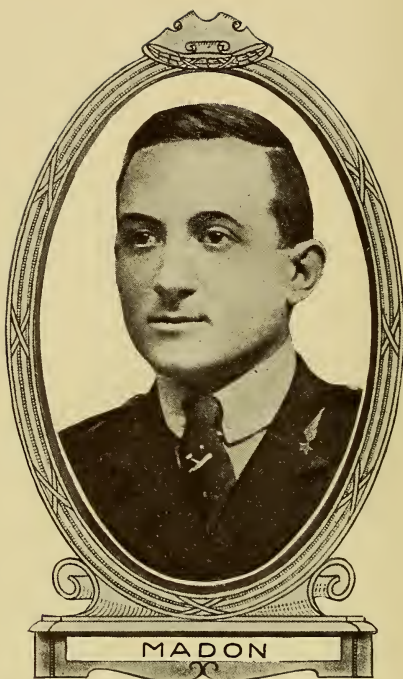


(25 Boches)

*(Born at Havre the 25th of July, 1892)*

Before entering aviation Lieut. Guerin was cited twice for brilliant action in infantry. "He is one of our most remarkable aces, having been one of the quickest in bringing down enemy planes. Has fourteen citations to his credit, military cross and legion of honor."





(25 Boches)

Born at Bizerte, 25 years ago; from the very outbreak of the war Madon distinguished himself by his fearlessness and made a name for himself by the aerial acrobatics which he performed. He was attached to the Soissons sector.

In April, 1915, was lost in a mist and forced to land in Swiss territory. He escaped the following September. Returned to France and joined his former unit. He soon began to distinguish himself as a Boche hunter.





(23 Boches)

When Rene Dorme was killed he had to his credit 23 Boches officially recorded. One might say, without exaggeration, that he had brought down twice that number. An indefatigable fighter, one who fought, not to have his successes recorded, but to bring down the greatest possible number of Boches. At the time of mobilization, he was a volunteer and succeeded in getting a transfer in the aviation in 1915, commissioned and attached to a camp near Paris with several pilots who had made big names for themselves.

Citation promoting him to the Legion of Honor: "Brilliant pilot with exceptional skill and audacity. Always ready in all weather and under all circumstances for the most daring missions."



(21 Boches)

Captain Heurtaux who succeeded Commandant Brocard as chief of the famous Stork escadrill No. 3, is one of the youngest and most remarkable of French Aces.

"The 2nd Lieut. Heurtaux has proven himself bold and energetic. He was the first to bring down an enemy aeroplane with a single bullet, a feat which only Guynemer has equalled. Heurtaux is called "the terror of the enemy."

Citation—Upon receiving the Order of Legion of Honor: "As a Cavalry officer, he proved his qualities of audacity, coolness and devotion, which earned him three citations. In aviation since December, 1914, has distinguished himself as an observer, a bomber, and pilot of exceptional ability."



(21 Boches)

*(Italian Ace)*



(19 Boches)

*(Born in Wellingford, Conn., volunteered at the outbreak of the war as a mechanic for the famous French Aviator, Marc Pourpe)*

Upon Pourpe's death he asked to become pilot to revenge his friend's death. Distinguished himself by long-distance bombing expeditions and daily combats with enemy aviators. He proved himself a remarkable pilot and was quick to win the military cross. The first American volunteer in the French Army to receive the English military cross. Lufbery's history is one of the most interesting among the Americans enrolled in the French Flying Corps.

Citation—"Of exquisite calm and even character, cool judgment coupled with exceptional bravery. In addition he was an excellent marksman. One of the most popular of the Americans in the French Esquadrille and admired by all who knew him."



(18 Boches)



(17 Boches)

(Born May 29, 1897)

Prisoner in Germany for eighteen months, escaped and reached France on the 10th of April, 1916. One month after his return to France, although still weak from privation of his prison life in Germany, he returned to the front where he soon distinguished himself by numerous victories.





(12 Boches)



(11 Boches)





## VITALIS

(7 Boches)

*(Born at Lodove, February 15, 1890)*

Flier of exceptional daring, fought many aerial duels in the course of which his plane was frequently riddled by enemy bullets. Was an expert marksman. Active at Verdun and at the Somme.



(7 Boches)

*(Born the 27th of August, 1897, at Sainte Antoine)*

Although only eighteen when he enlisted he soon acquired all the gifts required for aerial fighting—physical endurance, marksmanship, courage and tenacity. The career of Garaud was short but eloquent. The heroism and loyalty of this young man have served as a model to all the youths of France enlisted in aviation.



(7 Boches)

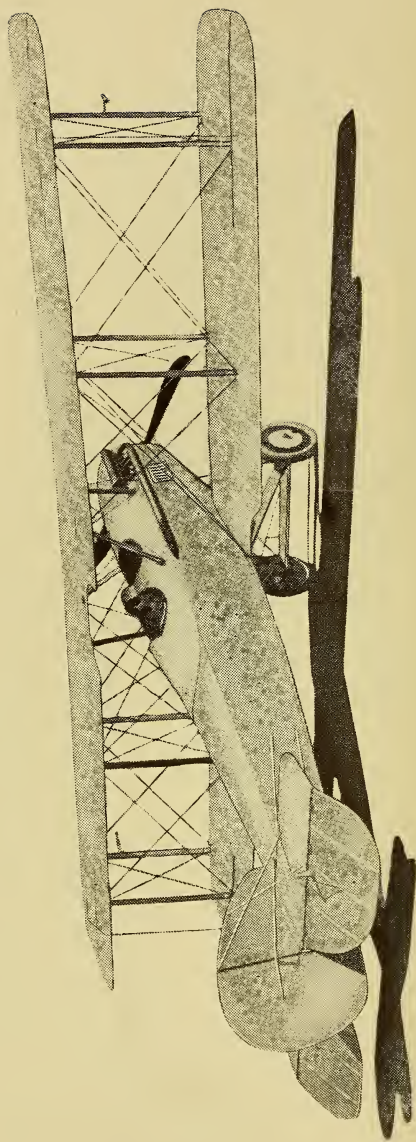


Plate 1

Aeroplane equipped with Hispano-Suiza Engine

## ***PREFACE***

Pilots and owners will understand that it is impossible to lay down absolute rules for the proper care of engines that will cover all the wide and varying conditions of air service which must be met with.

The Instruction Book which is placed in the tool equipment of each Hispano-Suiza Engine is intended to be suggestive only, and we expect the instructions to be modified to meet the particular conditions under which each engine is operated.

To insure to every Hispano-Suiza owner the full benefit of the remarkable service which this engine is capable of delivering, the Technical Service Department of the Wright-Martin Aircraft Corporation will furnish, upon request, any information concerning the care and operation of the Hispano-Suiza Engine under special conditions of service.

It is well to remember that continued efficiency is best assured when replacements are made with the standard Hispano-Suiza parts manufactured by the Wright-Martin Aircraft Corporation.

WRIGHT-MARTIN AIRCRAFT CORPORATION  
New Brunswick, N. J., U. S. A.



## INDEX

Part  
No.

1. Unpacking.
2. General Description.
3. Recommendations for Installing the Engine in Airplane.
4. Carburetor.
5. Ignition System.
6. Lubrication System.
7. Water Circulation System.
8. Gasoline System.
9. Valve Timing.
10. Starting System.
11. Precautions to be Taken Under Freezing Conditions.
12. Recommendations for Attaching Propellers.
13. Machine-Gun Firing Mechanism.
14. Adjustments.
15. Operation.
16. Instructions for Starting the Engine.
17. Disassembly.
18. Maintenance.
19. Reassembly.
20. Trouble Chart.
21. Data.
22. Appendix—Instructions for the Care and Operation of Model "E" 180 H.P. Hispano-Suiza Engine.
23. Appendix—Instructions for the Care and Operation of Model "A" 150 H.P. Hispano-Suiza Engine.
24. Reference Tables.
25. Model "I" 150 H.P. Hispano-Suiza Engine—Parts Catalogue.
26. Additional Parts Covering Model "E" 180 H.P. Hispano-Suiza Engine.
27. Model "A" 150 H.P. Hispano-Suiza Engine—Parts Catalogue.
28. List of Special Tools for Hispano-Suiza Engines.
29. Index to Drawings and Line Cuts.
30. Clearance Allowance Charts.
31. Assembly Views of the Models A, I and E Engine.

INSTRUCTIONS  
FOR THE  
CARE AND OPERATION  
OF  
HISPANO-SUIZA  
AERONAUTICAL ENGINES

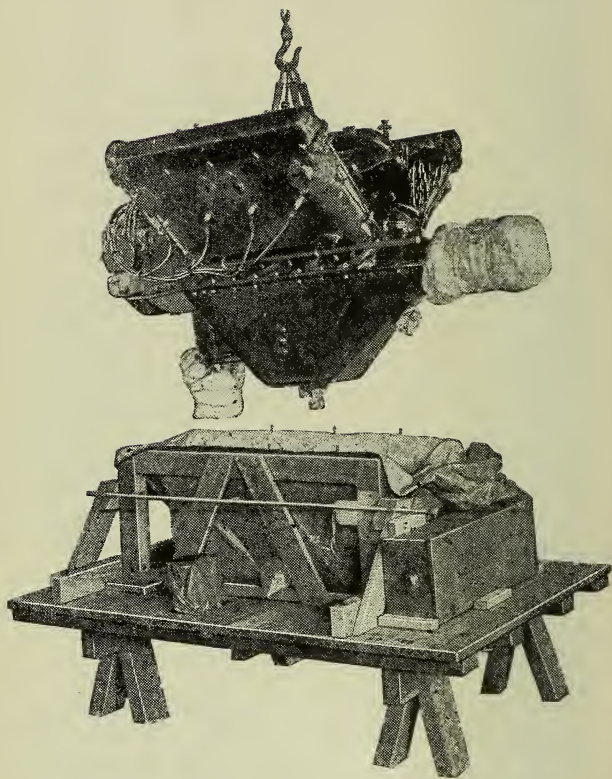


Plate 2  
Engine being lowered into shipping box



## **PART I**

### **UNPACKING—MODEL I**

#### ***Shipping Weight and Size.***

The shipping weight of the Model I, 150 H. P. Hispano-Suiza Engine is about 870 lbs.

The Hispano-Suiza Engines are shipped from the factory completely enclosed in a substantial box fitted with handles on each corner. The engine itself is covered with a water-proof oil cloth. The dimensions of the shipping box are:

Length—60"

Width—38"

Height—39½"

Displacement—52 Cu. Ft.

To unpack, cut the four sealing wires, preferably at the bottom edge of the box. Remove the eight nuts that hold the top and sides of the box to the bottom. The engine will be found securely bolted down with six bolts to supports or sills fastened and braced to the bottom of the box. Remove the nuts to these bolts and place two cables around each side of the engine between two or three of the steel sleeves. The engine can be lifted out with a suitable hoist. See Plate 2.

#### ***What to Rest the Engine On.***

Do not attempt even to partially rest the weight of the engine on the lower half of the crankcase or any part other than the separating flanges on the upper half of the crankcase.

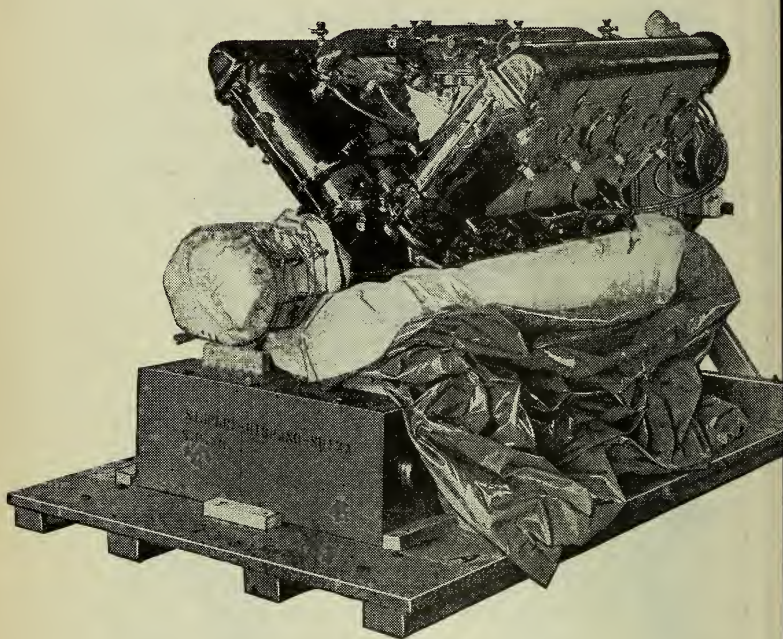


Plate 3

Engine in shipping box before water-proof cover is in place

## ***Where Parts are Found in Packing Box.***

At the front end of the engine under the propeller hub will be found the spare parts and tool equipment box.

## ***How Parts are Covered When Shipped.***

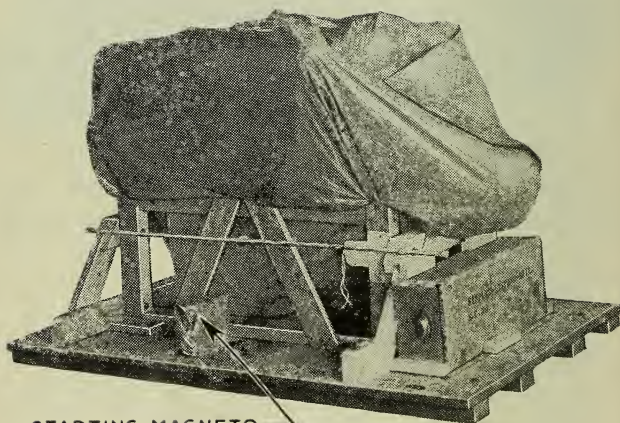
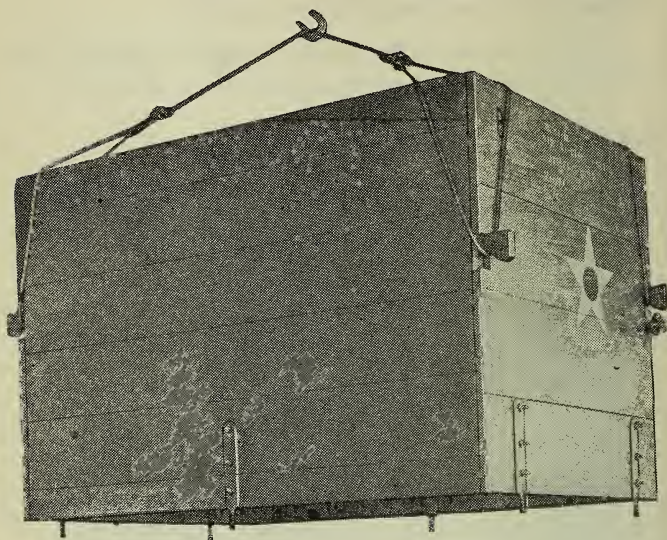
The following parts will be found covered with paper:

- Carbureter air inlet.
- Propeller hub.
- Water pump.
- Tachometer Drive.
- Crank case breather.
- Vertical shafts.
- Air pump.
- Magnetos.

Solid fibre gaskets are placed over the exhaust ports and water outlets and should be removed.

## ***Removing Oil From Outside of Engine.***

Before shipping the Hispano-Suiza Engines, all the steel and aluminum parts are slushed with heavy oil. A spray of gasoline under air pressure will remove this from the engine. If the engine is to be started immediately after washing, keep the magnetos from getting gasoline in them, otherwise there will be danger of fire.



STARTING MAGNETO

Plate 4

Outside cover of shipping box being removed



## ***PART II***

### ***GENERAL DESCRIPTION***

The Model "I" Hispano-Suiza Aeronautical Engine is of the eight-cylinder "V" type, four cycle, water cooled, bore 120 m/m 4.72", stroke 130 m/m 5.11". At sea level it develops 150 H.P. at 1450 r. p. m.

There are two cylinder blocks, each containing four cylinders, their center lines making an angle of 90° between them.

#### ***Cylinders.***

The individual cylinders are steel forgings, heat-treated, machined and threaded on the outside. These steel sleeves are flanged at the bottom and closed at the top, this surface being flat, providing for the two valve seats. The cylinders are screwed into the cast-aluminum cylinder blocks which form the water jackets and valve ports, as well as intake and exhaust passages. Each block, after cylinders and other parts are assembled, is given several coats of enamel, both inside and out, each coat being baked on.

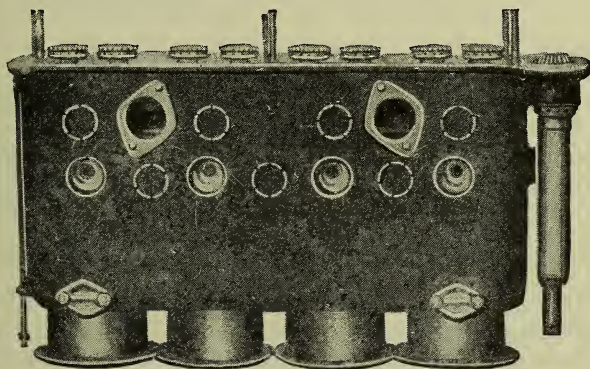


Plate 5

Cylinder and steel sleeve assembly. Model A, E and I

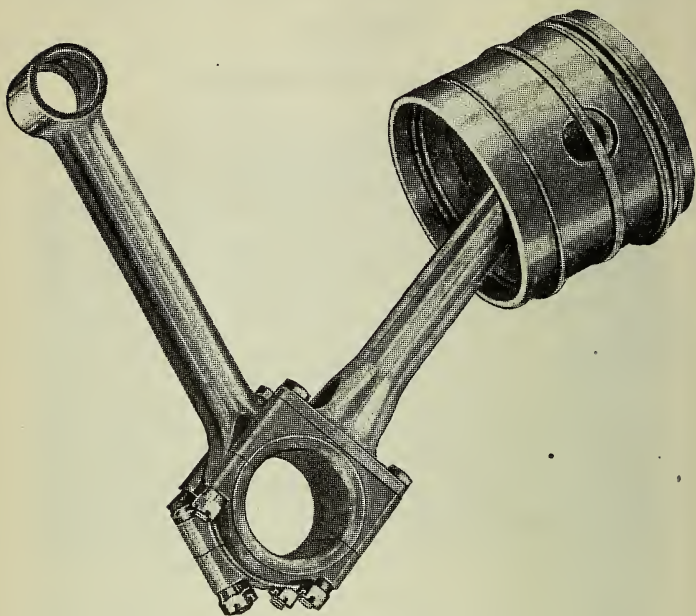


Plate 6

Piston and connecting rods assembled. Model I and E

***Pistons.***

The pistons are aluminum castings, three-eighths of an inch in thickness at the head. The sides taper down from three-eighths of an inch at the top to one-eighth of an inch in thickness at the bottom. By this construction the heat is rapidly carried off. At the top of each piston are four narrow rings in two grooves. Near the bottom there is one oil ring, with relief just below it.

The piston pins are made of case-hardened alloy steel, large in diameter, and hollow. They are allowed to float in both sides of the pistons as well as the upper end of the connecting rods. Each is held in place by a piston pin lock ring.

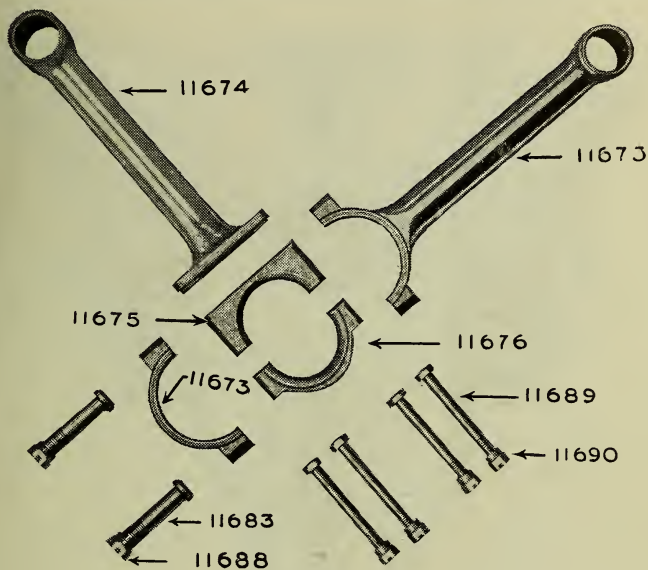


Plate 7

Inner and outer connecting rods disassembled. Model I and E

## ***Connecting Rods.***

The connecting rods are of heat-treated steel tubular in section. One rod is forked at the bottom end, having a two-piece bronze box (babbitt lined) bolted to it by four bolts. This bears directly on the crankshaft. The other rod bears on the outer and central portion of the bronze box. Both connecting rods are provided with bronze bushings at their upper ends.

## ***Crankshaft.***

The crankshaft is of the four-throw type, 180° between throws. It is made of chrome nickel steel, machined all over, and is hollow for lightness.

This shaft has four plain main bearings, bronze backed and babbitt lined, and one annular ball main

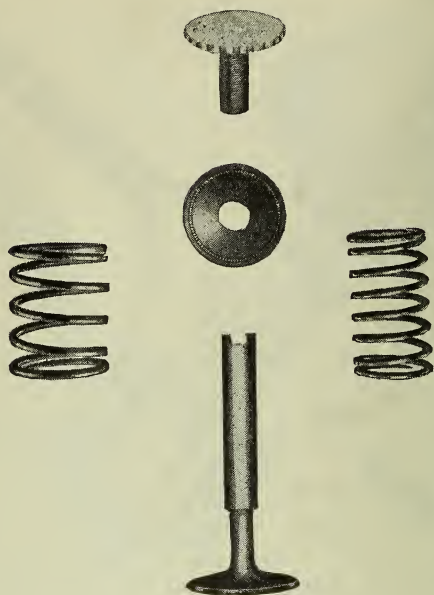


Plate 8

Valve, valve springs and valve tappet disassembled. Model A, E and I

bearing at the rear (magneto) end. It is provided with a taper having a key for the propeller hub.

The thrust for either a tractor or pusher propeller screw is provided for by a double row ball-thrust bearing located in the front of the crankcase.

### ***Crankcase.***

The crankcase is of aluminum and is made in halves, the division being on the center line of the crankshaft. The main bearings are supported in both the upper and lower halves.



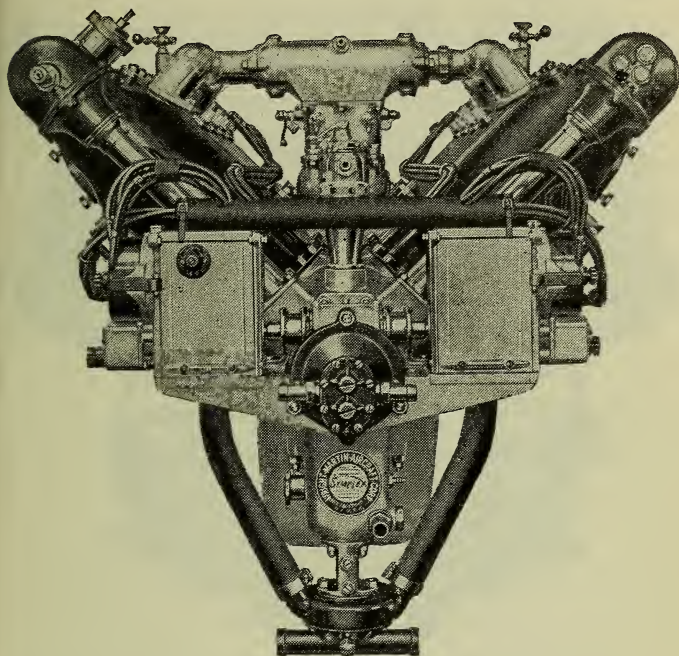


Plate 9  
Rear view of Model I and E

The lower half is of very deep section, thus providing a large oil reservoir and at the same time stiffening the engine.

### ***Magneto Support and Drive.***

The magneto support is an aluminum casting bolted on the rear end of the crankcases. A small shaft, with a spiral gear, driven from the end of the crankshaft is mounted in the center of the magneto support. This shaft drives, by means of the spiral gear, another shaft which is at right angles to it and directly above it.

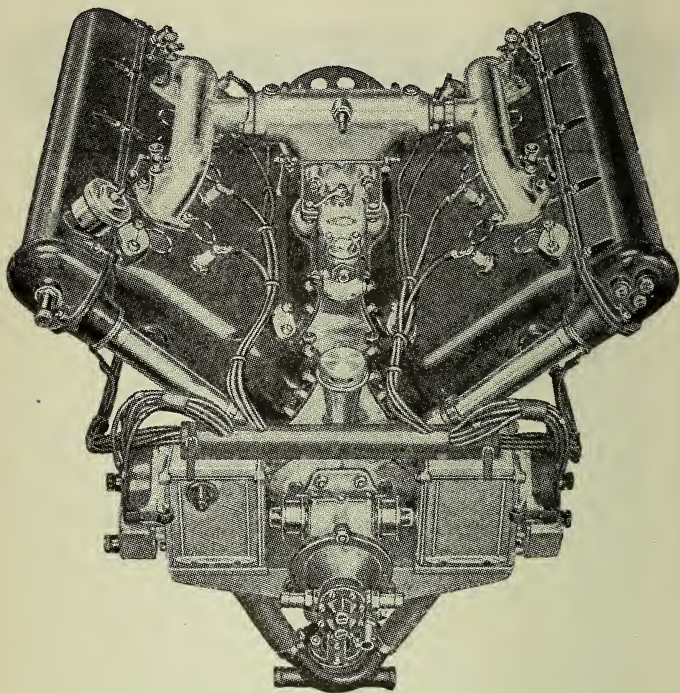


Plate 10

Looking down on the top from the rear. Model I and E

The magnetos are driven from this upper shaft through gear type couplings.

### ***Valves.***

The valves are set vertically in the cylinders along the center of each block and are directly operated by a single, superimposed camshaft. The valves are Tungsten Steel, with large diameter hollow stems, working in cast-iron bushings, provided at the upper ends with case-hardened flat-headed adjusting screws (discs) upon which the cams are operated. To insure

# AERONAUTICAL ENGINES

---

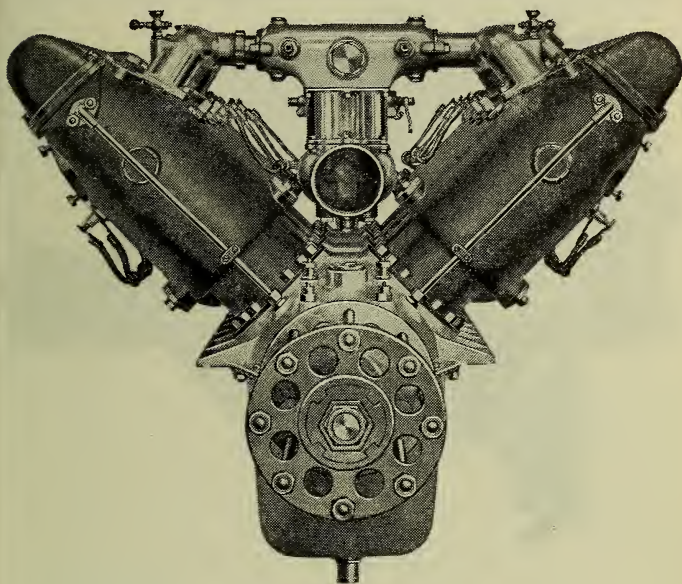


Plate 11

Front view of Model I and E

proper seating, the valves are held to their seats by two concentric helical springs each, either one of which is sufficient to insure the valve seating in case of breakage to the other.

Ready adjustment of clearance between the adjusting screws or discs and the cam contour is obtained by serrated washers. These washers are pressed upward by springs and hold the adjusting screws in place while they permit easy turning by means of a special wrench which angularly displaces the adjusting screws in the stems of the valves. The spring retainer washer is held in place angularly by means of tenons which engage slots in the stem. Nevertheless, the whole assembly can slide freely lengthwise. It is the valve spring which holds the spring retainer to the adjustment disc, the rim of which is arranged with a small indentation.



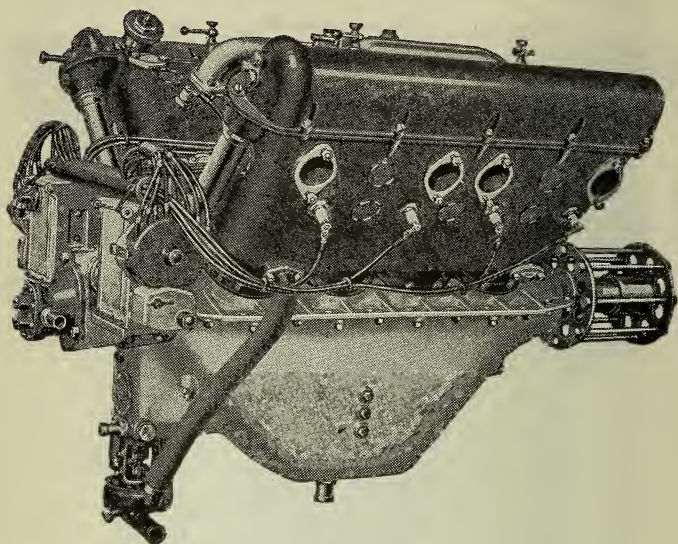


Plate 12

Right side of Model I and E

### ***Camshafts.***

The camshafts are hollow and are supported by three plain bronze bearings each. The drive for each shaft is by means of two pairs of bevel gears and a vertical shaft driven from the crankshaft by two vertical shafts and bevel gears of hardened alloy steel running in plain bronze bearings. These shafts are protected by a housing of light steel tubing and each one is provided with a screw-driver type of joint near the middle, allowing ready removal of the cylinder blocks without dismantling other parts. The camshafts, cams and heads of valve stems are all enclosed in oil-tight cast-aluminum removable housings.

### ***Air Pump.***

The valve gear housing is provided with an air pressure pump, the piston of which is operated by one of the cams.

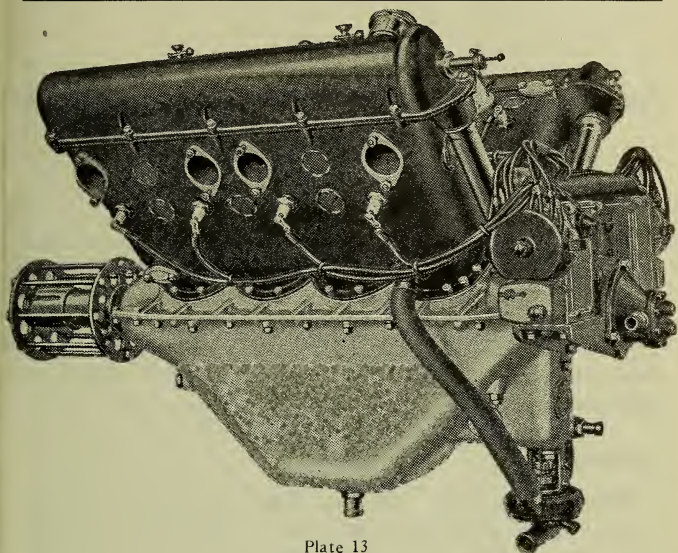


Plate 13  
Left side of Model I and E

## ***Tachometer.***

Each valve gear housing is provided with a dog clutch tachometer drive operated by the camshaft.

## ***Propeller Hub.***

The propeller hub is fastened directly on the tapered crankshaft end by means of a key, being drawn on by a nut having a coarse pitch thread on the inside and it being locked by a second nut having a fine pitch thread on the outside which screws directly into the propeller hub.

## ***Starting Crank.***

Some engines used in Seaplanes or planes of the pusher type are equipped with a geared-down hand crank starting device. Thus equipped they are geared up to a small starting magneto which gives a hot spark at low engine speeds for starting. See Plates 38 and 39.

## ***Exhaust.***

The exhausts have individual ports to which are attached steel manifolds adapted for each particular type of airplane.

### **PART III**

## **RECOMMENDATIONS FOR INSTALLING THE ENGINE IN THE AIRPLANES**

### ***How Mounted.***

The engine should be anchored on a rigid support and at the points of contact with the engine the support should be lined with fibre or sheet metal. The engine base should set flat on the engine support members. Contact should be made at all places between engine base and supports before the nuts holding the base are tightened.

### ***Accessibility.***

Whenever possible, the camshaft housing or cylinder covers should be left exposed; their disassembly is then very easy and this arrangement permits the plane constructor to cut down the size of the cowls. If, in certain cases, the engine is mounted without any cowls, some method of sheltering the magnetos should be provided for, such as a leather covering.

The plane should be so designed that the following parts are easily accessible: Magnetos, particularly the distributors and breaker boxes, spark plugs, oil filter A-11025-B, oil relief valve 11893, and crankcase breather tube cap A-9960-B.

### ***Protection from Fire.***

The plane should be protected from back-fires by having a long screen placed over the air inlet, the minimum inside diameter of which should be 102 m/m or 4", having a length of 152 m/m or 6", with a steel disc placed in the one end.

At the lower part of the carburetor is a nipple to which a small drain tube should be fastened to carry off the gasoline. This tube should discharge well to the rear



Q. 22. 14

1867 - 1868

1869 - 1870

1871 - 1872









under the planes, and as far away from the exhaust as possible.

## ***Gasoline Supply Shut Off.***

A gasoline shut-off should be provided as near the engine as possible to enable the pilot to shut off the gasoline supply.

## ***Placing of Water Radiators.***

It is important that the plane designer place the water radiator so that there is at least a 12" head of water above the highest part of the cylinder water space. When two side radiators are used they should be joined, if possible, by a communicating tube on top. The circulating system should have at its highest point a small expansion tank with a level cock, which avoids complete refilling of the tank. The space in the tank above the level cock should have not less than 3 litres or 3 quarts capacity, to allow for the expansion of the water.

## ***Water Filter.***

It is necessary to locate, in an accessible manner, a filter between the cylinder outlets and each radiator to stop sediment in the water which deposits in the jackets and tends to clog the radiators.

## ***Precautions.***

See that all water and oil connections are tight.

See that the carburetor control rods are pinned in place at both ends and that they work freely. See that they function the carburetor control levers from one extreme to the other. Always take these precautions, remember that any one of these coming loose may cause a forced landing.

## **PART IV**

### **STROMBERG AIRPLANE CARBURETOR USED ON MODEL "I" AND "E"**

#### **TYPE NA-D4 AND NE-D4**

In this carburetor the fuel is metered and discharged by suction generated from, and depending upon, the rate of air delivery through the venturi tubes to the carburetor. The fuel delivery is made to respond in proper proportion to this suction by the induction of air into the jet. This keeps the mixture constant throughout the throttle range.

The compound venturi tube construction also develops a powerful suction at the point of fuel discharge and, in conjunction with the air injection, gives complete atomization.

#### ***Metering Nozzles.***

For each carburetor unit there is a separate nozzle through which the whole gasoline supply for that unit is taken. These nozzles are located horizontally so that they may be changed without removing the carburetor from the engine. A similar nozzle, several sizes larger, may be used in the accelerating well to assist atomization, but this is sufficiently large to require no change.

#### ***Idle Running.***

During idle and low throttle running the gasoline, after passing through the metering nozzle, is carried up into the idle tube end, after dilution with a small quantity of air, is discharged through a slot at the edge of the throttle, as shown in the illustration, Plate 15. The amount of air dilution governs the mixture proportion for these speeds and is controlled by the idling adjustment needle.

#### ***Accelerating Well.***

Below and concentric with the main discharge nozzle is an accelerating well chamber, with a small air vent at



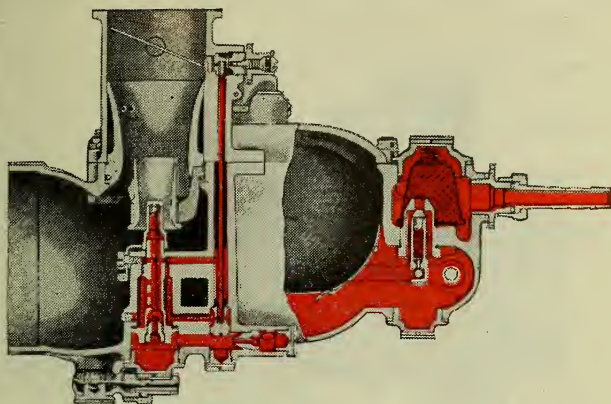


Plate 15

Stromberg carburetor with throttle in idling position. Model I and E

the top which leads to the main gasoline channel at its bottom. This well chamber acts as a reserve supply of fuel for acceleration, its contents being delivered as the throttle is opened, and replenished from the main jet flow when the throttle is closed. Thus the mixture becomes, temporarily, slightly richer than normal as the throttle is opened, and temporarily thinner than normal as the throttle is closed; an action found necessary for flexible operation with low grade American gasoline.

## ***Float Mechanism.***

The float mechanism is positive in its action and hung in such a way that it will operate at angles between 45° climb and a straight dive; also under a considerable sidewise inclination. The float needle valve is pointed upward so that any dirt will wash down, away from the valve seat, and is held to its pin by a self-contained spring plunger to obviate wear under the vibration of the engine.

The needle valve point is of an especially hard non-corroding alloy and ground true—while the needle valve seat is of softer material so as to follow the shape of the harder needle point.

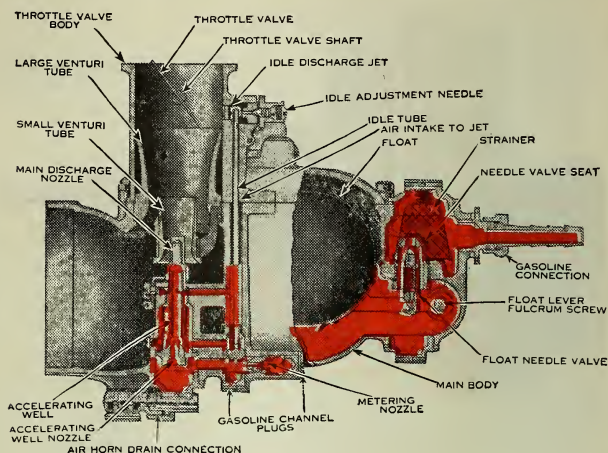


Plate 16

Stromberg carburetor with throttle partly open. Model I and E

The operation of the float mechanism during different aerial maneuvers depends not only upon gravity but also upon the motion of the airplane. Assuming that the carburetor is mounted with the air entrance to the front of the plane, the carburetor float will function normally whenever the pilot is resting on his seat, leaning hard against the back or sides of his seat, or tending to slide forward.

When diving at a steep angle, if the throttle is closed all the way to the idling position, some fuel will drain out of the main discharge jets in the air entrance of the carburetor. This will drain away through the air-horn drain tube when the plane straightens out, but this accumulation will be avoided altogether if the throttle is kept a little further open so that there is enough draught in the venturi to carry this fuel up from the jet into the engine.

If the position or motion of the plane is such that the pilot tends to fall away from his seat, the same forces will cause the float to go *up*; this closes the float needle

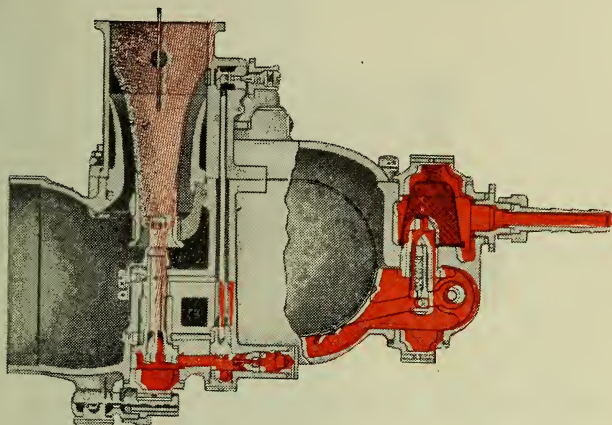


Plate 17

Stromberg carburetor with throttle in wide open position. Model I and E

valve. At the same time the fuel will go to the top of the float chamber and cease to flow from the discharge jets. It will not leak from the vents in the top of the float chamber, however, if the throttle is kept a little open.

## **STROMBERG CARBURETOR ADJUSTMENTS**

### ***Pilot's Control of Altitude Adjustment Stromberg Carburetor.***

The mixture proportion delivered by this carburetor is subject to little variation in passing from sea level to approximately 915 meters or 3000 feet altitude. In the "Rich" position the mixture is slightly richer than necessary. This can be corrected for more than 6100 meters or 20,000 feet altitude, by moving the altitude-control lever forward to the "Lean" position. The control should always be placed in the leanest position that will give maximum r. p. m. of the engine, thus giving maximum torque.

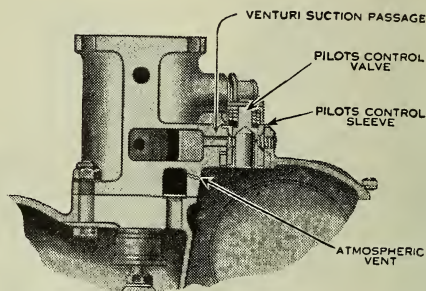


Plate 18

Showing the altitude or Pilot's control. Stromberg carburetor. Model I and E

The metering nozzles above referred to are graded and numbered according to the common industrial Twist Drill and Steel Wire Gauges.

This control of the mixture is obtained by the rotation of the sleeve in the pilot's control, which opens to a greater or lesser extent, or closes off entirely, the communication between the float chamber space and the holes drilled in the upper part of the large venturi tube. The float chamber has also a smaller atmospheric vent hole communicating through a gauze strainer with the interior of the air entrance of the carburetor. When the connection to the venturi tubes is full open, a considerable suction is communicated to the float chamber and this suction opposes the suction at the main discharge nozzle, thereby reducing the gasoline flow through the metering nozzle.

When the passage between the venturi and float chamber is shut off entirely, atmospheric pressure exists in the float chamber and the maximum gasoline delivery is obtained.

With the venturi suction channel partially opened the gasoline flow is correspondingly reduced.







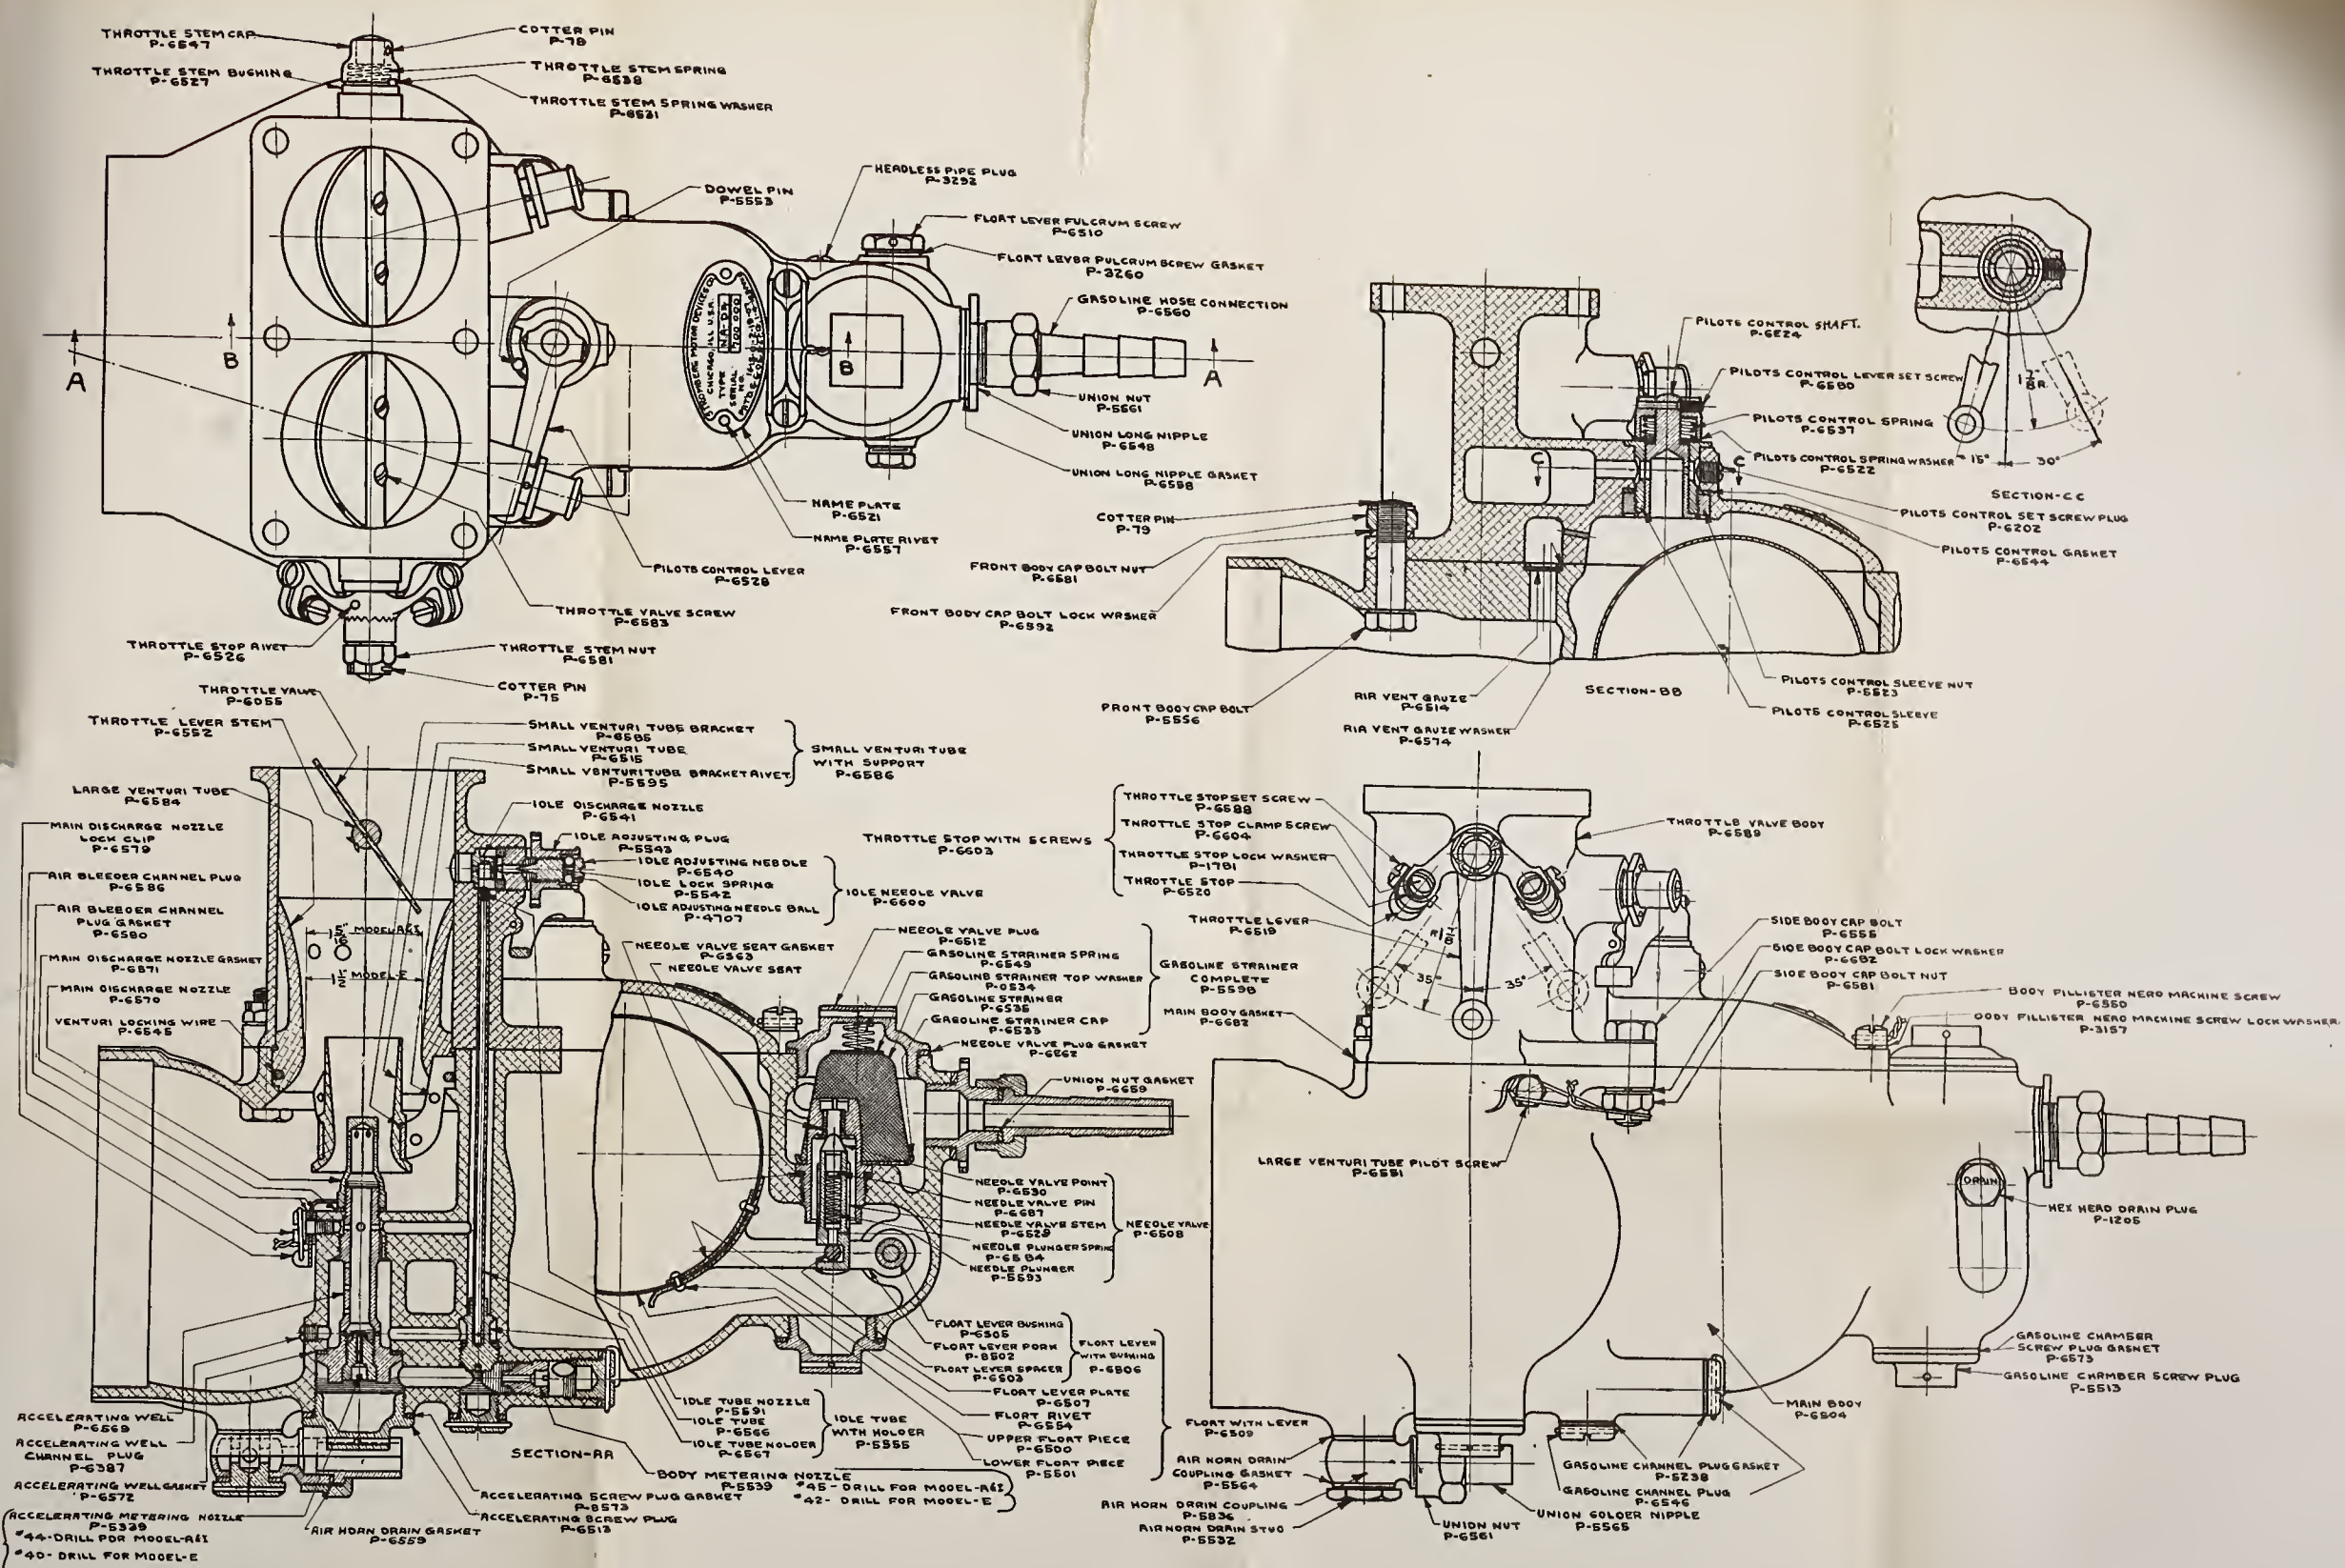


Plate 19

(Stromberg Carburetor—cross-section view. Models I and E)





Since a strong suction exists in the float chamber when the control is in the lean position, care should be taken that the joint between the upper and lower halves of the carburetor is *kept tight*, and that the gasoline channel plugs in the lower part of the carburetor are drawn tight on their gaskets. If these leak sufficiently to allow gasoline to drip, they will also permit air to be drawn in with the flowing gasoline, which will interfere somewhat with the mixture regulation.

## ***Idle Adjustment.***

The idle adjustment needle affects the low speed only and has practically no effect on the high-speed action. Screwing the needle inward, right hand, gives less air dilution and more gasoline to the mixture "Rich;" left hand, less gasoline, "Lean." An average adjustment is obtained when the idle adjustment needle is unscrewed about three-quarters of a complete turn from a seating position; an exact adjustment is made at the factory when the engine is tested and need be changed only under extreme weather conditions.

## **DISASSEMBLY AND REPAIR OF STROMBERG CARBURETOR**

### ***The Strainer.***

Most carburetor trouble arises from the presence of small particles of dirt. The best preventative is to keep the strainer and strainer chamber clean. After ten hours running, and before every important flight the strainer should be cleaned and the strainer chamber drained by taking out the plug so marked, Plate 19.

### ***Carburetor Leaking or "Flooding."***

If leaking or "flooding" occurs, a careful inspection should first be made to see whether the leakage is due to some plug below the normal gasoline level of the carburetor being loose on its gasket; or whether the float valve is insecurely seated, allowing the level to rise so that the gasoline overflows from the main dis-

charge jets. In the latter case the strainer chamber should be inspected and drained to remove any dirt, and carburetor flushed to wash out any particles on the needle valve seat. It may also help, to remove the plug beneath the float valve and, with a screw-driver, rotate the needle valve within the limits permitted, while pressing it up lightly against the seat. If flooding persists it will be necessary to remove the carburetor from the engine and substitute a new needle valve or seat, or both, as required. See that the float is not punctured and does not contain any gasoline. The level as determined by the float action, should be approximately 30 m/m or  $1\frac{3}{16}$ " below the junction of the halves of the carburetor.

### ***To Remove Float Needle Valve.***

Take out float lever fulcrum screw and move float forward sufficiently to allow needle to drop down. To remove the float needle seat it is first necessary to remove the float. Then loosen the set screw which goes in from the side of the carburetor, and unscrew needle seat with a large screw-driver. NOTE that in replacing fulcrum screw a 1 m/m or  $\frac{1}{32}$ " "thick" hard gasket must be used under the head, as otherwise the pin will screw in far enough to clamp the float pivot bearing.

When carburetor halves are separated care should be taken that the joint surfaces are not nicked or marred, and when assembled a dry paper or composition gasket of even thickness should be used.

### ***To Remove Venturi Tubes.***

To change venturis, take out the three bolts and two cap screws holding the halves of the body together, loosen the set screws, holding the venturis about one turn, but do not remove them. Separate the halves of the body carefully so as not to bend the two idling tubes, remove set screws and take out venturi.

In replacing the venturi, be sure that the hole for the venturi pivot screw registers correctly, and that

screw point enters the gap of the locking ring. While the carburetor is disassembled be careful that the surface of the joint is not marred, and when assembled be sure that gasket joint between halves is tight and secure.

In changing venturis the throttles should not be disturbed as it might be difficult to replace them properly. The venturis are numbered according to the smallest inside diameter in inches.

## ***Metering Nozzles.***

The metering nozzles are readily accessible from the rear of the engine, after the gasoline channel plug has been removed. It is advisable to use a screw-driver which is a close fit in the slot, to avoid marring the nozzle which might affect the fuel discharge. Be sure that the gasoline channel plugs are replaced tight on the gaskets so that there is no leak.

## ***Throttle and Altitude Adjustment Controls.***

On Plate 19 it will be found that the throttle lever moves through  $70^\circ$  from closed to wide-open position. The lever has a  $1\frac{7}{8}$ " radius from the center of the throttle lever stem to the center of the hole in the throttle lever. The altitude adjustment moves through  $45^\circ$  from closed to wide-open position and the lever has a  $1\frac{7}{8}$ " radius from center to center.

The carburetor is so mounted that all of the control connections are made from the rear end of the engine. The installation is such that motion longitudinal to the crankshaft of the engine is required to operate them.

Each control should be provided with a ratchet working over a toothed sector to hold it in any desired position. All controls should work freely and, at the same time, permit a minimum of lost motion.





## **PART V**

### **IGNITION SYSTEM**

#### ***General Description.***

Ignition is furnished by two eight-cylinder magnetos firing two spark plugs per cylinder.

These are mounted at the rear of the crankcase and driven at crankshaft speed. The right-hand magneto runs anti-clockwise and the left-hand runs clockwise.

#### **THE DIXIE TYPE 800 MAGNETO**

The Dixie magneto is of the inductor type, the rotating member consisting of two pieces of magnetic material separated by a non-magnetic centerpiece. The coil is mounted stationary in the arch of the magnets. This rotating member constitutes true rotating poles for the magneto and rotates in a field structure, composed of three laminated field pieces.

The bearings for the rotating poles are mounted in steel housings, which lie against the poles of the magnets.

When the magnet poles rotate, the magnetic lines of force from each magnet pole are carried directly to the field pieces. There are no losses by flux reversal in the rotating poles, neither are there any revolving windings on the rotor.

With the dust and water protecting casing removed the winding can be seen with its core resting on the field pole pieces and the primary lead attached to its side.

An important feature of the high tension winding is that the heads are of insulating material, and there is not the tendency for the high tension current to jump to the side as in the ordinary armature type magneto.

The high tension current is carried to the distributor by means of a brass rod which is molded in the distributor rotor, at one end of which is a spring brush bearing directly on a plate in the end of the coil.

The condensor is placed directly in front of the

breaker and is instantly removable by taking off the breaker cover and removing the two nuts which hold it in place.

The high tension current is generated in the winding housed in the arch of the magnets, without the use of a special induction coil. Four sparks are produced during each revolution of the rotor.

### ***Care of the Dixie Type 800 Magneto.***

The bearings of the magneto are provided with oil cups which should be oiled with a few drops of oil every twenty-five hours of engine running. The breaker lever should be lubricated every twenty-five hours of engine running with a few drops of oil applied with a toothpick. Three-In-One oil should be used for all the above lubricating.

The proper distance between the platinum points when separated should not exceed .5 m/m or .020" or 1/50 of an inch. A gauge of the proper thickness is attached to the wrench furnished with the magneto spare parts equipment.

The platinum contacts should be kept clean and properly adjusted. Should the contacts become pitted, a fine file should be used to smooth them in order to permit them to come into perfect contact. Do not file any more than is absolutely necessary.

The distributor block should be removed occasionally and inspected for carbon dust. The inside of the distributor block should be cleaned every five hours of engine running or before each important flight, with a cloth moistened with Three-In-One oil (never use gasoline), and wiped dry with a clean cloth. When replacing the block, care must be exercised in pushing the carbon brush into the socket.

The magneto should not be tested unless it is completely assembled, that is, with the breaker-box, distributor cover, and wires in position.

Whenever the wires leading from the magneto to the spark plugs are taken off, observe that they are cor-

rectly replaced in relation to the firing order of the engine, which is 1L-4R-2L-3R-4L-1R-3L-2R.

Do not pull out the carbon brush in the distributor because you think there is not enough tension on the small spring.

Do not forget that the magneto will always work best with the spark plug gap set at .5 m/m or .020". These should be checked before each important flight or about every 10 hours of running.

### ***Timing or Setting the Magnetos, Models I and E.***

In order to obtain the utmost efficiency from the engine, the magneto must be correctly timed to it in the following manner: The timing of the magnetos is accomplished with the aid of the timing disc which is first located by the top center of cylinder 1-L and the right-hand magneto is then put in place to fire cylinder 1-L. Next the left-hand magneto is set to fire cylinder 1-L also and the two magnetos then synchronized so that they fire at the same time.

To set the magnetos, place the timing disc in position and locate the top center on the disc as noted under "Finding top center and setting the timing disc." Part IX. After the disc is set, turn the engine over until No. 1-L cylinder is on the firing stroke and line "M.A. 1 and 4 Left" on the disc is at zero 64 m/m or 20° 20' before the top center (for Model "E" 25°).

The firing stroke may be ascertained by either one of the following methods:

1. Observing whether the exhaust valve is open on top center. If the valve is not open, the engine is on the firing stroke. If the valve covers are not removed put a finger on the valve through the exhaust port as the engine is turned over which will enable the position of the valve to be determined.

11. By placing a finger in the spark plug hole, proceed to turn the engine in the direction it rotates until you begin to feel the pressure coming against this finger.



Then watch the timing disc, still turning the engine in the direction of rotation, until the line "M.A. 1 and 4 Left" on the disc coincides with zero on the scale. See Plate 28 and 29.


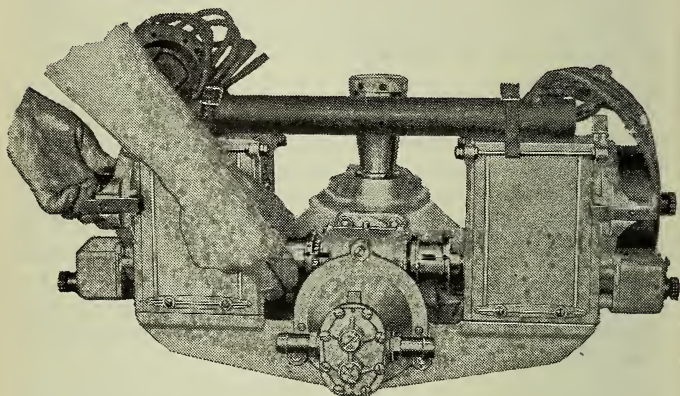


Plate 21

Timing the magneto to the engine. Model I and E

Remove the distributor and breaker covers of the magnetos, and put the right-hand magneto in place with the distributor brush on No. 1-L segment with the breaker points just commencing to open, or as nearly as is possible with the tooth engagement. See Plate 22. Fasten the magneto in place with two of the four cap screws and turn the engine back one-eighth of a turn. Next turn the engine slowly in the direction of rotation until a cigarette paper placed between the breaker points just draws, and note the position of the line "M.A. 1 and 4 Left" on the disc with respect to zero. If the paper does not draw with the line directly under zero adjust the magneto coupling until the paper will just draw.

# AERONAUTICAL ENGINES

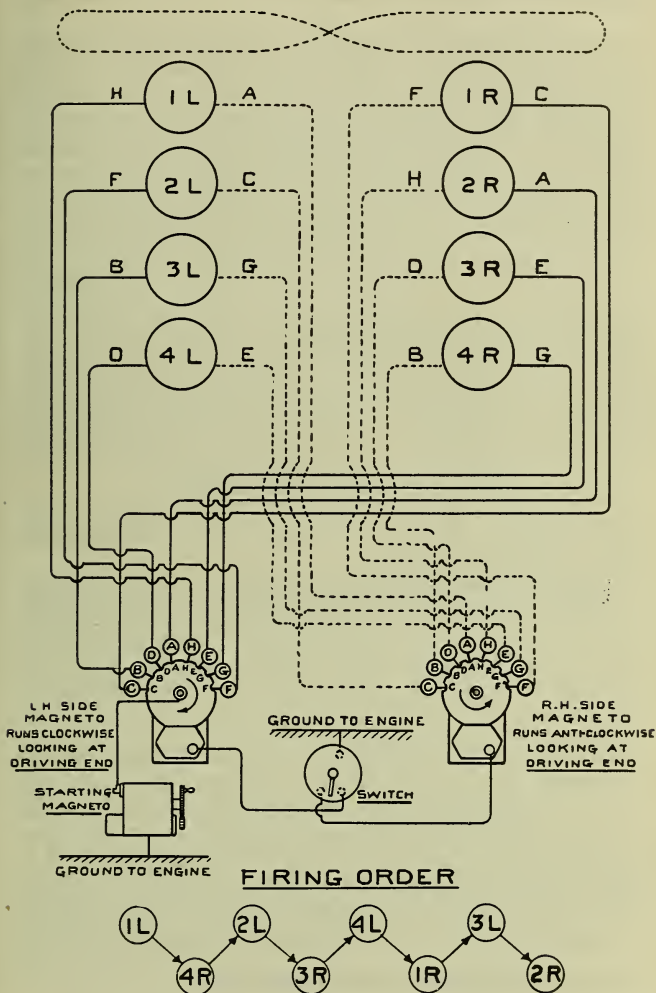

**WIRING DIAGRAM OF  
DIXIE #800 MAGNETOS  
WITH CROSS DRIVE MAGNETO MOUNTING.**

Plate 22  
Model I and E



This adjustment is made by removing the cotter pin that goes through the coupling and sliding the coupling toward the magneto, rotating the magneto armature by means of the distributor gear whatever amount is necessary. Then let the coupling come back in place. Always turn the engine back one-eighth of a turn and then in the direction of rotation to remove all the backlash in the magneto driving gears, illustrated in Plate 21.

After setting the right-hand magneto, put on the left-hand one and with line "M.A. 1 and 4 Left" still at zero, adjust in the same manner as for the right-hand magneto. When both magnetos are set, place paper between the breaker points of both and turn the engine slowly in the direction of rotation until both papers can be drawn. If they do not draw simultaneously re-adjust the left-hand magneto coupling until its paper draws at the same time as the right-hand one.

Fasten both magnetos down securely with four cap screws apiece. Replace the cotter pins through the center of the couplings.

Check the breaker point openings by the aid of a gage No. 11141 and set if necessary so that the points when wide open are 5 m/m or .020" apart. Replace the distributor and breaker covers, being careful to have the distributor brush in position and the distributor path clean.

*When a change of magnetos is required*, those for replacement may be timed from those already on the engine. Turn the engine over until No. 1-L is ready to fire, then remove the left-hand magneto and put new magneto in place with the distributor brush on No. 1-L segment and adjust the coupling until the paper draws at the same time as the right-hand one, then remove the right-hand magneto and repeat the above operation.

### ***Wiring of Magnetos and Cylinders.***

It will be noted that all the spark plugs located on the intake or inside side of the cylinders are wired to the R.H. magneto while the plugs on the exhaust or outside are wired to the L.H. magneto. If there is any misfiring,

this arrangement makes it very easy to find which side has the bad spark plugs by cutting one magneto at a time out of operation. If one or the other magnetos are cut out while the engine is running, the number of revolutions of the engine lost should be the same (about 20 r. p. m.).

The firing order of the engine is 1L-4R-2L-3R-4L-1R-3L-2R.

## ***Caution.***

Do not attempt to crank an engine immediately after it has been stopped. An over-heated spark plug or red-hot piece of carbon might cause pre-ignition and a disastrous back-kick. Always allow it to cool a few minutes.

## **STARTING MAGNETO**

### ***Description.***

The starting magneto is a small magneto of the same construction as the larger magnetos and is used only when starting the engine.

### ***Location.***

This magneto is generally mounted in the cockpit of the plane, in easy access of the pilot.

### ***How the Starting Magneto is Connected.***

One side of the starting magneto is connected to the brush in the center of the distributor on one of the running magnetos. The other side is grounded to the engine to complete the circuit. Plate 22.

### ***How the Starting Magneto Operates.***

The engine is primed through the pet cocks on the intake manifolds and turned over compression on about three cylinders, by the propeller. The man turning the engine over stands aside and the pilot puts the



Dixie starting magneto. Side-view section. Model A, I and E

ignition switch on and turns the starting magneto by hand. This throws a shower of sparks into one of the running magnetos and is transmitted through the carbon brush to the spark plug of the particular cylinder the engine happens to be stopped upon. This shower of sparks will start the engine, providing the mixture is correct in the cylinders and all other things properly set.

## ***Caution.***

A starting magneto will always give a spark when turned regardless of the switch position or running magneto position. Never turn the starting magneto until the man cranking the engine stands away from the propeller.

## **PART VI**

### **LUBRICATION SYSTEM**

We recommend a good mineral oil with the following characteristics:

Flash Point (Open Cup)	465° F. Minimum
Burning Point	520° F.
Viscosity (Saybolt)	107—112 at 210° F.
(Tagliabue)	110—115 at 212° F.
Specific Gravity	.8860
Cold Test	4.5 C or 40° F. Maximum
Carbon Residue	
Emulsion Test	

#### ***Oil Temperature.***

The temperature of the oil should be held, even in the hottest weather, below 93°C. or 200°F. under all conditions, and is best not to exceed 71°C or 160°F.


#### ***Description of Oiling System.***

The oiling of the engine itself is provided for by a positive pressure system. A sliding vane eccentric type of pump being mounted vertically directly below the rear end of the crankshaft in the lower half of the crankcase. It is driven 1.2 times crankshaft speed, by the same bevel gear on the crankshaft that drives the vertical shafts.

To assist circulating the oil through the oil radiator and reserve oil tank, there is an additional oil pump of the gear type. It is located on the magneto support bracket at the rear of the engine and driven from an extension of the crankshaft.

#### ***Lubrication Circulation in the Engine.***

A vane pump forces oil through a filter provided with a removable screen, in the lower half of the crankcase, and then through steel tubes cast in the lower

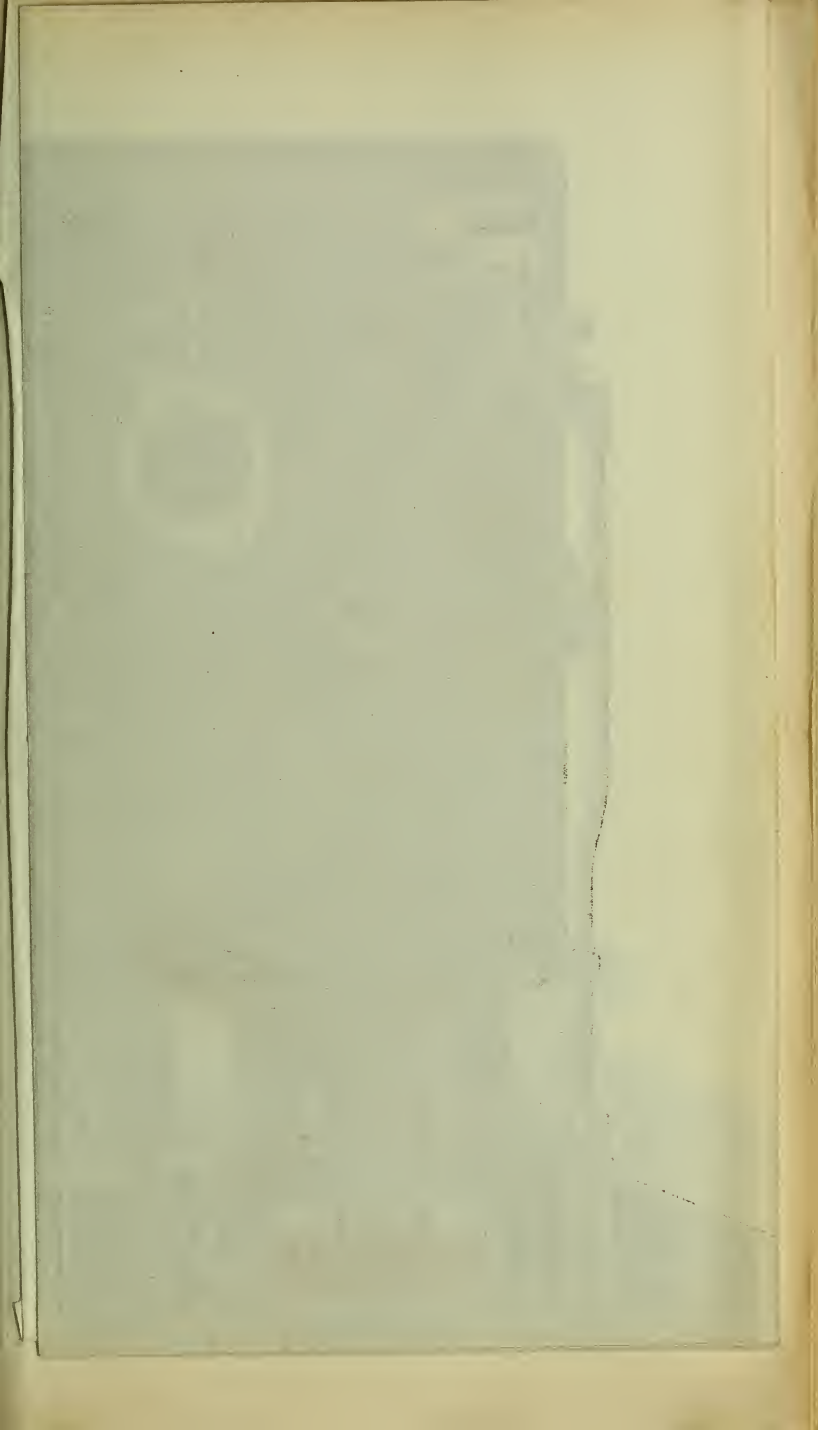





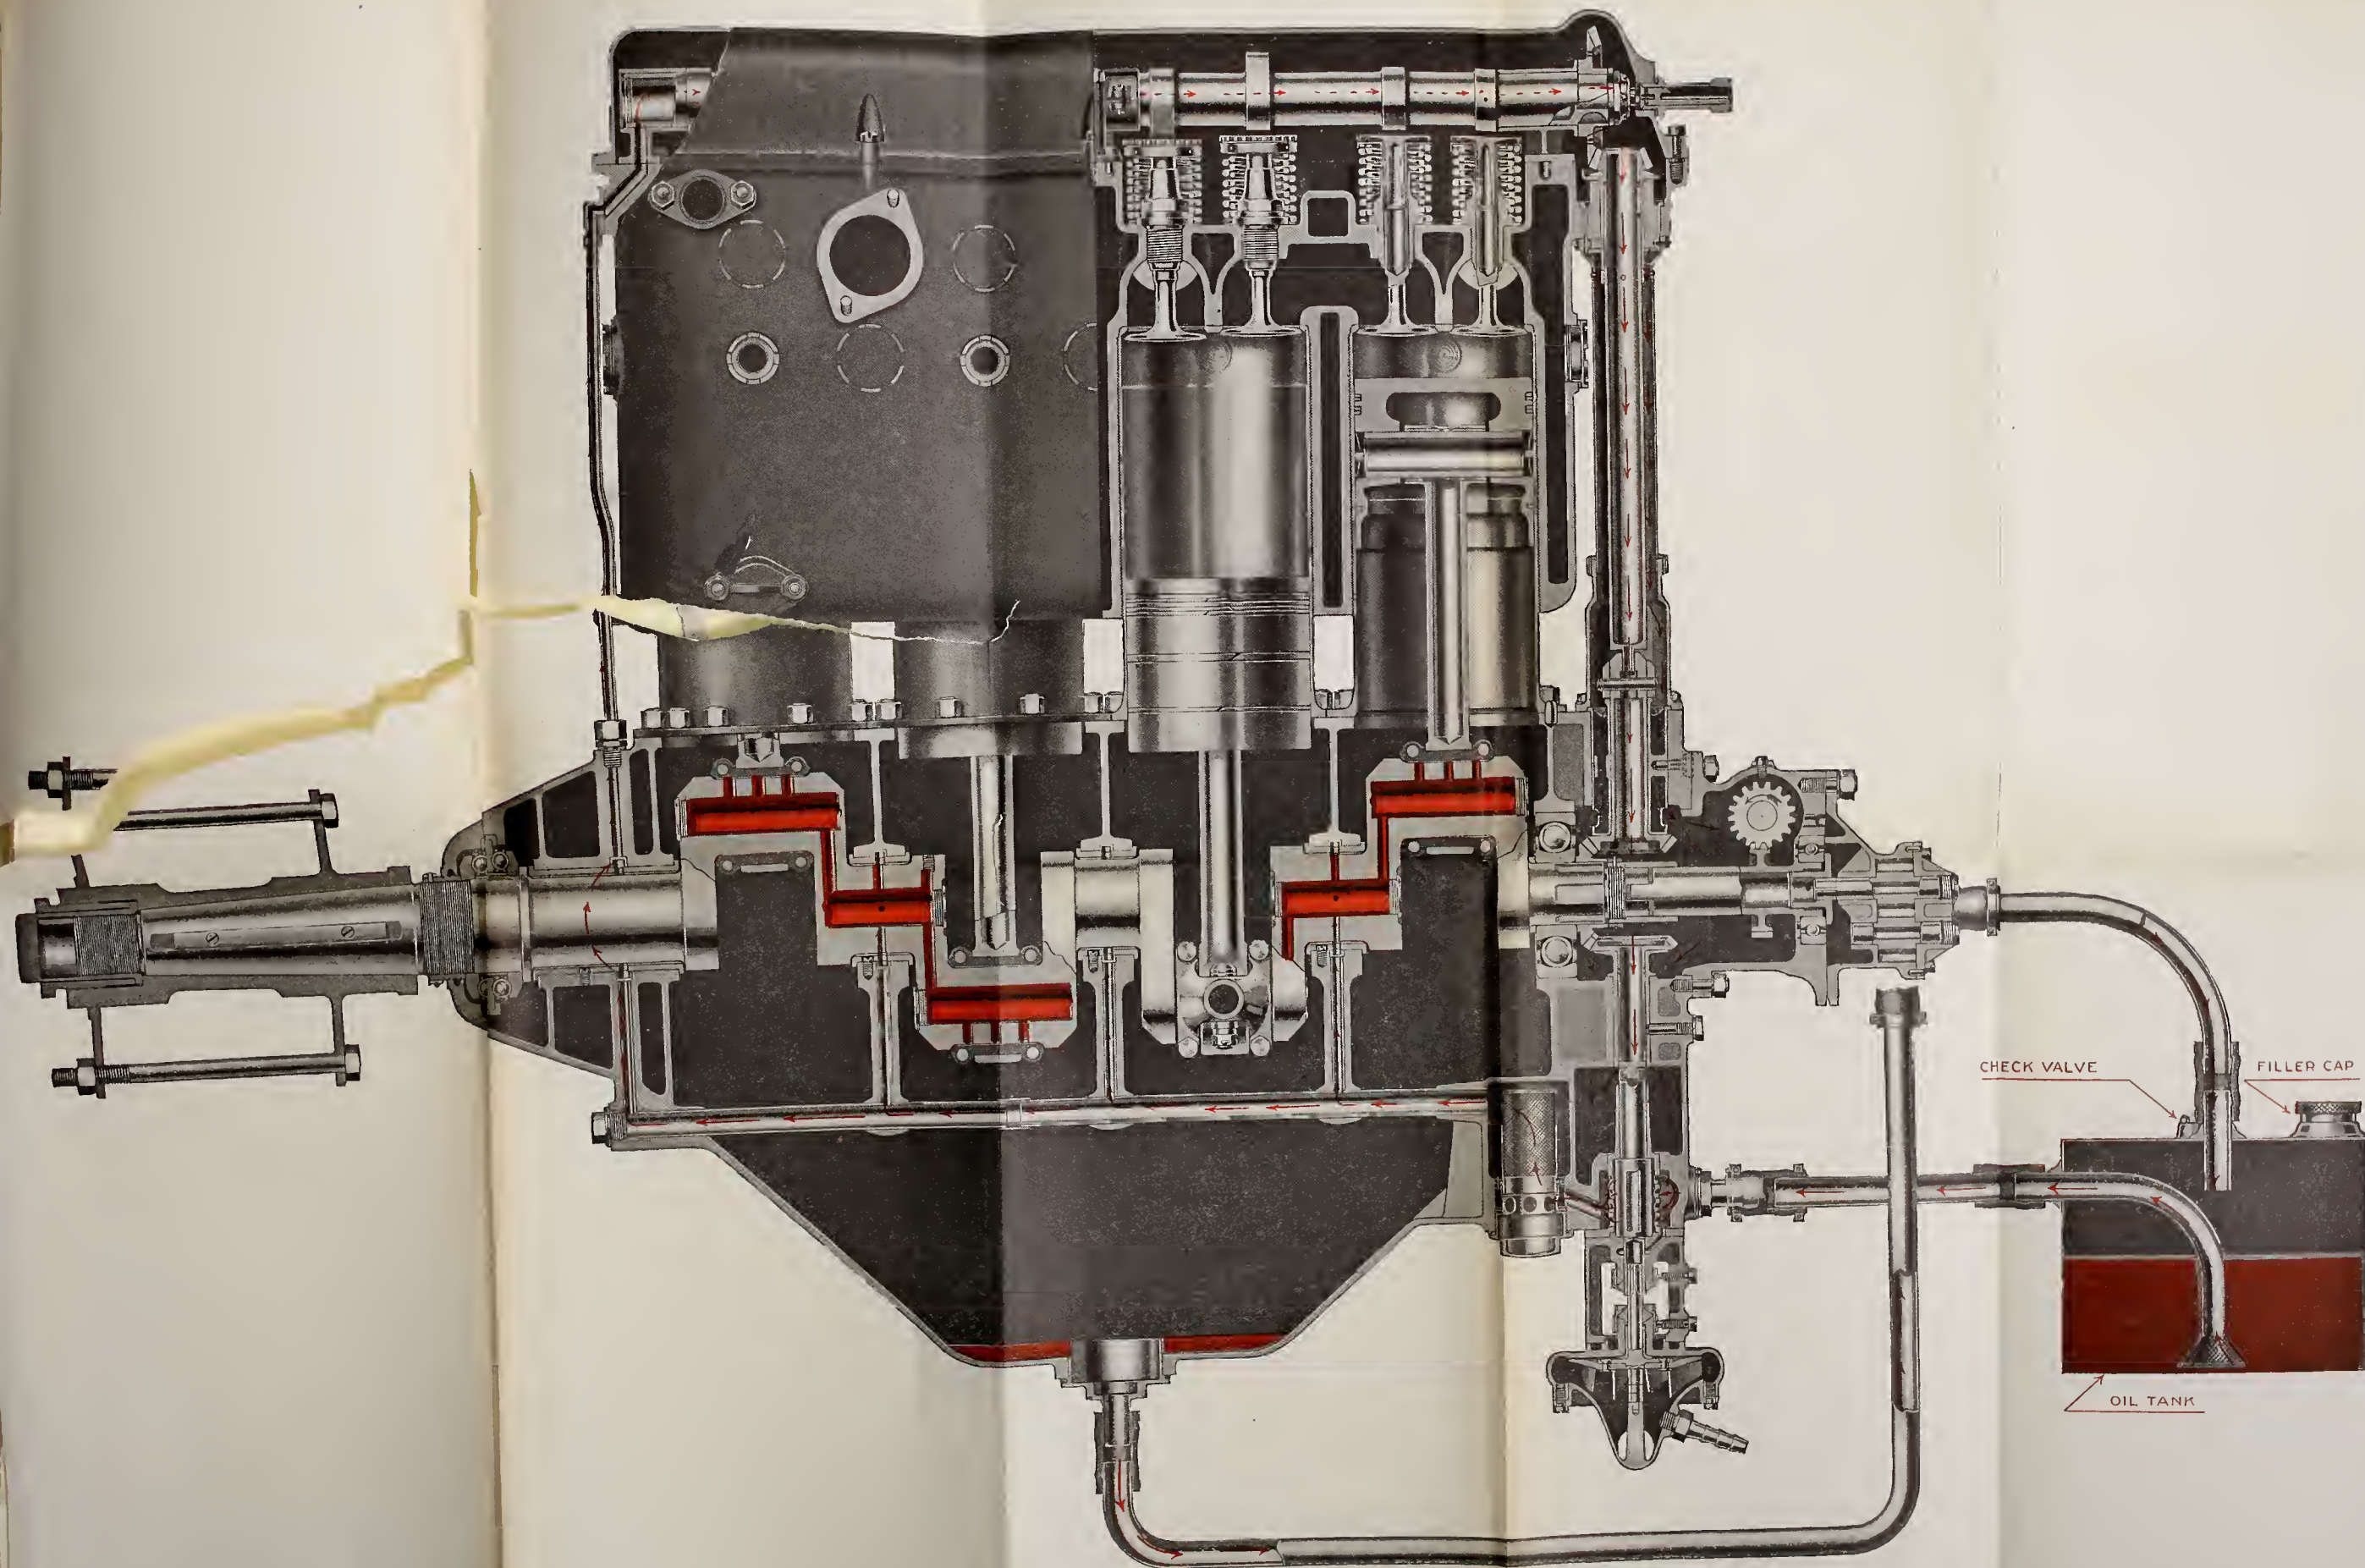


Plate 24  
Oil circulation system—Hispano Suiza Models I and E  
Aeronautical Engine





crankcase to three of the main bearings. From these bearings the oil enters the hollow crankshaft and is distributed to the four crankpins: Proper oil holes being provided in the inner connecting rods to distribute the oil to the outer connecting rods. It is then thrown off in the form of a spray and together with the oil thrown from the main bearings by the crankshaft, provides lubrication for the cylinders, pistons and piston pins.

The fourth or front main bearing has a by-pass and is also provided with an oil lead from the system, which takes care of the lubrication of this bearing. Through a by-pass around the outside of the bearing it leads to tubes running up the front end of each cylinder block. Lubrication is provided for the camshafts, camshaft bearings, valve tappets, valve stems, vertical shafts, vertical shaft bearings and driving gears. As the camshafts are hollow, the oil is forced into them at the front end through the camshaft bearings.

Lubrication of the cams, valve tappets and valve stems is provided for by small holes in each cam, and of the remaining camshaft bearings by other small holes in the camshaft.

The excess oil escapes through the other end of the camshafts in the form of a stream, and together with the oil remaining in the cylinder covers, oils the vertical shaft bearings and the driving gears before it is returned to the crankcase through the vertical shaft casing at the rear of the engine. See Oil Circulating System, Plate 24.

### ***How to Connect the Lubrication System.***

The lubrication system can be connected as shown in Plate 24. This system is known as the dry-sump system. The only oil in the lower half of the crankcase when the engine is running is that held in suspension. There is no oil in the lower half of the crankcase when the engine is not running.

If the oiling system is connected as in Plate 24, the

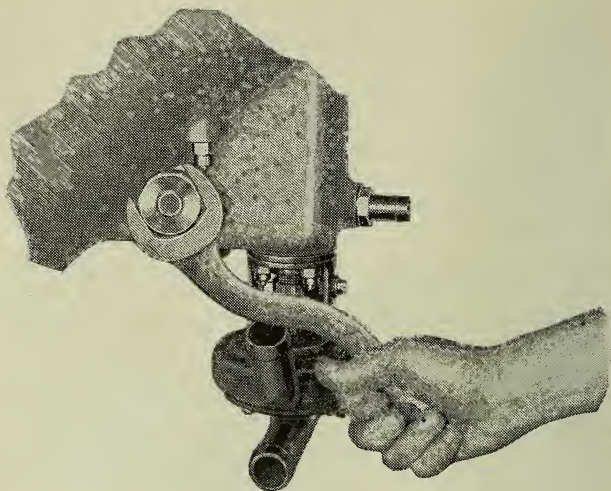


Plate 25

Removing oil pressure relief valve body. Model I and E

following is the manner in which the engine is lubricated and the oil circulated:

Sufficient oil is kept in the system by keeping the oil tank filled. The oil tank can be located in the pilot's or observer's cockpit, although it does not necessarily have to be so located. If sufficient room is available it can be located somewhere near the engine.

The filling of the oil tank is done through a filler cap located on its top. The oil is taken from the bottom center of the oil tank by the sliding vane eccentric oil pump located in the rear of the lower half of the crankcase, a strainer being placed over the exposed end of the pipe to keep any foreign matter from going into the oil pump. See Plate 24. The circulation of the oil through the engine has just been described under "Lubrication Circulation in the Engine."

### ***Oil Radiator, if One is Used.***

The oil radiator should be made of thin section not

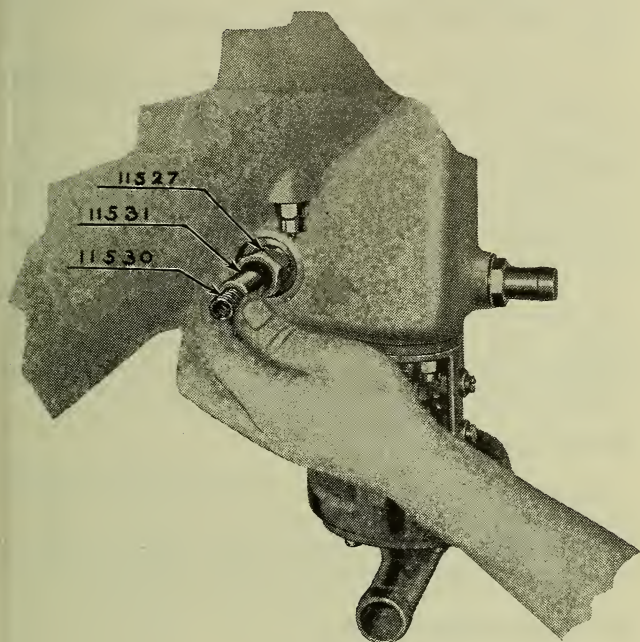


Plate 26

Removing oil pressure relief valve plunger. Model I and E

over one inch in thickness, with very thin ribbed sections.

At the connections where the oil enters and leaves the oil radiator, there should be raised places in the tank in order to give the oil a chance to spread over the complete radiator and again get back into the exit pipe without getting excessive pressure in the tank.

Aside from the thickness, the other dimensions of the oil radiator can be of any size, sufficient for cooling the oil, and suitable to the plane manufacturer.



Always remember the temperature of the oil, even in the hottest weather, should never exceed 93° C or 200° F and is still better if it does not exceed 71° C or 160° F.

The oil radiator should be so placed on a plane that a draught of air strikes it thus cooling the oil.

### ***Gear Oil Pump.***

The oil is drawn from the oil radiator or bottom of the crankcase by the gear oil pump located at the rear of the engine.

Passing through the gear oil pump the oil is delivered into the oil tank. The oil is then recirculated as above stated. The oil tank must have an opening to the air through a small vent in the top of the tank, having a proper check valve.

### ***Oil Consumption.***

Before each flight, be sure of the level of the oil in the oil tank.

Always allow three (3) litres (about three (3) quarts) of oil for every hour the engine is run wide open.

### ***Oil Pressure Relief Valve.***

Each engine is equipped with an oil pressure relief valve which is located on the left-hand side of the lower half of the crankcase at the rear of the engine. This is made non-adjustable, as will be seen by Plate 51 which is an enlarged view of this valve. The spring length is made so that the plunger 11531 will release the oil at from 50 to 75 lbs. per sq. inch pressure with an oil temperature of 150° F. and crankshaft speed of 1450 r. p. m.

It is sometimes found that some foreign substance may get under the seat of the oil valve and the oil pressure will drop. The valve can be removed and cleaned by removing the oil pressure body 11529. See Plates 25 and 26.

## PART VII

### WATER CIRCULATING SYSTEM

#### *Kind of Water Pump.*

Water circulation is provided for by a centrifugal pump with two discharge outlets mounted directly below the oil pump and driven from its shaft at 1.20 engine speed. A rubber hose runs from each outlet to each of the cylinder blocks, the water entering each block at one end and escaping at the opposite. See Plate 27.

#### *Capacity of Water Pump.*

The water pump handles 100 litres (26.50 gallons) per minute at 1450 r. p. m. of the engine.

#### *Water Temperatures.*

The desirable temperature of the water outlet is 38°C—100°F and the inlet water 10°C—20°F. lower to obtain the best engine efficiency. It may sometimes happen that for short durations or in a very hot climate that the outlet temperature may rise to 88°C or 190°F.

#### *Capacity of Cylinder Water Jackets.*

The capacity of the cylinder water jackets is (18½ Kilograms) 41 lbs. or about 4.9 gallons (18½ litres).

#### *Water Radiator.*

The capacity of the radiator varies with the different radiators, but the front area should be sufficient to maintain the above water temperatures. The radiator should be fitted with adjustable shutters or an equivalent method of maintaining these temperatures in cold weather or at high altitudes, especially while taking long glides or nose dives.

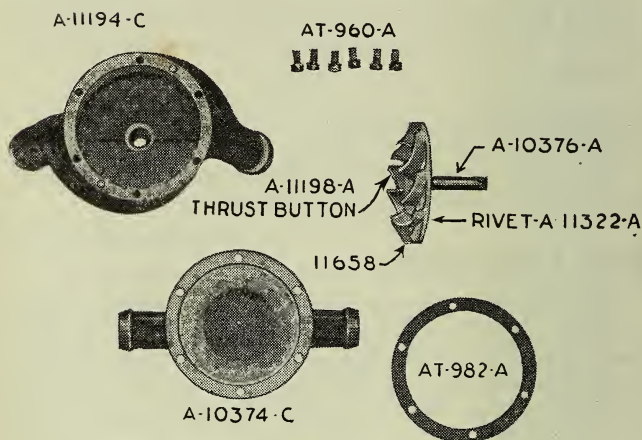


Plate 27

Water pump disassembled. Model A, I and E

## PART VIII

### GASOLINE SYSTEM

#### *Kind of Gasoline to Use.*

Gasoline of about 58° Baumé is recommended.

#### *Location of Gasoline Tank for Gravity Feed.*

The Gasoline tank may be placed in any convenient location, but if gravity feed is used, should be so arranged to give 1 to 2 pounds head at the carburetor for any position of the machine in flight.

#### *Caution—Filling the Gasoline Tank.*

In filling the tank always pour the gasoline through a chamois skin to free it from water and other impurities.

#### *Gasoline Pressure System.*

An air pressure pump is provided on the left cylinder cover, which is operated by one of the cams. If this pump is used to keep pressure on the gasoline, a relief valve should be placed in the line in order to maintain a pressure of not over 2 lbs. at the carburetor. The relief valve should be designed so that it can be adjusted during flight to correct for difference in altitude.

When a pressure system is used, always make sure there is pressure in the tank before trying to start the engine. This initial pressure is obtained by a hand pump, there being a gauge on the dash to register the amount of pressure.

#### *Gasoline Vacuum System.*

A vacuum system may be used to draw the gasoline from the main tank to an auxiliary tank. The gasoline feeding from the auxiliary tank to the carburetor by gravity. For the location of the gravity feed tank follow the instruction above under that topic.

The vacuum is generally derived by placing a compound venturi in the draught of the propeller and taking a lead from its throat to the main gasoline tank. Always of course placing a check valve in the line and having a branch line going to the auxiliary gasoline tank.

### ***Installation of Gasoline Line.***

The gasoline line from the tank to the carburetor may be of copper tubing, but should have a rubber hose connection at the carburetor of at least 12 inches in length. This is a necessary precaution to prevent the vibration and weaving of the plane from breaking the copper tubing.

### ***Size of Gasoline Line.***

The gasoline line should be of sufficient size to allow 113 litres or 30 gallons of gasoline under 2 lbs. pressure of 4 foot head, to flow through it in one hour.

## PART IX

### VALVE TIMING

	Length of arc taken in diameters of		Crankshaft Timing in Degrees
	360 m/m (14.17")	200 m/m (7.87"*)	
Intake opens after top center	32 m/m (1.25")	18 m/m (.708")	10°
Intake closes after bottom center	158 m/m (6.22")	88 m/m (3.46")	50°
Exhaust opens before bottom center	144 m/m (5.66")	80 m/m (3.14")	45°
Exhaust closes after top center	32 m/m (1.25")	18 m/m (.708")	10°
Spark advance before top center	64 m/m (2.51")	36 m/m (1.41")	20°-20"

\*200 m/m (7.87") is the diameter of the propeller hub flange.

#### *Valve Timing.*

The timing of a Hispano-Suiza engine may be subdivided into four separate and distinct operations. The first step is to attach the timing disc and set it to correspond with the top center of Cylinder No. 1 Left. The second step is to time or set the cam shafts themselves. The third to set the valve tappet clearance. The fourth to check the timing of the valves. The left-hand camshaft is set first, by the opening of the inlet valve in Cylinder No. 1, the engine then turned a quarter turn in the direction of rotation and the right-hand camshaft set by the opening of the inlet in Cylinder No. 4.

If no timing disc is available for the first operation, the timing in Plate 29 can be duplicated on a piece of sheet metal or card-board 360 m/m in diameter from the above table. Remove the propeller from the hub and place this disc in position against the flange and replace the propeller. A scale should be made of sheet metal and fastened under the vent plugs as shown. Plate 28. This table also gives the timing in m/m for the propeller hub diameter and in degrees for whatever diameter disc that might be used on the crankshaft.

#### *I. Preparations for Timing the Engine.*

Place the timing disc and hub on the propeller hub taper, lock it in place with hub nut and attach the indicating scale as shown in Plate 28.



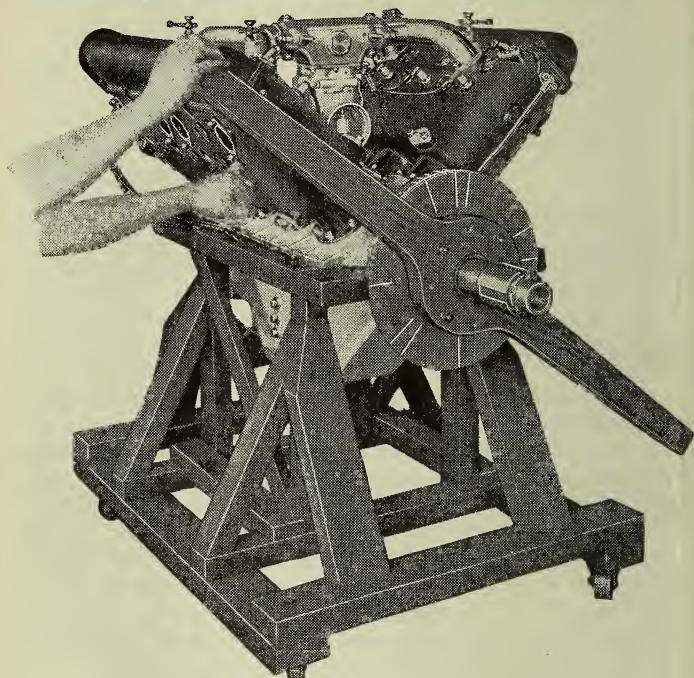


Plate 28  
Finding top center. Model A, I and E

### ***Finding Top Center and Setting the Timing Disc.***

Remove all the outside spark plugs, which allows the engine to be readily turned over by hand, and with the timing disc in position turn the engine slowly in the direction of rotation until the piston in Cylinder No.1-L is on top center. This may be ascertained by placing the little finger through the spark plug hole and observing when the piston just ceases to move upward. Plate 28. With the piston on top center, loosen the locking nuts holding the disc, rotate the disc on the propeller hub (the holes holding it to the propeller hub being slotted), until the line marked "T. C. 1 and 4 left" is directly under zero on the scale, then lock the disc in position. See Plates 28 and 29.

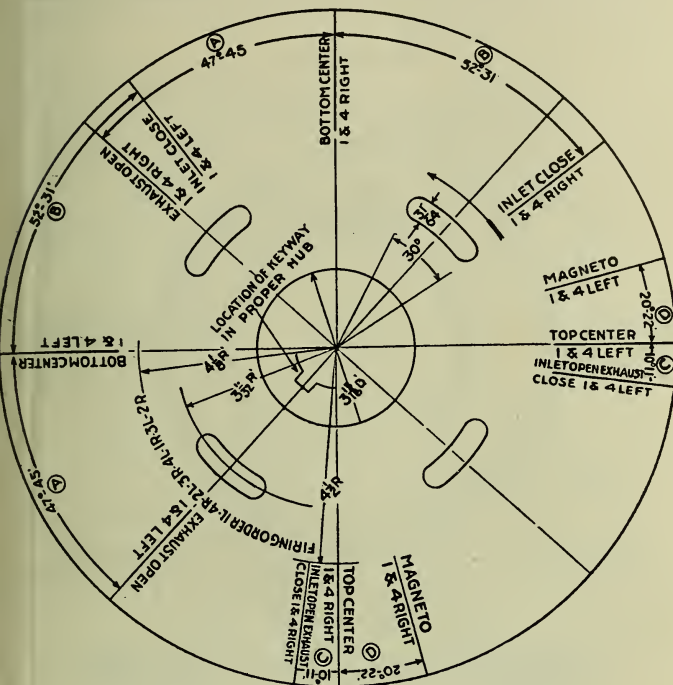


Plate 29

Timing disc. Model A, I and E

A more accurate method of determining top center is by the use of a top center indicator which fits in the spark plug hole having an indicator which gives the location of the piston. This can be furnished by the Wright-Martin Aircraft Corporation. The tool number is No. T-A-12066-E-2.

You are now sure that when the mark, "T. C., 1 and 4 Left" on the timing disc is brought to the center of the scale which is fastened on the vent plug that the piston on No. 1 left cylinder is at top center.

## **II. Timing or Setting the Camshafts.**

After the engine has been reassembled it is necessary to set or retime the camshafts. Turn the engine,

Spark advance. Model E, 25°

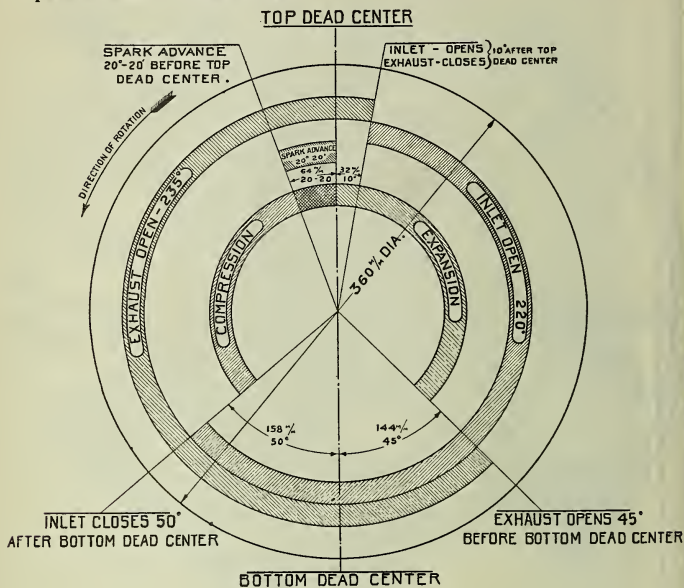


Plate 30

Valve and magneto timing. Model A, I and E

always, in the direction it runs, by the club on the timing disc. The engine being on top center on No. 1 left continue to turn the engine until the disc is 32 m/m past center or 10°, this is the position of the crankshaft when the inlet valve opens and the exhaust valve closes. The camshaft can now be mounted, when the engine crankshaft is in this position. In putting the camshaft in place with its gear attached, place it so that the closing of the exhaust cam and opening of the inlet cam, or the top, faces of the cams are parallel in relation to the valve tappets of cylinder 1-L, that is the noses of the cams pointing upward. See Plate 33. Tighten the six nuts A-T-948-A on the three camshaft bearings securely as a slight looseness will cause a considerable variation in timing.

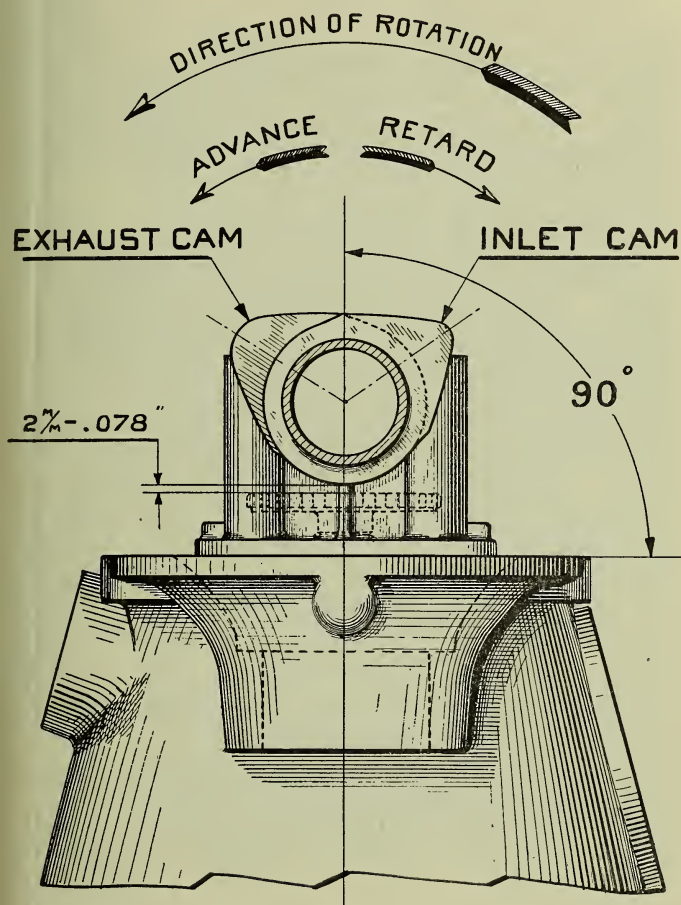


Plate 31

Position of cams when piston is at the top (firing) center. Model A, I and E

### ***III. Setting the Valve Tappet Clearance.***

Adjust the clearance between the back of the cams and the valve tappets A-9615-B to 2 m/m—.708". See Plate 32. The clearance is readily set by the aid of Wrench No. 12028, which is to be found in the tool box. The wrench fits into holes in the edge of both the tappets and their locking washers. This wrench allows the tappets to be screwed up or down in their respective valve stems, thus varying the clearances.

### ***IV. Checking the Timing of the Valves.***

Bring the timing disc slowly backward, turning the crankshaft in the opposite direction from which it runs, place a cigarette paper between the inlet and exhaust cams and their respective tappets, then gently rotate the engine forward (or in the direction it runs), feeling the paper under the exhaust cam which should free (exhaust valve close) 32 m/m or 10° after the top dead center, while at the same time the paper under the inlet cam should begin to tighten (inlet valve open).

If the paper under the exhaust cam does not free until the disc is 15 m/m 4.7° after top center it is said to close early.

If it does not free until the disc is 50 m/m 15.9° after top center it is said to close late.

If the paper under the inlet cam tightens when the disc is 15 m/m 4.7° after top center it is said to open early.

If it does not tighten until the disc is 50 m/m 15.9° after top center it is said to open late.

Any one of these variations will cause loss of power, perhaps over-heating, and countless other troubles.

If the timing is late or early as the case may be, and it is "off" 2° (6.28 m/m) or more on the crankshaft timing, it will be necessary to change the setting of the camshaft in order to get the timing more accurate.

### ***Provisions for Adjusting the Camshaft.***

Special provisions have been made for correcting the timing in the design of the camshaft drive. The



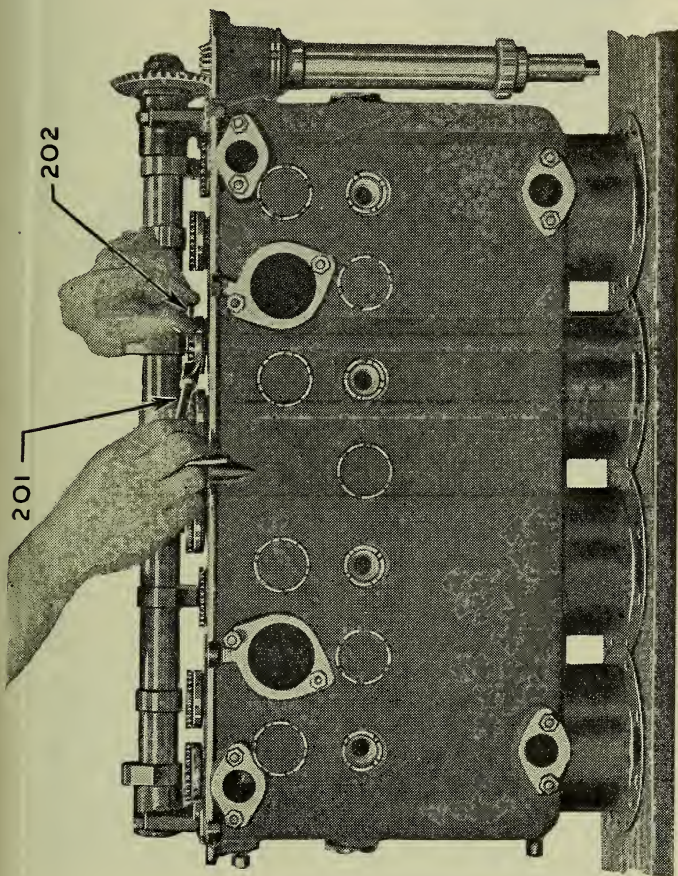


Plate 32  
Adjusting the valve tappet clearance. Model A, I and E

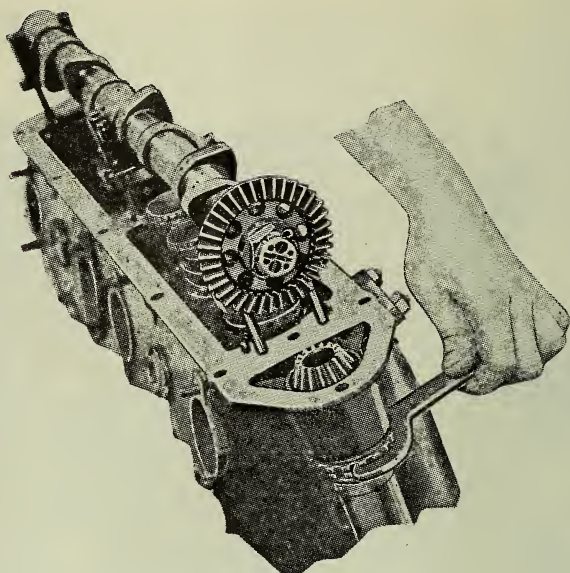


Plate 33

Raising or lowering vertical shaft casing in order to raise the vertical shaft and bearing for timing. Model A, I and E

vertical shaft is driven from the gear at its lower end by a screw-driver type of joint, the tongue of which is so located in respect to the teeth of the upper gear that a change of one half a turn of the vertical shaft gives a change in timing equivalent to one-half a tooth of the camshaft gear. The camshaft itself is driven from its gear by a key placed in one of the five keyways provided in the camshaft. By changing the key one keyway, a change in the timing is made equivalent to  $1/5$  of a tooth of the camshaft gear.

The timing can be corrected by making whichever one of the following changes is necessary, after first setting the line on the timing disc marked "E.C—I.O. 1 and 4 Left" at zero on the scale.

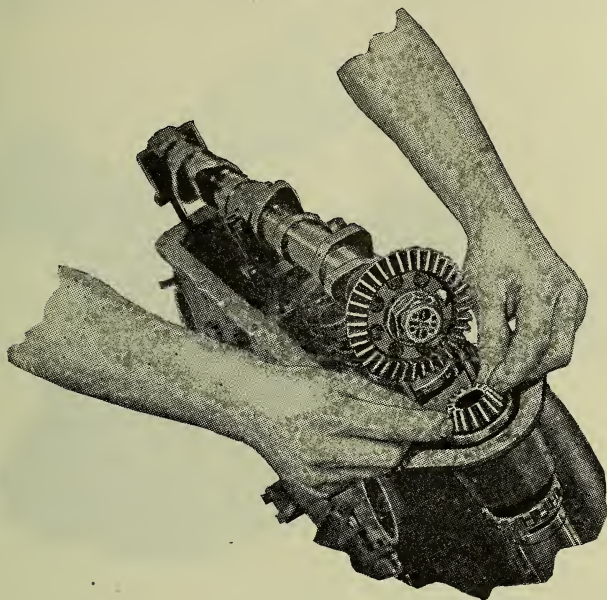


Plate 34

Adjusting the vertical shaft after it has been raised. Model A, I and E

If the timing is "late" advance, and "early" retard the camshaft. See Plates 31 and 36.

*a.* If the camshaft is  $20^{\circ}$  or 62.8 m/m "late" or "early" on the timing disc or crankshaft timing, change the mesh of the camshaft gear with the vertical shaft gear one tooth by raising the camshaft, turning the gear one tooth and replacing the shaft with the inlet and exhaust cams of No. 1-L parallel to their respective tappets, Plates 32 and 30. Turn the engine back a quarter of a turn and then slowly in the direction of rotation to check opening as originally done. Plate 28.

*b.* If the camshaft is  $10^{\circ}$  31.4 m/m "late" or "early" on the timing disc or crankshaft timing, remove the camshaft, back off the vertical shaft tube nut No. 11497, raise the vertical shaft by prying gently under its upper



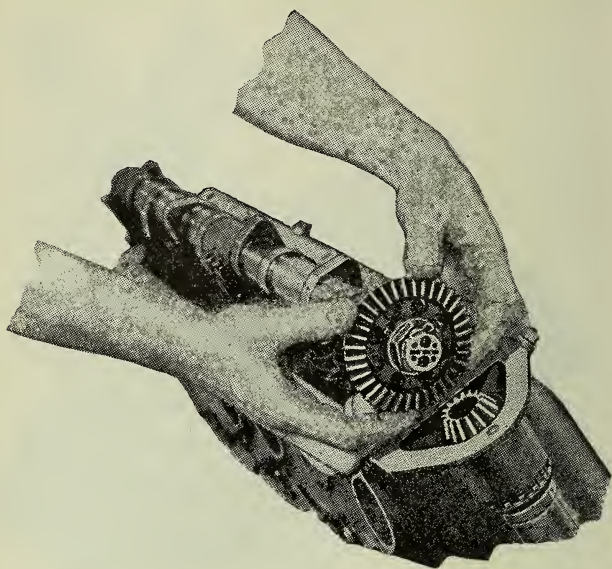


Plate 35

Adjusting the camshaft and camshaft gear with the vertical shaft gear.  
Model A, I and E

bearing with two screw-drivers and turn it one half a turn. Tap the shaft down into position with a block of hard wood, tighten the shaft tube nut and replace the camshaft with the inlet and exhaust cams of No. 1-L parallel to their respective tappets. Turn the engine back a quarter of a turn and then slowly in the direction of rotation to check opening as originally done. Plates 33, 34, 35 and 31.

c. For  $4^{\circ}$  12.56 m/m remove the camshaft nut No. 10729, then remove camshaft and drive off the gear No. 9638 by holding the shaft by the first bearing and tapping on the threaded end of the shaft with a fibre hammer. If the opening occurs before the line "I. O, 1 and 4 Left" has reached zero "early," put the key in the next keyway to the left or in the next keyway to the right if the opening occurs after the line has passed zero

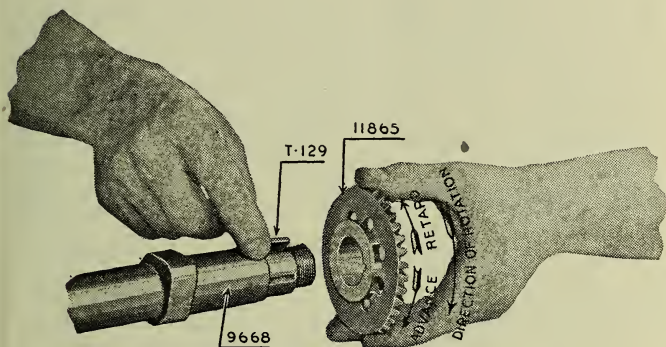



Plate 36

Adjusting the camshaft gear on the camshaft

“late.” Replace the gear and put the camshaft in position with the No. 1-L inlet and exhaust cams parallel to their respective tappets. With the shaft in position, tighten and cotter pin the gear nut. Turn the engine clockwise for quarter of a turn and then slowly anti-clockwise to check the opening as originally done. See Plates 35 and 31.

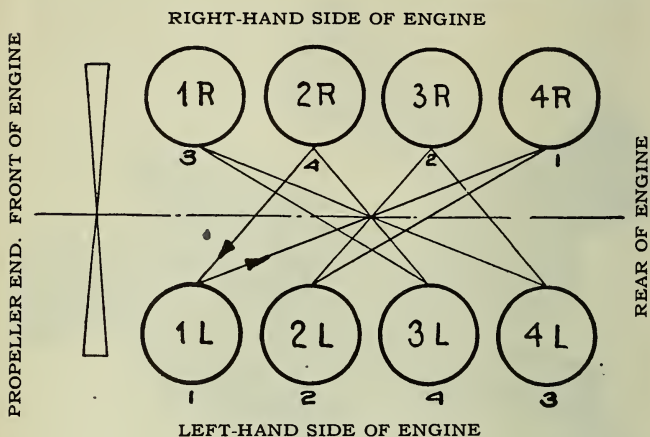*d.* For 2° 6.28 m/m remove the camshaft gear nut No. 10729, remove the camshaft and drive-off gear No. 9638. If the opening occurs before the line “I.O, 1 and 4 Left” reaches zero (“early”), put the key in the second keyway to the left or in the second keyway to the right if the line has passed zero (late). Replace the gear and the nut. Next raise the vertical shaft, turn in one-half a turn and replace as for 10°. Replace the camshaft, with the No. 1-L inlet and exhaust cams parallel to their tappets, then tighten and cotter the gear nut. Turn the engine back for a quarter of a turn and then





## TIMING DIAGRAM

slowly in the direction of rotation to check the opening as originally done. See Plates 35, 34 and 31.

After setting the left-hand camshaft, place the line marked "E. C. I. O. 1 and 4 Left" directly under zero, being sure that the inlet valve is just commencing to open. Turn the engine in the direction of rotation exactly one-quarter of a turn until "E. C. I. O. 1 and 4 Right" is directly under zero and then proceed to set the right camshaft by following the preceding instructions.

When the correct timing has been secured be sure all the hold-down nuts are tight and cottered as well as the camshaft gear nut. Oil the cams and tappets liberally and replace the valve covers, being careful that the gaskets are in good condition.

The intake opening and exhaust closing of the 4th cylinder, right block, should begin  $\frac{1}{4}$  of a revolution or  $90^\circ$  of the crankshaft after the intake opening and exhaust closing on 1-L cylinder.

The firing order is 1-L-4R-2L-3R-4L-1R-3L-2R.

## ***Timing the Camshafts When Cylinders Only are Removed.***

The Cylinders only having been removed for the purpose of grinding the valves, or the mesh of the lower vertical shaft gears having not been changed with the crankshaft gear, the camshaft can be retimed by proper meshing the camshaft gear with the upper vertical shaft gear. Making sure the screw-driver joint is not a half turn off. In other words it will be unnecessary to change the camshaft gear on the camshaft keyways, unless the engine has been completely disassembled.

**Caution:** Do not lift the cylinder blocks to reset the vertical shafts.

## ***Table of Advancing and Retarding the Timing of the Camshafts.***

To advance the camshaft timing, rotate the gear on the camshaft clockwise, and anti-clockwise for retard, see Plate 31. This is standing at the rear of the engine looking toward the propeller end. The following combinations for timing the Hispano-Suiza camshafts can be obtained. It is given both in degrees and m/m on the crankshaft.

Degrees on Timing Disc on Crankshaft	m/m on 360 m/m Timing Disc on Crankshaft	
2 deg.	6.28 m/m	3 keyways and $\frac{1}{2}$ turn vertical shaft
4 "	12.56 m/m	1 keyway
6 "	18.84 m/m	4 keyways and $\frac{1}{2}$ turn vertical shaft
8 "	25.12 m/m	2 keyways
10 "	31.4 m/m	$\frac{1}{2}$ revolution of vertical shaft
12 "	37.68 m/m	3 keyways
14 "	43.96 m/m	1 keyway and $\frac{1}{2}$ revolution of vertical shaft
16 "	50.24 m/m	1 tooth less 3 keyway and $\frac{1}{2}$ turn of vertical shaft
20 "	62.8 m/m	1 tooth of camshaft gear
40 "	125.6 m/m	2 teeth of camshaft gear

Revolution of vertical shaft means shifting the vertical shaft in the screw-driver joint.

Keyway means shifting the camshaft gear one (1) keyway on the camshaft.

Tooth means shifting the camshaft gear one (1) tooth on the vertical shaft gear.

### ***Camshaft Regulations.***

One revolution of the crankshaft causes  $\frac{1}{2}$  revolution of the camshaft, hence 2 degrees on the former equals 1 degree on the latter.

1 degree on 360 m/m disc equals 3.14 m/m on periphery, or .123" (approximately  $\frac{1}{8}$ " )  $\left( \frac{360 \text{ Deg.}}{36 \text{ T}} \right) =$  10 degrees on camshaft or 20 degrees 62.8 m/m on propeller hub or crankshaft.

One tooth on camshaft gear equals 20 degrees 62.8 m/m on the crankshaft.

One-half revolution of the vertical shaft divides one tooth in two = 10 degrees 31.4 m/m on the crankshaft.

One keyway equals  $\frac{(36 \text{ Teeth})}{(5 \text{ Keys})} = 7 \frac{1}{5}$  teeth (drop the seven as instinct and we have)  $\frac{1}{5}$  tooth = 4 degrees, 12.56 m/m on crankshaft.

A slight inaccuracy in the spacing of the keyway will make a slight difference for which no rules can be written.

One tooth equals 20 degrees.  $\frac{1}{2}$  turn of vertical shaft equals 10 degrees. One keyway equals 4 degrees. 12.56 m/m. From this, the table on page 83 was derived.

## **PART X**

### **STARTING SYSTEM**

#### ***Kind of Starter and How Mounted.***

If an electric motor generator or air starter is to be attached to the Model I Hispano-Suiza Engine, it can be done by removing the magneto support oil pump assembly 11882 and bolting an appropriate bracket in place of it.

If a starter together with a long-distance wireless outfit is desired, such as in dirigible work, an electric single unit motor generator system can be used as the wireless connection on the magneto is only good for approximately a five-mile radius.

#### ***How Starter is Driven.***

When the starter is mounted in the above manner it is driven from a shaft one end of which is driven from the crankshaft, the other driving the starter direct or

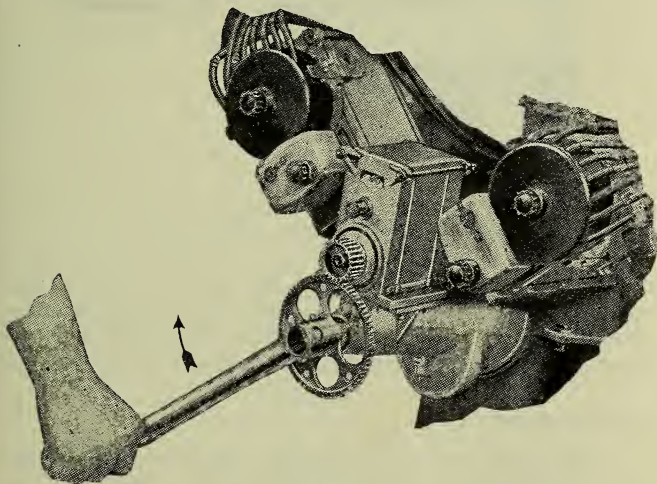


Plate 38

Hand-starting crank together with starting magneto geared to it. Model A, I and E

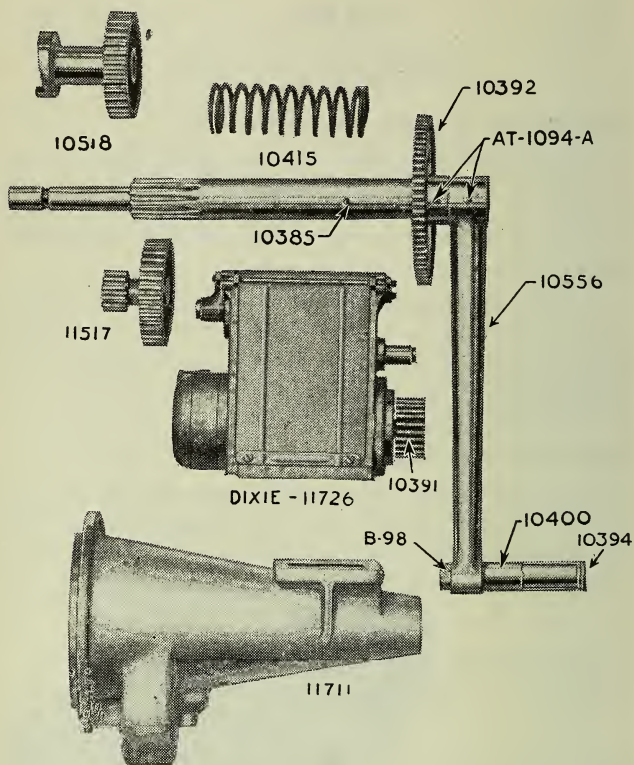


Plate 39

Hand-starting crank disassembled. Model A and I

by silent chain. When driven direct the starter, either air or electric, can be bolted direct on the generator drive support, but when driven by silent chain it is mounted on a support or bracket in the fuselage.

### Instructions.

Instructions for the care and operation of starters other than the hand starter will be furnished by the particular company manufacturing them.



## ***Hand-Starting Crank.***

Some engines used in seaplanes of the pusher type are equipped with a geared-down hand crank starting device. Thus equipped they are geared up to a small starting magneto which gives a hot spark at low engine speeds for starting. The starting crank itself is geared down to the engine to facilitate easy cranking as will be seen in Plates 39 and 40.

## **PART XI**

### **PRECAUTIONS TO TAKE UNDER FREEZING CONDITIONS**

#### ***Starting an Engine in Cold Weather.***

In starting an engine in cold weather never load it immediately after starting. Allow it to operate at partly closed throttle or about 800 r. p. m. In extreme cold weather, we advise stopping it after three or four minutes' operation and waiting a little time until the heat communicates to all parts of the engine.

#### ***Precautions to Take When Stopping the Engine.***

In order to facilitate starting in the morning and freeing (ungumming) the rings, especially if castor oil is used as a lubricant, we advise giving, while the engine is still hot, after the previous run, several shots of kerosene through the petcocks of the inlet manifolds and turning the propeller over several times.

#### ***Anti-Freezing Solutions.***

During freezing weather, fill the water circulation system with one of the following anti-freezing solutions:

For a temperature not lower than five degrees above zero:

Alcohol	12 per cent
Glycerine	12 " "
Water	76 " "

For a temperature not lower than five degrees below zero:

Alcohol	15 per cent
Glycerine	15 " "
Water	70 " "

For a temperature not lower than fifteen degrees below zero:

Alcohol	17 per cent
Glycerine	17 " "
Water	66 " "

Alcohol should be added occasionally to make up for evaporation. The glycerine does not evaporate with

## A E R O N A U T I C A L   E N G I N E S

---

the water. A simple solution of alcohol, while it is not injurious in any way, lowers the boiling point of the water.

The boiling point of denatured alcohol is about 10 degrees higher than that of wood alcohol.

The use of glycerine raises the boiling point of the solution. It is more expensive than alcohol and is slightly injurious to rubber.

All things considered, a combination solution of alcohol and glycerine in water is the most satisfactory.

Do not use any alkaline or calcium chloride solutions; *they are injurious to the metal parts.*

## **PART XII**

### **RECOMMENDATIONS FOR ATTACHING PROPELLERS**

#### ***How to Place the Hub in the Propeller.***

In placing a propeller hub in a propeller, always put the keyway of the hub in the axis of the blades, as in Plate 40. Starting the engine by cranking is facilitated if the propeller is keyed in this position for "carrying over compression." Moreover, this recommendation is of vital importance since this position has been adopted for adjustment of the layout for firing the machine gun through the path of the propeller.

#### ***Fit of Hub in Propeller.***

The hub should be a light press fit in the propeller. Hubs can be pressed in the propeller with an arbour press. If no arbour press is available, we suggest that the hubs be pressed into the propeller by using a large bolt and two blocks with holes drilled in their centre for the bolt. Place the bolt through the centre of the hub and through the centre of the propeller also through the blocks with a block on each end of the bolt. See that the blocks rest so as to bring the strain directly over the sleeve portion of the hub. Draw down on the block by turning the nut on the bolt. Hubs should not be driven into propellers or removed with a hammer or mallet, as there is danger of splitting the propeller.

#### ***Mounting the Propeller on the Crankshaft.***

The mounting of the hub on the taper of the crankshaft requires very particular precautions; the hub supplied with each engine has been fitted to its taper by lapping with emery and oil while the key is removed. The hub and crankshaft taper is then thoroughly cleaned and the key replaced, making sure to lubricate the taper and hub with tallow or oil and graphite. This operation should be strictly adhered to each time a new hub or one that shows wear is placed on the crankshaft; always remembering that a bad fit rapidly develops play and if run in this condition will do great damage.

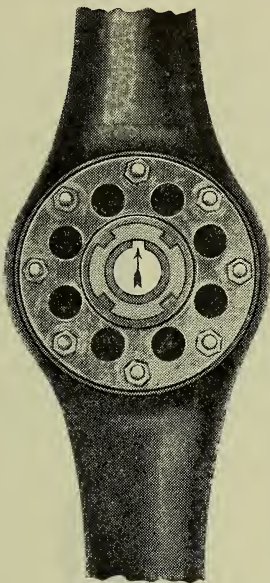


Plate 40

Showing the location of the keyway in the propeller hub in relation to the propeller blades

## ***Tightening the Propeller Hub Nuts.***

There is one inner propeller hub nut 11913, and one outer propeller hub nut 11914 holding the propeller hub 11910 on the crankshaft, they being locked together with a lock wire 11397.

To fasten the hub 11910 on the crankshaft taper:

1st. Insert the inner nut 11913 in the outer nut 11914, so that both have their hexagon heads at the same end.

2d. The thread on the outside of the outer nut fits the thread on the inside of the hub, screw the nut into the hub while the inner nut is still in the outer nut. This can be screwed all the way in until it bottoms and then backed off about three or four threads.

3d. Place the hub on the crankshaft taper and start the inner nut on the thread on the end of the



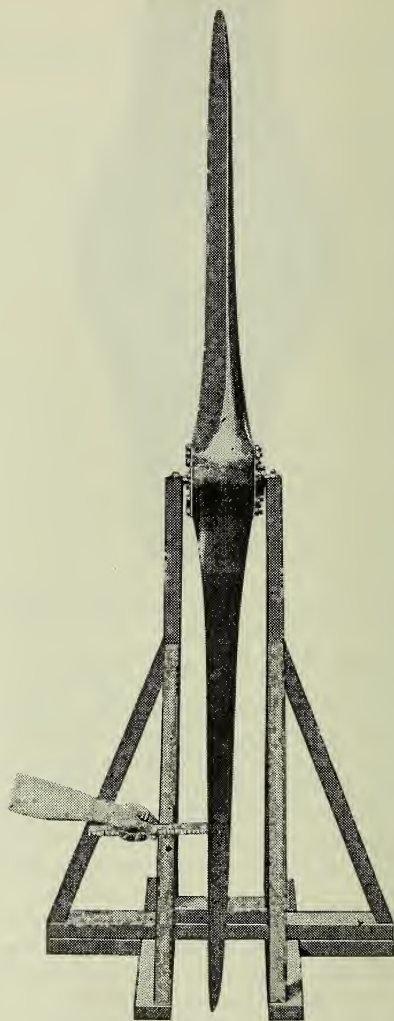


Plate 41

Checking track of propeller. Model A, I and E

crankshaft by the aid of the wrench 11439, which is found in the tool equipment; pull the nut 11913 "home;" this draws the hub on the crankshaft taper.

4th. After the hub is drawn on the taper, the inner nut is locked in place by drawing up the outer nut, the nuts are then locked together by the lock spring wire 11397, and the operation is completed. (See Plates 53 and 54.)

## ***Proper Balance.***

A faulty balance or fluttering of the propeller always causes vibration. As soon as this condition is encountered, correct the balance with care and also the pitch (because it happens that wood warps). Plate 41 shows the method of doing this operation.

## ***PART XIII***

### ***MACHINE-GUN FIRING MECHANISM***

The machine-gun firing mechanism or interrupter driving mechanism is driven from either the left or right lower vertical shaft. It is driven by a gear which is pinned to the lower vertical shaft gear.

The interrupter shaft is mounted on two ball bearings and driven at crankshaft speed. Plate 42.

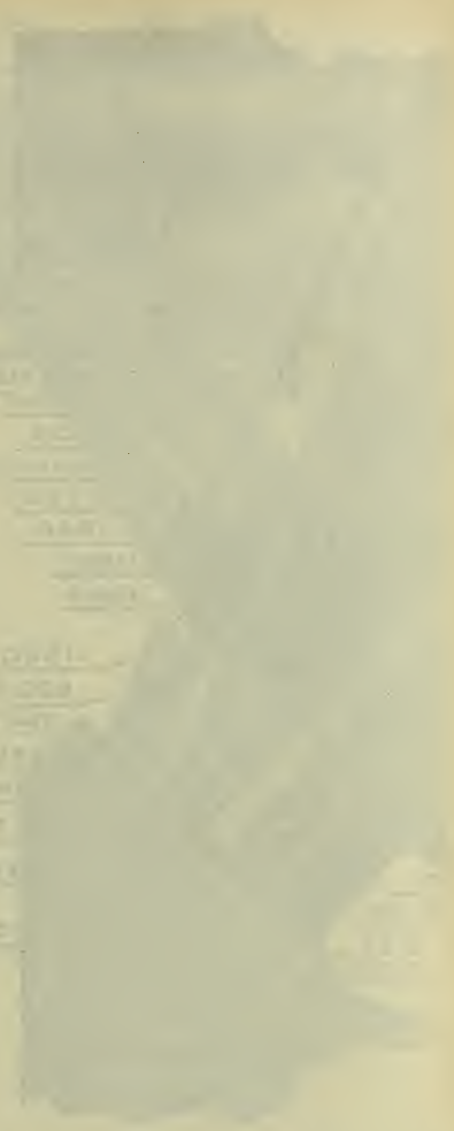
The synchronizing of the interrupter with the propeller is facilitated by the double flange connection which bolts it to the driving shaft. One flange having one less bolt hole than the other.

The firing mechanism should be set so that the bullet would just miss the trailing edge of the propeller by about one-half an inch (if gun was loaded) when the engine is turned over by hand.

Test synchronization by cocking the gun and turning the engine over slowly by hand; stop when firing hammer clicks.

Sight down the gun to see if the trailing edge of the propeller has passed the end of the gun; this should not pass the gun by less than one-half an inch or more than two inches.

1871  
 1872  
 1873  
 1874  
 1875  
 1876  
 1877  
 1878  
 1879  
 1880  
 1881  
 1882  
 1883  
 1884  
 1885  
 1886  
 1887  
 1888  
 1889  
 1890  
 1891  
 1892  
 1893  
 1894  
 1895  
 1896  
 1897  
 1898  
 1899  
 1900




1871  
 1872  
 1873  
 1874  
 1875  
 1876  
 1877  
 1878  
 1879  
 1880  
 1881  
 1882  
 1883  
 1884  
 1885  
 1886  
 1887  
 1888  
 1889  
 1890  
 1891  
 1892  
 1893  
 1894  
 1895  
 1896  
 1897  
 1898  
 1899  
 1900

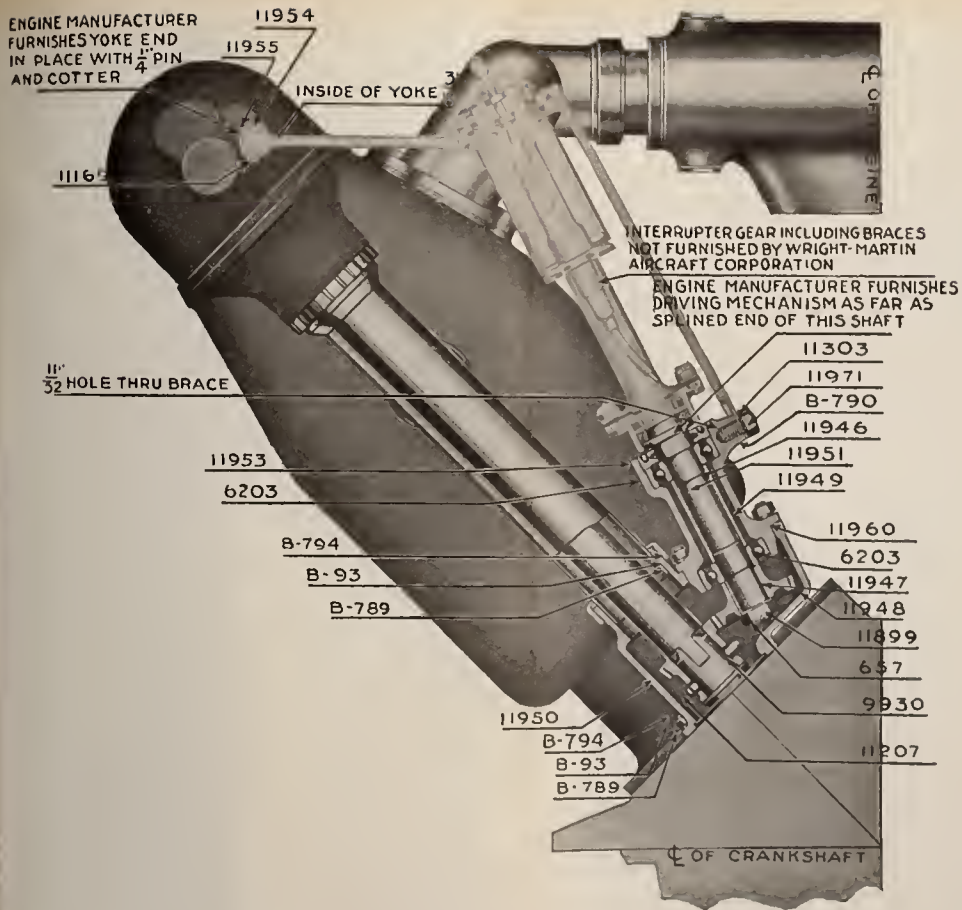1871  
 1872  
 1873  
 1874  
 1875  
 1876  
 1877  
 1878  
 1879  
 1880  
 1881  
 1882  
 1883  
 1884  
 1885  
 1886  
 1887  
 1888  
 1889  
 1890  
 1891  
 1892  
 1893  
 1894  
 1895  
 1896  
 1897  
 1898  
 1899  
 1900







## Plate 42

Machine gun firing or interrupter drive. Can be attached to left or right side of Model E or I engine

THE UNIVERSITY OF CHICAGO  
LIBRARY  
540 EAST 57TH STREET  
CHICAGO, ILL. 60637

UNIVERSITY OF CHICAGO

3601

UNIVERSITY OF CHICAGO  
LIBRARY

# AERONAUTICAL ENGINES

---

## *MEMORANDUM*

## PART XIV

### ADJUSTMENTS

#### *Valve Tappet and Cam Clearance.*

The clearance between the valve tappets and the cams should be 2 m/m (.0787"). It is important to check this clearance from time to time and correct it, if it varies, using special wrench No. 12028 and the gauge No. 11141, supplied for the purpose in the tool equipment. See Plate 60.

#### *Oil and Water Pump Packing Nuts.*

By unscrewing set screw B-754 the oil pump packing nut A-10380-A can be tightened when the pump is found to leak. The same can be done with the water pump packing nut 11682 using flat lamp wick packing to repack. See Plate 43.

#### *Inlet Manifold and Vertical Shaft Packing Nuts.*

Packing nuts A-10357-A on the vertical shaft housing 11678 can be tightened if found to leak. If this does

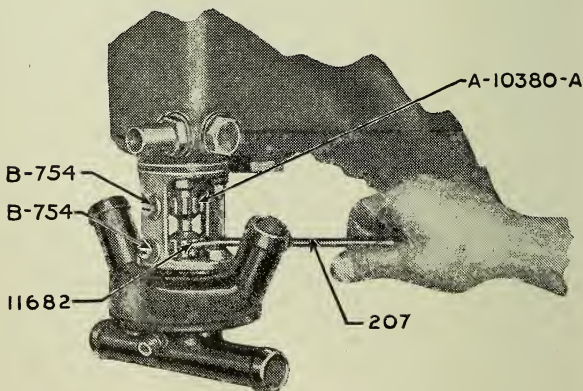


Plate 43

Adjusting oil and water-pump packing nuts. Model A, I and E

not hold the oil, unscrew the nuts and repack with lamp wick packing of flat section. The same can be done with the inlet manifold and tee packing nut A-10432-A as well as the oil tubes at the front of the cylinder at packing nuts A-T-990-A. Use wrench No. 11150.

## ***Magneto Breaker.***

The magneto breaker should be looked at from time to time to see if it is breaking the proper distance, which is .020". This can be re-adjusted by a special wrench furnished with the magneto spare parts.



## **PART XV**

### **OPERATION**

#### ***Starting the Engine when Cold.***

In starting the engine cold, it is best to prime the engine through the petcocks on the intake pipes. If the engine is warm no priming should be used.

#### ***Setting of the Throttle and Altitude Controls for Starting.***

The engine is controlled by gas throttle and is found to start best with a very small opening. The throttle lever should be about  $5 \text{ m/m } \frac{3}{16}''$  from the stop screw. The throttle lever is connected to an operating lever in the pilot's cockpit. The second control lever on the carburetor is designed to correct the variations in carburetion required at the different altitudes where the engine is to operate and is also connected to an operating lever in the pilot's cockpit. For starting, and until the engine is warmed up, the altitude-control lever should be in the rich or all the way forward position. After the engine is warmed up, the control can be moved toward the lean position until the maximum r. p. m. of the engine is obtained. This adjustment will generally be found satisfactory up to 1000 meters (3280 feet). Above that, it is necessary to make corrections, always, of course, determined by the revolution counter. As the altitude is increased it will be found necessary to move the lever back or in the lean position.

#### ***Location of Starting Magneto.***

The starting magneto, when there is one used, is conveniently located in the pilot's cockpit, unless the engine is equipped with a hand-starting crank.

#### ***Air Pressure in Gasoline Tank.***

Before trying to start the engine, make sure there is pressure in the gasoline tank, if a pressure system is used. This being done, place the throttle and altitude-

control levers in the starting positions and prime the intake manifold as mentioned above, then, with the ignition switch "off" position, turn the engine over two or three times with the propeller, put the ignition switch "on" and turn the stating magneto, the engine should start. If it does not start, repeat the operation.

## ***Kind of Propeller.***

The engine should be fitted with a suitable propeller to give from 1350 to 1400 r. p. m. on the ground or sea level when the engine is wide open.

## ***Difference in Engine Speed.***

Each machine should be tested in flight to determine the difference between the speed in the air and on the ground. The difference may vary from 50 to 300 r. p. m. It will also be noticed that during a very steep climb of short duration, or a very short turn or bank the engine will be temporarily over-loaded, causing a slight decrease in the number of r. p. m. but will recover itself as soon as it regains normal flight.

## **PART XVI**

### **INSTRUCTIONS FOR STARTING THE ENGINE**

Block the wheels of the plane securely.

#### ***Setting the Throttle.***

For starting the engine the throttle lever should never be opened more than 5 m/m or  $\frac{3}{16}$ " from the stop screw.

#### ***Setting the Altitude Control.***

Place the altitude control lever in the forward or rich position.

#### ***Priming the Engine.***

Prime the engine by injecting a small quantity of gasoline (in cold weather use half ether and half gasoline) through the four priming cocks on the intake manifolds.

#### ***Cranking the Engine.***

As soon as the engine is primed and with the ignition switch still "off" turn the engine over compression on about three cylinders by the propeller. The man turning the engine over stands aside and the pilot turns the ignition switch "on" and then turns the starting magneto by hand. This should start the engine, providing everything is properly adjusted.

If any trouble is encountered with any particular part of the engine, look under the topic in which this part is described in the "Instruction Book."

#### ***As Soon as the Engine is Started.***

Leave the throttle in approximately the starting position and allow the engine to run at idling speed (about 800 r. p. m.) for a few minutes or until it is thoroughly warmed up.

## ***Things to Observe After Starting the Engine.***

Oil Pressure Gauge.

Gasoline Air Pressure Gauge.

Water circulation by Moto-Meter temperature.

Operation of the Magnetos by trying each separately.

## ***After the Engine is "Warmed Up."***

The altitude-control lever should be moved back or towards the lean position until the maximum r. p. m. of the engine is obtained.

**Caution:** Do not attempt to crank an engine immediately after it has been stopped. An overheated spark plug or red-hot piece of carbon might cause pre-ignition and a disastrous back-kick. Always allow it to cool a few minutes.

## **PART XVII**

### **DISASSEMBLY**

#### ***To Remove the Engine from the Plane, Proceed in the Following Manner:***

Take off propeller and hub assembly, see Plates 53 and 54. Drain the water from the radiator and engine by removing the drain plug 11938 in the lower half of the water pump.

In most cases it is necessary to remove the radiator before lifting the engine.

Be sure that all connecting members are removed, such as: Tachometer shaft, gun-firing attachments; carburetor control rods; gasoline air pump line; oil and water connections; magneto wires, etc. Be sure all of the oil is drained from the sump.

If a gun is mounted over the engine it should be removed before proceeding to remove the engine.

Remove engine bed bolts and lift engine. See that the slings which are used on the engine do not put any strain on the light members of the engine. The weight of the engine should be carried as in Plate 2.

Place the engine on a suitable stand. The engine bed should be bolted down with two bolts if the stand is to be tipped, in order to make cylinder block stand perpendicular.

Remove carburetor and manifold tee as one. Loosen four nuts at the flange on the end of the tee A-10428-C and back of the union nut A-10432-A of the detachable flange inlet pipe. It is not necessary to take the nuts off. Shake tee from side to side and lift it out; do not tear gaskets. See Plate 44.

Remove intake manifolds A-10443-C and A-10444-C by unscrewing the eight nuts at the flanges of the manifold.

Remove the breather pipe by turning it to the left. Use a snubbing device made of a stick of wood and a leather strap.



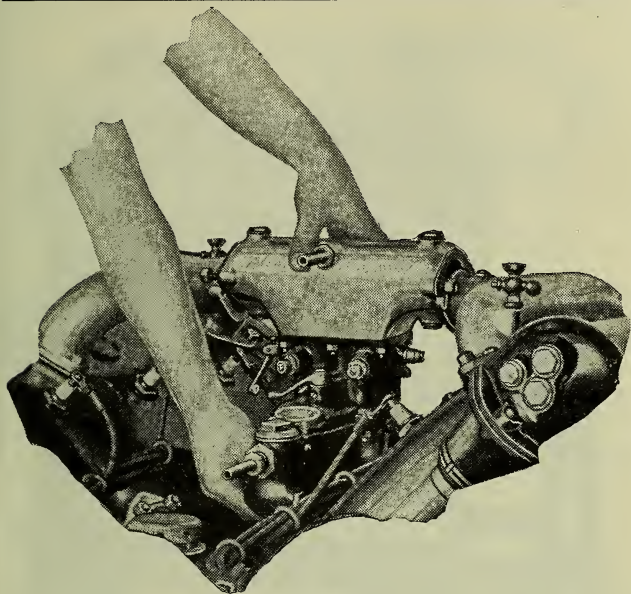


Plate 44

Removing Carburetor and Tee from Engine. Model A, I and E

## ***Removing the Magnetos.***

Remove the ignition wires and distributor blocks intact. Remove the 8 magneto cap screws 1440. The magnetos, together with their couplings, can be lifted off. Care should be taken in replacing the magnetos, as the magneto on the left-hand side of the engine is a clockwise magneto and the one on the right side of the engine is anti-clockwise, looking from the driving end.

## ***Removing the Camshafts.***

When valves are to be inspected or ground, take out the cylinder cover screws 11677 and remove the camshaft covers. Take off the nuts A-11302-A at the two end bearings of each camshaft first so that the valve springs will not tend to spring the shaft or bearings. Remove the middle bearing nuts next. See that both ends of the shaft are lifted evenly. If this is done no

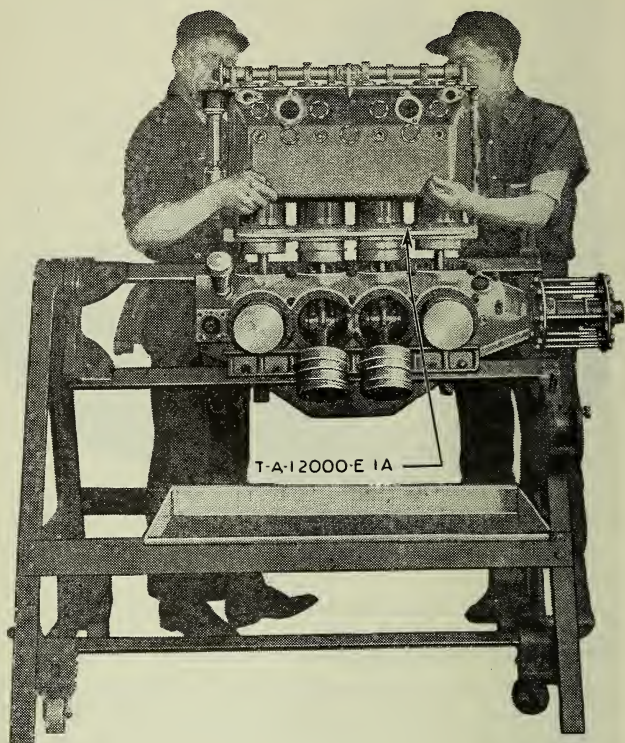


Plate 45

Removing or assembling a cylinder block. Model A, I and E

force will be required. The shaft and three bearings can be lifted together.

### ***Removing the Cylinder Blocks.***

Undo the oil pipe nipple packing nuts A-T-990-A at the front end of the cylinder. Undo the gear housing packing nuts A-10367-A at the rear end of the cylinders. Remove the cylinder stud nuts A-11305-A, 72 in number. It is best to let one nut on the upper side of each cylinder block until everything is in readiness to



Plate 46  
Piston Ring Clamp. TA-12000-E-1A

remove one of the cylinder blocks. Turn the crankshaft so that the pistons of cylinder 1 and 4, of, say the left block, are on top. Take off the remaining nut and lift the block away from the upper half of the crankcase and pistons, taking care not to bind the pistons and to support the pistons after they are out of the cylinders. The same operation holds good for the right-hand cylinder block.

### ***Removing the Pistons.***

Expand the piston pin lock rings 11672 on pistons, 1L-4L, 1R and 4R beyond their slots and slide them down on the pistons until the piston pins 11671 can be removed. This can be done by taking a piece of wood or soft brass and driving them out. See Plate 47. The connecting-rod should be backed up during this operation. The pistons 11670 can then be removed. Turn the crankshaft a quarter revolution and proceed as above with pistons 2L, 3L, 2R and 3R.

### ***Removing the Gear Type Oil Pump.***

The gear oil pump is located on the rear end of the engine, it being bolted to the magneto support bracket 11813.

For summary inspection or cleaning the pump, the magneto support oil pump cover 11815 can be removed by removing the 8 fillister head screws 11820. The oil-pump gear 11816 and oil-pump idler gear 11817 can be removed. If nothing further is at fault the gears and housings can be cleaned and reassembled.

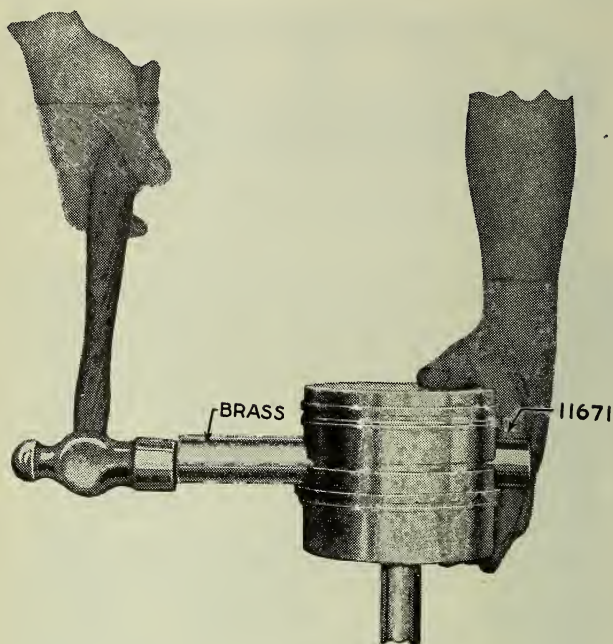


Plate 47

Removing piston from connecting-rod. Model I and E

To remove the complete oil pump assembly from the engine. Remove the three (3) nuts 1444 and insert a screw-driver at the bottom of the magneto support oil pump body 11814. The complete oil pump can then be lifted from the engine.

***To Remove the Lower Half of the Crankcase for Summary Inspection of the Connecting Rods or Removing it in the Course of Disassembling the Engine.*** See Plate 66.

If the engine cannot be hung in a stand while removing the lower half of the crankcase, the carburetor,



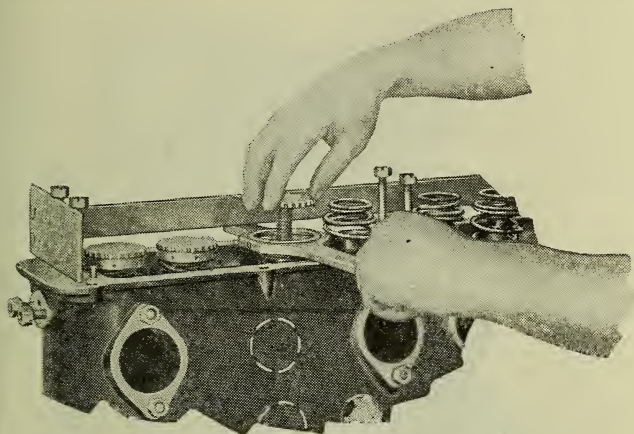


Plate 48

Assembling and disassembling valves in the cylinders. Model A, I and E

together with manifold tee A-10428-C and both intake pipes A-10443-C and A-10444-C should be removed. Drain all oil from crankcase. The engine can then be turned upside down and allowed to rest on the cylinder covers. To remove the above parts, remove 12 nuts A-11303-A, the hose connections to the manifolds having already been removed when the engine was removed from the plane. Then, by removing the 5 nuts A-11304-A, take off the crankcase A11231A at the rear end of the crankshaft (on some engines the hand-starting, electric-starting mechanism or magneto support bracket is bolted here in place of the crankcase cover. This can be removed in the same way). Remove the 8 crankcase bearing stud nuts A-T-1019-A found on top of the crankcase, also 2 nuts 1035 found at the rear of the bottom half of the crankcase. Then remove 24 nuts A-11303-A on the outer edge of the case that hold the two cases together. The lower half can then be removed by prying the two halves apart with a screwdriver. Special lugs are cast on the cases for this purpose. Take care not to drop the oil-pump driving gear



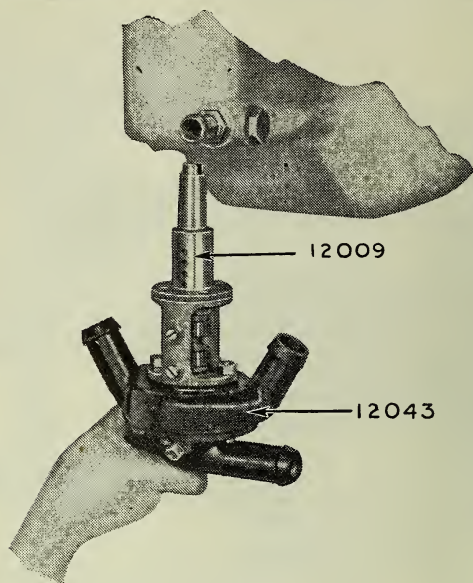


Plate 49

Assembling and disassembling the oil and water pumps. Model A, I and E

A-10499-B. If you want to rotate the crankshaft while the engine is in this position, remove the spark plugs on the exhaust side and hold the rear end of the crankshaft in place with a wooden flange drilled with two holes corresponding to the two stud holes A-T-957-A of the bearing, these being held in place by nuts on the studs.

### ***Removing the Connecting Rods.***

Extract the cotter pins from the connecting rod outer bolts 11683 and remove connecting rod outer bolt nuts 11688. The outer connecting rods 11673 can then be removed. Extract the cotter pins from the connecting rod inner bolts 11689 and remove the connecting rod inner bolt nuts 11690. The inner connecting rods 11674, together with the bronze connecting rod bearings 11675 and bronze connecting rod bearing caps 11676, can then be removed.

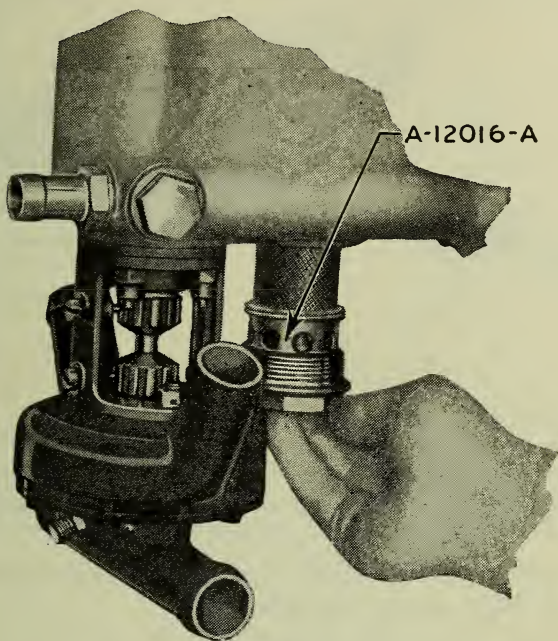


Plate 50  
Removing or replacing the oil strainer. Model A, I and E

## ***Removing the Valves.***

Put into the cylinders four pieces of wood somewhat longer than the inside of the cylinders and held together by a cross piece attached to the cylinders. Anchor the valve tool on the rod held in place by the studs 948-T of the camshaft bearings and take off each valve, with a special lifter, in the following manner. See Plate 48.

Place the hollow yoke of the lever on the top of the valve tappet washer A-9615-B. Unscrew the valve tappet with the other hand until the springs are no longer compressed. Dispense with the lifter and finish unscrewing the valve tappets. Remove the washers and springs A-9908-A and A-9909-A. When this operation is finished for the eight valves, remove the pieces of wood and take out the valves 10963 and 10964.

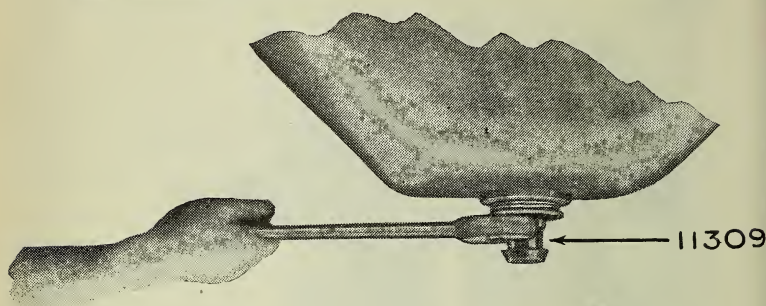


Plate 52

Removing sump drain plug. Model A, I and E

### ***Dismounting the Water Pump.***

The hose connections having been removed when the engine was removed from the plane, first disconnect the union A-11191-A. Unscrew the two nuts A-11303-A and lower the complete water pump.

### ***Removing the Eccentric Vane Oil Pump Located in the Lower Crankcase.***

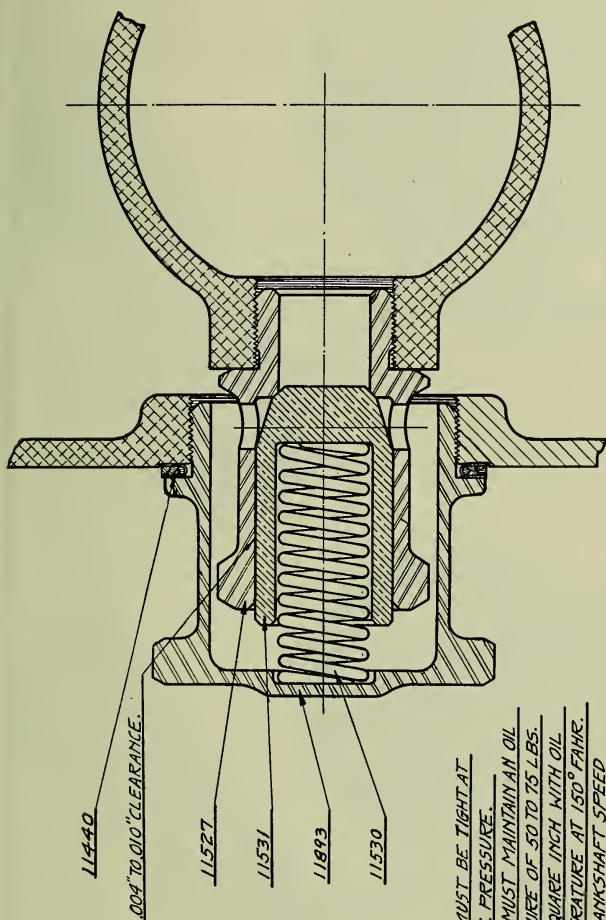
Unscrew the 4 nuts A-11301-A and remove the water pump bracket A-10372-A which also serves as the oil-pump cover. Drive out the oil pump body A-10424-B through the oil pump gear hole after the gear A-10495-A and springs A-B-194-A have been removed with the aid of a piece of wood or copper. This can be done when summary inspection only is required thus eliminating removal of the oil-pump body A-10424-B. See Plate 49.

### ***Removing the Oil Strainer.*** See Plate 50.

The oil filter or strainer should be removed every ten hours of engine running and if found to contain any foreign matter should be cleaned and replaced.

### ***Removing the Oil Pressure Relief Valve.*** See Plates 51, 25 and 26.

The oil pressure relief valve is located in the rear end of the lower half of the crankcase just in front of the



VALVE MUST BE TIGHT AT  
35 LBS. PRESSURE.  
VALVE MUST MAINTAIN AN OIL  
PRESSURE OF 50 TO 75 LBS.  
PER SQUARE INCH WITH OIL  
TEMPERATURE AT 150° FAHR.  
AND CRANKSHAFT SPEED  
OF 1500 R.P.M.  
SCALE 2 TO 1

Plate 51  
 Oil pressure relief valve in section. Model I and E

oil pump. The complete assembly can be removed by unscrewing the oil pressure relief body 11893, and can be taken apart by removing the oil pressure relief plug 11531. The oil pressure relief valve should be cleaned often and thoroughly.

***To Remove the Crankshaft.***

Always lift both ends of the shaft at the same time. It may be necessary to strike the crankcase with a wooden or rawhide mallet, to loosen the thrust bearing.



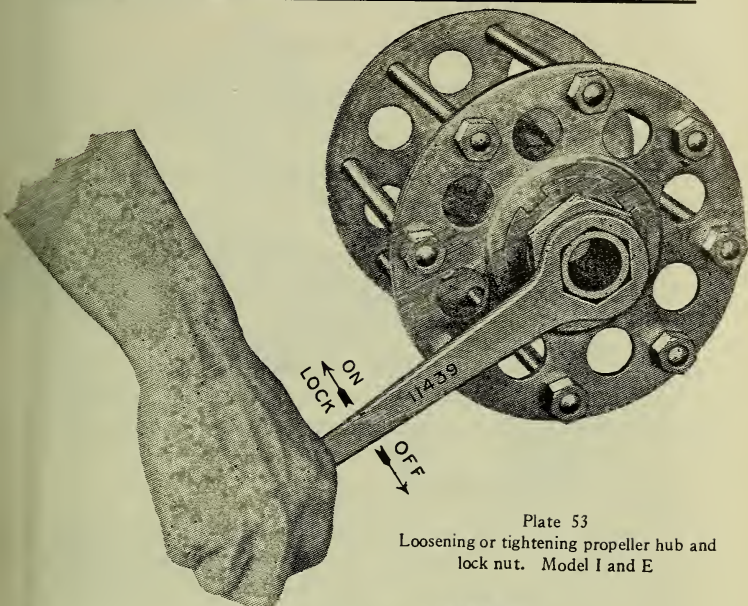


Plate 53  
Loosening or tightening propeller hub and  
lock nut. Model I and E

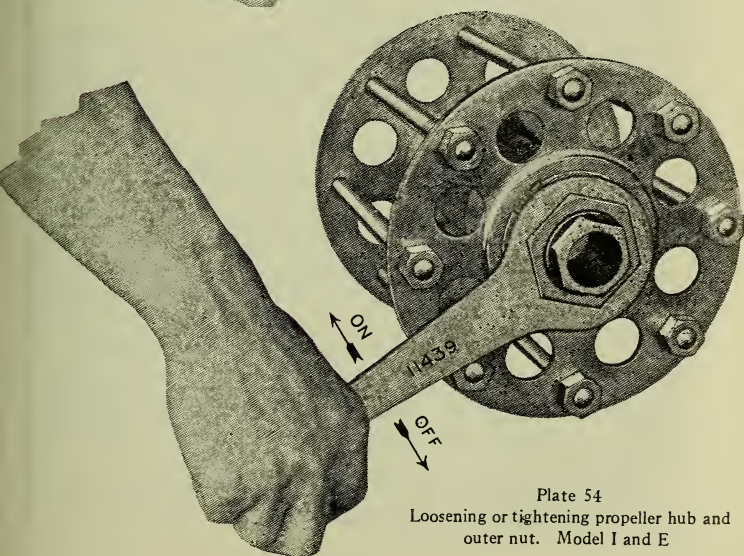


Plate 54  
Loosening or tightening propeller hub and  
outer nut. Model I and E

## **PART XXIII**

### **MAINTAINANCE**

#### ***After Five Hours' Running***

The distributor of the Dixie Magnetos should be cleaned to avoid any skipping or missing in their operation.

The brushes of the high tension distributors should be oiled, preferably with Three-In-One Oil, likewise the path of the brushes in the distributor block should have a light coating of oil. This prevents the scattering of carbon dust in the distributor blocks, which causes short-circuiting or firing in the wrong cylinder.

Oil the leather in the gasoline air pump with a dash of neatsfoot oil.

#### ***After Ten Hours' Running***

Before each important flight, clean the spark plugs (with alcohol and gasoline) and adjust the gap to .021". The magneto distributors, oil filter and oil pressure relief valve should also be cleaned.

Tighten the oil and water gland nuts, A-10380-A and 11682 respectively, to do this loosen set screw B-754. Both these packing nuts have right-hand threads. Plate 43.

The exhaust pipes should be removed from the engine and by means of the propeller, the engine should be turned over compression on each cylinder, feeling the compression to ascertain whether there is any leakage. If an exhaust valve is leaking the escaping gas can be heard coming out of the exhaust port of the particular cylinder. If it is in the piston rings it can be heard leaking from the crankcase breather.

If the valves are found to leak badly they should be reground; if piston rings, they should be renewed. Instructions for this will be found under disassembly.

Remove the carburetor strainer and clean the strainer chamber as well as the strainer.

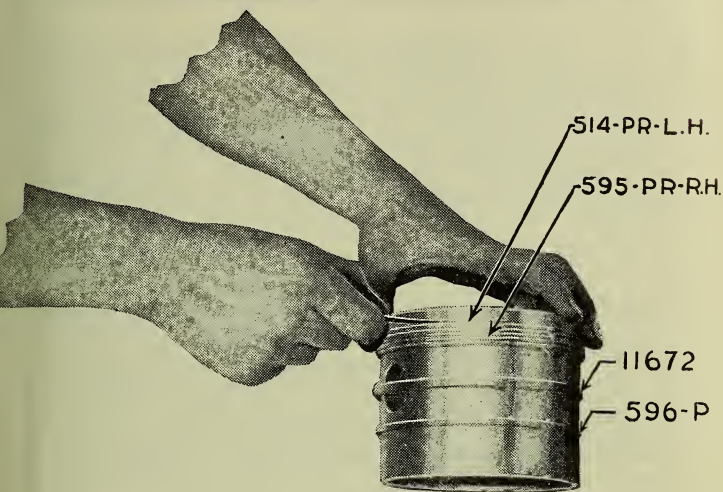


Plate 55

Trying the piston rings for side clearance with a feeler. Model A, I and E

## ***After Every Twenty Hours***

Clean the water filter. The water in the water jackets and radiator should be drained and the water jackets and radiator washed out and refilled with clean water. Oil the magnetos.

## ***Every Fifty Hours***

Clean carbon deposits, if any, out of the combustion chamber after the cylinder blocks have been taken off. Regrind the valves (instructions for this will be found under disassembly and reassembly). Do not unscrew the steel cylinder sleeves from the water jackets as this is a factory operation.

Remove the camshaft snap ring A-10488-A on the front end of the camshaft. The camshaft washers A-10489-A should then be removed, the interior of the camshaft should be washed thoroughly with gasoline or kerosene and cleaned by turning a jet of compressed air into them. This will remove all sediment

of old oil and any foreign matter that may have collected. The same thing should be done with the crankshaft by removing the plugs A-11324-A and the oil pipes in the lower half of the crankcase by removing the main bearings. This should always be done in case a bearing is burned out, in order to remove any babitt in the crankshaft oil holes or interior of the camshaft.

The main crankshaft bearings should be examined and if found faulty should be renewed. Examine the connecting rod bearings 11675 and connecting rod bearing caps 11676, if found faulty they should be replaced. If these are replaced, the flat surface on the top of 11676 should be scraped to fit the flat ends on the lower end of the connecting rods 11674.

All piston rings and oil scraper rings should be renewed. See Plate 55.

The air pump plunger leather B-331, should be examined and renewed, if necessary.

All rubber hose connections should be examined and if found extra soft or leaking should be renewed. There is extra hose supplied in the spare parts box shipped with each engine.

The oil pump gear bushing A-9648-A; vertical shaft bearings (lower) A-9647-B; vertical shaft bearings (upper) A-9646-B; camshaft bearings A-9619-B, A-9620-B, A-9622-B, should be examined. Some times there happens to be an excess amount of dirt or foreign substance in the oil, causing the bearings to wear much faster than they should. Under ordinary conditions these should not need replacing after 50 hours of running.

Examine the oil pump vanes A-B-194-A to see if they are worn excessively.

The valve tappets A-9615-B should be examined for excessive wear and renewed if found necessary.

The valve guides and valves should be examined; if excessive wear is found in the guides, or the valves (particularly the exhaust) burnt they should be renewed.



## ***Caution About the Renewing Valves.***

Never renew a valve that needs only regrinding. Always remember that an old valve reground is always better than a newly fitted valve. The reason for this being that the old valve has had all the strains removed in the steel due to the heat under which it is subjected while being pounded on its seat. An old valve when properly reground will hold its seat and will not warp nearly as soon as a new one.

## ***Fitting New Connecting Rods to the Crankshaft.***

The inner connecting rod bearing cap should be first fitted to the crankshaft. Do not under any circumstance remove any metal from the connecting rod bearing 11675 and bearing cap 11676 where they are joined together as this will spoil the fit of the outside connecting rod which runs directly on the center of the bronze.

The babbitt of the inside diameter of the bearing 11675 and cap 11676 are machined smaller than the crankshaft, leaving metal to ream out to the crankshaft diameter, or spotted with blue and scraped until the bearing is .0015" loose on the crankshaft diameter. The end clearance between the inner connecting rod and crankshaft should be .009".

See "Clearance Allowance Chart."

After the inner connecting rod is fitted to the crankshaft and locked in place the outer rod can be placed over it and should be fitted .003" loose on the diameter and .007" end clearance on the inner rod.

See "Clearance Allowance Chart."

## ***Fitting a New Ball Bearing on the Rear End of the Crankshaft.***

The inner race of the ball bearing should be a loose fit on the crankshaft and is locked in place by the crankshaft gear 9638. The crankshaft gear is held in place by the crankshaft centering lock nut 10637.

The outer race of the ball bearing should be a .0005" loose fit in the upper and lower crankcases. This is to



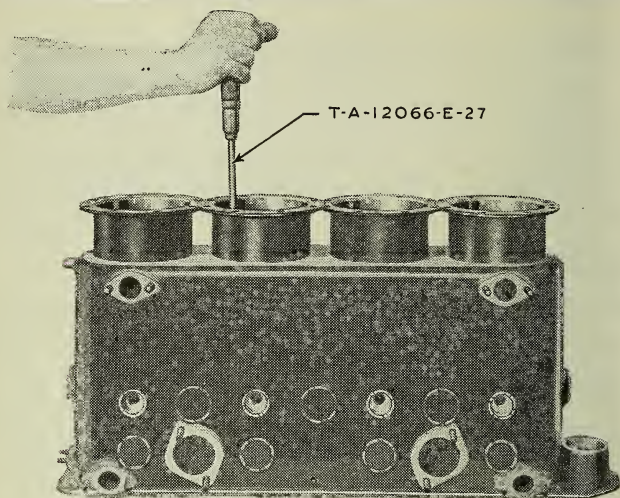


Plate 56  
Grinding Valves. Model A, I and E

allow the race to creep in the crankcases and thus distribute the wear in the ball bearing.

### ***Fitting New Camshafts or New Camshaft Bearings***

The camshafts have three bronze bearings, the center one is made in two pieces in order to get the bearing on the shaft.

The thrust (in both directions) is taken care of by the rear bearing. The boss on the back of the camshaft gear comes in contact with one end of the rear bearing while the rear face of the exhaust cam No. 4 cylinder runs against the other end of the bearing. The end play between this bearing and shaft should be .020". The end play between No. 1 exhaust cam and the front bearing should be .025". All six bearings are fitted with .003" clearance on the diameter.

There should be a back-lash of .010" between the upper vertical shaft gear and the camshaft gear. The back faces (or end of the teeth) should be flush within (one thirty-second of an inch)  $\frac{1}{32}$ ".

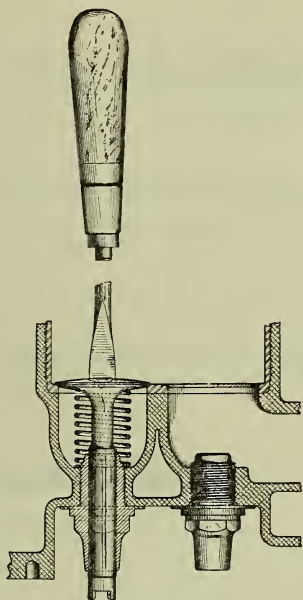


Plate 57

Showing relief spring placed under the valve when grinding the valve  
Model A, I and E

## ***Grinding the Valves.***

It is necessary to remove the cylinders from the engine and also remove the valves from the cylinders, they can then be reground in the following manner: In Plate 56 it will be noticed the cylinder block is inverted and a long bladed screw-driver is being used to grind in the valves.

A light spring is inserted under the valve to partially counterbalance the weight of the tool used for turning the valve. See Plate 57. Abrasive should be applied to the valve seat and the valve placed in the particular cylinder in which it belongs.

In grinding the valve, do not revolve it, but rock it backward and forward, lift frequently off its seat,

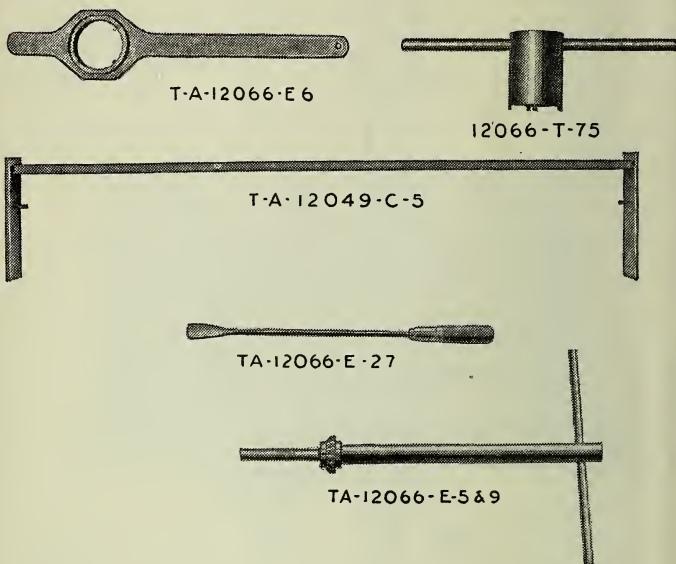


Plate 58

Tools for reseating valve seat in cylinder sleeve and removing valves from the cylinder. Model A, I and E.

change its position on the seat in order to distribute the abrasive evenly and prevent cutting grooves in the valves, and also to grind the valve evenly.

Valves should not be reground any oftener than is absolutely necessary and then only enough to insure a perfect seat. If a valve is pitted or warped excessively, it should be placed in a grinding machine and its seat ground concentric with the stem, removing all pit marks and any warping. In the case of valve warping the valve seat in the cylinder should be trued with a valve seating reamer, shown in Plate 58, before grinding in the valve.

The abrasive should be carefully washed off the valve, the seat and the inside of the cylinder.

In emergencies the cylinder block can be layed on its side on a bench and the valves removed without either wooden blocks, cradle, or yoked tool, but it takes longer, and the tools are well worth having, as they save time and give better results.

### ***Testing Valves for Leaking.***

After being ground the valves should be tested for tightness. This can be done best by inverting the cylinder with the valves in place and pouring a small quantity of gasoline in the cylinder. Spark plugs will have to be screwed in the cylinders to keep the gasoline from running out. Watch for escapage around the valves. If the valves show any leak, they should be carefully reground.

### ***Regrinding the Seat on the Valve in a Grinding Machine.***

The grinding of valve seats in a grinding machine previous to grinding them by hand in the cylinder is resorted to only when the valve seat is badly burned or pitted.

The valve can be chucked in a fixture similar to that shown in Plate 59 and the fixture placed in a small grinding machine.

The valve seat can then be ground true with the stem by using some form of grinding wheel.

**Caution:** Under no circumstances use the center in the valve head for regrinding, when regrinding in a grinding machine.

The valve is now ready to be reground in its particular seat in the cylinder as explained above.

### ***Refacing the Valve Seat in the Cylinder.***

If the valve seat in the cylinder is burned or pitted so that it would require a great amount of grinding





to make a proper seat, it can be reseated with a special tool, as stated above. This tool is shown in Plate 58 TA-12066-E-5 and 9, and can be furnished by the Wright-Martin Aircraft Corporation.

The shank that fits in the valve guide must be a perfect fit otherwise the reamer will chatter and do more harm than good. There are two shanks furnished, one for inlet valves and one for exhaust valves. Do not take any more metal off than is absolutely necessary to "true up the valve seat" otherwise the seat will become too wide.

### ***Fitting a New Crankshaft and New Crankshaft Bearings.***

In fitting a new crankshaft if the main bearings are badly worn or cracked, it is best to replace them with new bearings.

The same will apply to the connecting rod bearings.

Assuming the engine has already been taken apart, as the discussion of this is taken care of under "Disassembly," and that new bearings are to be fitted, proceed as follows:

The upper halves of the main bearings should be fitted in the upper half of the crankcase. They should be driven into the crankcase by light tapping, using a block of hard wood, against the bearing. The case should be blued where the bearings fit and the bearing removed to see if it has a good bearing contact in the crankcase, if not, the case should be scraped to fit. The same should be done for the lower half of the crankcase.

The crankcases with their main bearings fitted should be bolted together and if a line reamer TA-12045-C-2 is available they should be line reamed.

For clearances see "Clearance Allowance Chart."

The crankcases being separated, the crankshaft can be tried in each half, taking note of the end clearance on the bearings, about .035" to .040" the thrust of the crankshaft being taken, in both directions by the ball thrust bearing. The crankshaft should have a light coating of blue placed on it and the bearings marked from the shaft, they should be well spotted from the shaft and if not should be hand scraped until all the high spots are removed. After all hand scraping is finished and a good bearing is obtained, the bearing should be burnished with a smooth dull edged tool. The crankcases should be bolted together with the crankshaft in place. It should be possible to rotate the crankshaft when in place, with very little effort. The crankshaft should be removed from the crankcase to assemble the connecting rods.

## PART XIX

### REASSEMBLING

#### *Caution.*

Care should be taken to cover all frictional surfaces freely with a good grade of gas engine cylinder oil when reassembling an engine, and to see that all parts are thoroughly cleaned both inside and outside.

The inner connecting rods with their bronze connecting rod bearings are used on the left-half block of cylinders, the outside rods operating on the right-hand block. Without any compression it should be possible to turn the engine over by hand on reassembly, by means of the propeller hub flange.

#### *Air Pump.*

When assembling the air pump can be screwed into its place at the rear part of the left-hand cylinder cover, with a suitable spanner wrench. The plunger in the air pump is forced up by one of the valve cams and is carried back by a helical spring. The plunger and admission valve are combined. The plunger is of a much used type, in which, during the suction stroke it allows the air to pass by the leather flange, and during the compression stroke the leather flange confines the air and forces it out beyond the check valve. The check is located above the compression chamber. This valve is a flat disk with a leather face and a guiding stem. The check valve works automatically. The air forces it open and a light helical spring closes it. Due to the short stroke and high speed, the leather plunger must be a good fit, neither too tight nor too loose. In order to give satisfactory service, the leather must be kept soft and pliable. Usually, a dose of Neatsfoot oil is all that is needed to soften the leather. Oil the leather every five hours of engine running. Do this by pressing the plunger back and injecting the oil into the intake ports around the base of the pump. It is sometimes necessary to replace either the plunger leather or the

check valve leather to make the pump deliver air. First be sure that the pump parts have been working properly; see that they do not stick. (See Plate 74.) (See "Clearance Allowance Chart.")

### ***Eccentric Vane Oil Pump Located in Lower Crankcase.***

The oil pump consists of a cast-iron body which fits in the lower half of the crankcase just above the water pump. This body has inlet ports along one side and exhaust ports along the opposite side. The exhaust ports must register with the ports in the crankcase leading to the oil pipe manifold. The intake ports must draw oil from one of the holes cored through the rear of the crankcase and having plug 10687 screwed into it. A rubber hose with a pipe is attached to this, the other end of which goes to the oil radiator or oil tank. (See plate 24). In order that this shall be carried out the bolt holes in the pump body flange are so spaced that it will not go together wrong.

The pump housing must fit its casing or lower half of the crankcase oil tight. The fit must allow the body to be withdrawn and replaced with very light (rawhide) mallet taps. Before assembling the pump to the crankcase, inspect the shaft A-10379-B and see how it fits the two bearings. Both bearings should spin on the shaft by hand. Yet there should be no perceptible play. The vanes must be a free fit in the pumpshaft, but must not have noticeable play. The glands must be a uniform fit to the walls of the pump from end to end. They should have an end clearance of from .002" to .005" when the shaft end vanes are held against their end bearing at either end. The shaft A-10379-B must have an end play between the end bearings which is barely perceptible to the hand. This must be felt before the paper gasket is put in place, while the bearings are held together by hand. When the gasket is in place and the ends clamped together by the bolts the end play in the shaft should be from .004" to .006". The bore of the pump body must be smooth, round and

true. When placing the paper gasket between the bracket A-10372-B and the oil pump body A-10424-B, be sure to put a hole in the gasket so that the oil which leaks by the shaft into the little oil pocket can be sucked back into the oil pump. After having put the pump driving pinion in place, test to see if both pinion and pump can be turned by hand. (See "Clearance Allowance Chart.")

### ***Gear Type Oil Pump.***

On assembling the oil pump gear 11816 and the oil pump idler gear 11817 in the magneto support oil pump body 11814, see that the end of the teeth have a .0035" clearance on the magneto support oil pump body 11814. Also see that there is .004" end clearance between the body and cover.

The eight fillister head screws 11820 can be replaced. See that the pump turns freely by hand before assembling it to the engine.

For further clearance on the gear shafts, etc., see "Clearance Allowance Chart."

### ***Water Pump.***

The water pump has only one moving part, *i. e.*, the shaft and impellor are integral. The thrust bearing is a thrust button placed directly under the center of the shaft. When the pump is assembled with a paper gasket between the body and the cover the shaft must have an end play of five to seven-thousandths of an inch (.005"-.007"). The impellor should spin easily when the pump shaft is twisted by the fingers. When the packing nut is repacked and screwed down, one should be able to turn the impellor with their fingers. Place the pump on its bracket so that the small tube union fitting will point towards the rear of the engine. The square head on the impellor shaft fits in the oil pump shaft. When both pumps are in place, one should be able to turn both by hand with the oil pump gear A-10499-B. The oil pump gland nut



A-10380-A cannot be tightened until after the water pump is assembled on the crankcase and should then be very lightly tightened. See "Clearance Allowance Chart."

### ***Lower Crankcase.***

After assembling the two pumps to the crankcase, replace the oil filter, assemble A-12016-A, and if found necessary, put a new gasket under its seat on the crankcase. Inspect bearings to see that they have been burnished properly and that they fit the crankcase. They should be tight in place and a uniform fit. A .0015" feeler must not enter between bearing and case at any of the margins. Cover the crankcase with a cloth to keep out dirt, if allowed to stand while the remainder of the engine parts are being assembled. (See "Clearance Allowance Chart.")

### ***Assembling Connecting-Rods to Crankshaft.***

Replace crankshaft plugs if they were removed. To lock these plugs, use a center punch and hammer. Never remove any metal from any part of the crankshaft for any reason. The crankshaft has been dynamically balanced with great care and it must not be put out of balance. The front of the shaft is the tapered end. The inner connecting-rods with bronzed boxes go on the left side of the engine and the outer rods go on the right side of the engine. The top half of the crankcase inverted can be used to hold the crankshaft while the connecting-rods are being assembled, but it is preferable to do it at the bench. The crankshaft ends can be held in wooden collars. Tighten and lock the four inner connecting-rods in place. Be careful about the plug in the end between the crank arms; do not bruise the babbitt on the rods. Be sure the caps and cap screws are in their correct places. See that the cotter pins are placed so they will not interfere with the crank arms. Do not use a small pin, use the largest cotter pin that will enter the hole.

The connecting-rods must have at least nine-thousandths of an inch (.009") end play on their journals. Try the rod to see if it will fall of its own weight; it should. Try to detect any binding by moving rod all the way around. The fit must be easy and uniform, that is, when turning slowly by hand, there shall be no noticeable change in friction. Be sure to get the proper rod in the proper place; all are marked. Also have the front side of the rods to the front. The side with the number on the rod portion goes to the front of the engine in both cases. The four outer rods go on next—see that their cotter pins do not interfere with the inner connecting-rods. When both rods are assembled, take one in each hand and try for uniform fit—see that there is no variation in the friction. When released, both rods should fall of their own weight. Binding is due to one or more of four things—too tight (generally)—interference at ends—rough places or rod sprung. Great care must be taken when remedying these ailments. The bearings when new are necessarily very free and after being worn cannot be taken up for wear but have to be renewed. (See "Fitting New Connecting-rods to the Crankshaft—Part XVII," also "Clearance Allowance Chart.")

### ***Assembling Thrust Bearing to Crankshaft and Crankcases.***

The Thrust Bearing consists of three races and two sets of balls. The balls are assembled in retainers. On the middle race there is pressed two cup rings. The outside of these rings are ground so that the middle race with the rings assembled will just fit their seat in the crankcase. This fit must be a close uniform fit. The race should go into its seat in both the upper and lower half of the crankcase when struck with the hand. It is sometimes necessary to scrape a few burrs and high spots from the sides of the grooves in the crankcase. After fitting the race to the crankcase fit the complete thrust bearing to the crankshaft. The propeller thrust bearing nut A-11003-A holds the thrust

bearing in its place. This nut also adjusts the play. It should be tight enough so there is no perceptible play, yet the middle race must spin when slapped with the palm of the hand. The thrust bearing locates the crankshaft laterally, so try the shaft in place before locking the nut. There should be thirty-five to forty-thousandths of an inch (.035"-.040") clearance between the faces of the crank arms and the ends of the main bearings. If the shaft lays too far one way remove the thrust bearing and turn it around so the race which was in front comes in the rear and see if it is better. Also try turning the middle race around. When the shaft is set satisfactorily lock the gland nut A-11003-A. If a new thrust bearing has been installed it will be necessary to drill a new hole for the locking wire. Use a No. 39 drill. Drill a hole  $\frac{1}{4}$ " deep in the shaft. After locking the nut make a punch mark on the shaft at the edge of the threads to indicate the location of the hole just drilled. (See "Clearance Allowance Chart.")

### ***Placing the Crankshaft Assembly in the Crankcase.***

The crankshaft is now ready to place in the lower half of the crankcase. It must be lowered into place level so the thrust bearing will not bind. One man holding connecting-rods 4L and 4R to hold up the rear end of the shaft. Another man at the front of the shaft can hold the tapered end in one hand and tap the top edge of the thrust bearing with his other hand. As the thrust bearing goes into place, the rear end of the crankshaft should be lowered.

### ***Joining Crankcases.***

See that the meeting surfaces are clean on both upper and lower halves. Shellac both and proceed to join the halves together. Tighten the two main bearing nuts at both ends first, so that the parting line will be pulled together before the shellac sets.

Try the two lower vertical shaft gears A-9941-B and the oil pump gear A-10499-B to see that they have six to ten thousandths of an inch (.006"-.010") end play and four to seven thousandths of an inch (.004"-.007") backlash. If the gears bind or have too much backlash see that the crankshaft is in place and well seated. See that the gear bushings are in place. See if the gear on the crankshaft is tight. The lateral position of the crankshaft is determined by the thrust bearing, therefore, the position of the crankshaft gear is fixed by the thrust bearing. Check everything thoroughly. When tightening the main bearing nuts, watch for studs which are too long. They can be detected when screwing the nuts in place. If the nut tends to spring back slightly when released, it shows that the nut is tight on the end of the stud and has not reached the crankcase; further tightening may twist the stud off—in any event damage a few threads. When a long stud is found remove the nut, and with a stud driver screw the stud into the crankcase far enough to allow the nut to seat properly. All of the nuts should be drawn down flush and then gone over and drawn tight, being careful not to draw them too tight. In some cases studs have been elongated by too much tightening. One whole revolution after they bear on the crankcase is sufficient and if some seem to be sufficiently tight before one turn is secured, stop. To lock these nuts, wire the heads of the opposite nuts together. Each of the nuts along the parting line of the crankcase must have a lock washer.

## ***Fitting Piston Pin.***

The piston pin must be a tight fit in the piston. (An easy drive fit.) The pin must be a free fit in the head of the connecting-rod. The inside diameter of the connecting-rod bushing is reamed to 1.1812" and the outside diameter of the pin is 1.181" diameter. This allows .0002" freedom and should never be less. The end play of the connecting-rod at the piston pin should be about  $\frac{3}{32}$ ". (See "Clearance Allowance Chart.")

***Fitting the Pistons on the Connecting-Rods.***

The pistons should be placed over the upper end of the connecting-rods and the piston pins 11671 driven in place with a piece of wood or brass. (See Plate 47.) The piston pin lock rings 11672 should be slid down on the piston until it goes in the groove at the piston pin, always making sure the ends of the rings do not come at the piston pin but preferably the top side of the piston.

***Assembling Valves in the Cylinders.***

In assembling the valves great care should be taken not to use an inlet valve for an exhaust valve. This also holds good for installing new valves. The stem clearance being larger on the exhaust valves than the inlet. The exact clearance will be found on a separate "Clearance Allowance Chart." The method of assembling the valves is the reverse of "Removing the Valves" which is found under "Disassembly." Part XVII.

***Assembling Vertical Shaft and Vertical Shaft Casing in Cylinders.***

Place vertical shaft thrust washer A-9645-A, with the taper side toward the gear, on the vertical shaft A-10473-B, then place the vertical shaft bearing upper A-9646-B on the vertical shaft and the vertical shaft collar A-9644-A placing them on the upper gear end of the shaft and pinning the collar, making sure there is fifteen-thousandths of an inch (.015") end play between the bearing and shaft. The shaft together with the bearing can then be placed in the cylinder and by light taps driven into place. Place the vertical shaft casing 11678 over the vertical shaft and with the Spanner wrench furnished with the tool equipment screw the casing on to the portion of the bearing which protrudes through the cylinder, the casing nut going against a shoulder of the cylinder and is locked by a spring lock ring. (See "Clearance Allowance Chart.")



## ***Assembling the Cylinder Blocks.***

The valves should be in their places before the cylinders are placed, as they cannot be placed afterward. If the oil pipe A-12032-C is assembled to the cylinder see that the packing nut AT-990-A is slipped upwards on the pipe. It can be held there by a little packing. Turn the crankshaft so that the heads of the four pistons on one side are level with each other. If an assembly stand is used that when tipped over, brings the pistons of this block vertical, this should be tipped. Then attach the vertical shaft gear cover 10661, placing the gear housing packing nut A-10357-A on the vertical shaft casing 11678. Turn the piston rings so that the joints are 180° apart. (The slots should be alternately left and right.) Hold the piston rings in place by means of an aluminum ring clamp or jig. (See Plate 46.) One man at each end of the cylinder block can lower it on the pistons and a man at the side can remove the clamp. (See Plate 45.) The cylinder block will go down of its own weight. Remove the ring clamp when the upper rings are recessed in the cylinders; replace the clamp to confine the oil rings at the bottom of the pistons. When all rings are in the cylinders, remove and dispose of the clamp. If the vertical shaft is assembled turn it so the tongue will enter the groove in the lower vertical shaft. See that the oil pipe enters the union fitting. Tighten the cylinder, stud nuts A-11305-A, the oil pipe packing nut and the vertical shaft packing nut. Tip the stand 90° (if one of this kind is used) in the opposite direction until the other side of the engine is vertical, turn the crankshaft a quarter of a turn, always in the direction of rotation, and go through the same procedure for the other block of cylinders.

## ***Timing the Camshafts.***

Valve tappets or mushrooms and cams should be smooth, remove score marks with a stone. If scoring is very deep, new tappets are required. When screwed down tight, the mushroom must be within .002" of

being square with the valve stem. To test, set the valve stem in "V" blocks and use an indicator. (See "Clearance Allowance Chart.")

Timing will be found under a separate topic "Valve Timing." Part IX.

### ***Timing the Magnetos.***

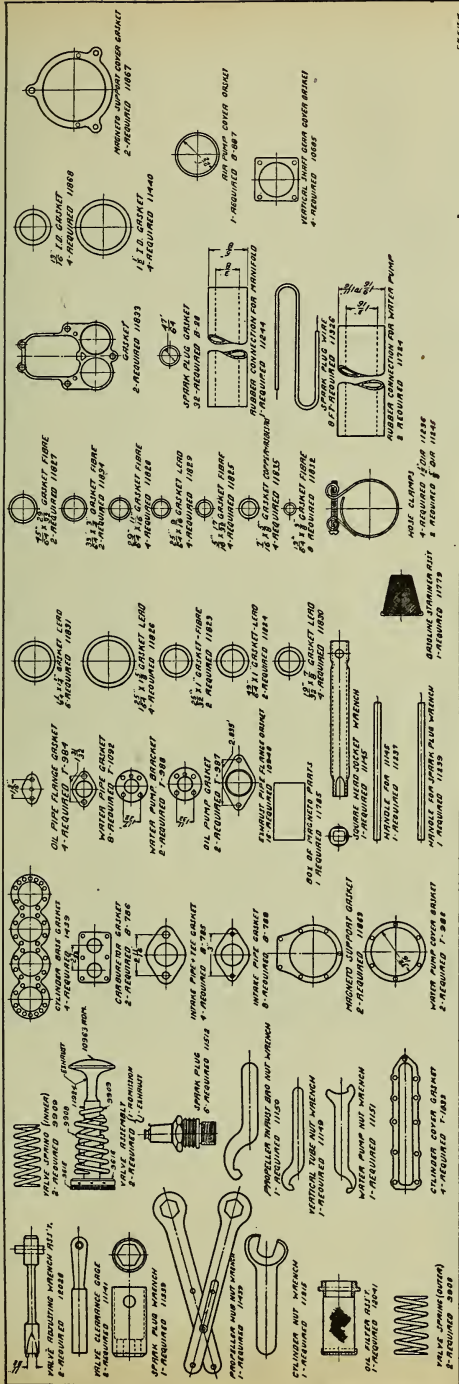
This will be found under a separate topic "Ignition System." Part V.

### ***The Tachometer Drive Shaft Attachment.***

When assembled shall have  $\frac{1}{32}$ " end play. The end play should be tried at several different places during a revolution. The shaft might bind at one place and not at another. The binding is due to misalignment, provided the swivel is perfectly free before being assembled to the engine. Sometimes placing the swivel a half turn from the original setting rectifies the trouble. If not, place a heavier washer under the tachometer housing where it screws into the cylinder cover. (See "Clearance Allowance Chart.")

### ***Emergency Assembly.***

In cases where piston ring clamps or engine stand is not available, the engine can be assembled by inserting the pistons (with their connecting-rods) in the cylinders by holding the rings of the pistons with a piece of sheet metal bent around the pistons (each piston having a separate clamp).



# Plate 60

**List of accessories, tools and spare parts, delivered with each engine. Model I and E**

## PART XX

### TROUBLE CHARTS

PART AT FAULT	TROUBLE	HOW IT EFFECTS THE ENGINE	REMEDY
SPARK PLUGS	Oil Deposit	Missing	Clean the plug; if this does not help replace with a new plug.
	Carbon deposit	Missing	Clean the plug, if this does not help, reset with a new plug.
	Points too close	Missing or skipping	Reset to .021".
	Points too far apart	Missing or skipping	Reset to .021"
	Cracked insulator	Missing or skipping	Replace with new plu .
	Leaking by threads in cylinder	Loss of compression	Screw plug tight in cylinder.
VALVES	Leaking by insulator	Loss of compression, missing	Replace with new plug.
	Warped or pitted on seat	Loss of compression. If inlet valves, may blow back in carburetor	True up in lathe and grind to seat.
	Burnt on seat	Loss of compression	If not burnt too bad, true up on lathe and grind to seat.
	Too tight in guide	Miss and skip (blow back in carburetor if inlet) loss of compression	Free the valve stem with crocas cloth. See Plate for clearance.

PART AT FAULT	TROUBLE	HOW IT EFFECTS THE ENGINE	REMEDY
VALVES— <i>Continued</i>	Too loose in guide	Seat will not stay ground, miss and skip, loss of compression after running a while.	Renew valve if worn. If still too much clearance, renew guide. See Plate for clearance.
	Carbon under seat	Missing, loss of compression	True up in lathe and regrind.
	Closes late	Engine miss and loss of power	Check clearance on back of cams and valve tappets 2 m/m. Retime camshaft.
	Opens early	Engine miss and loss of power	Check clearance on back of cams and valve tappets 2 m/m. Retime camshafts.
	Closes early	Engine miss and loss of power	Check clearance on back of cams and valve tappets 2 m/m. Retime camshafts.
	Opens late	Engine miss and loss of power	Check clearance on back of cams and valve tappets 2 m/m. Retime camshafts.
	Dirty distributors (DIXIE)	Missing or skipping	Clean out any carbon deposit and give a thin coating of lubricating oil.
	Breaker points not adjusted right	Missing or skipping	Adjust to .020".
	Broken down condensor	Missing, sparking and burning of platinum points	Replace with new condensor.
	Loose or broken wire in distributor block	Miss on that particular cylinder	Tighten or renew wire, if broken.
MAGNETOS			



PART AT FAULT	TROUBLE	HOW IT EFFECTS THE ENGINE	REMEDY
MAGNETOS— <i>Continued</i>	Collector brush on armature broken or dirty (SIMMS)	Missing	Renew, if broken, clean, if dirty.
	Armature shaft broken	ONE magneto will not work, loss in power.	Replace with new magneto.
	Magnetos weak	Missing	Recharge magnetos.
	Punctured or burned out coil	Missing or magneto dead	Replace with a new coil.
	Lean mixture	Backfire in air inlet of carburetor	Enrich the altitude control adjustment.
CARBURETOR	Rich mixture	Engine run uneven	Lean the altitude control adjustment.
	Engine run uneven ideling		Screw out to "LEFT" on the idle adjustment. "LEAN."
	Engine back fire ideling		Screw in to "RIGHT" on the idle adjustment. "RICH."
	Piston walls scored	Poor compression and loss of power	Replace with new rings.
PISTONS AND PISTON RINGS	PISTON—RINGS—Scored	Loss of power	Replace with new rings.
	Worn or broken	Loss of power	Replace with new rings.

PART AT FAULT	TROUBLE	HOW IT EFFECTS THE ENGINE	REMEDY
PISTONS AND PISTON RINGS— <i>Continued</i>	Slots in line	Loss of power	Respace on piston.
	Loose in grooves	Oil works by rings into combustion chamber	If new pistons are not fitted, fit with over-size <i>width</i> rings.
	Loss of spring	Loss of power, oil working into combustion chamber	Replace with new rings.
TIMING	VALVES: Camshafts not properly timed	Loss of power, backfiring in carburetor	Correct timing of camshafts.
	Clearance between back of cams and valve tappets not enough	Changes the point of opening and closing of valves, loss of power	Set to 2 m/m .0787" clearance.
	MAGNETOS: Too much advance	Loss of power, pre-ignition	Set magneto to fire 20°-20' before dead center on the compression stroke.
OIL PUMP AND LUBRICATION	Not enough advance	Loss of power, water in engine and radiator over-heating	
	Insufficient oil	Oil pressure drops	Replenish oil supply.
	Poor oil	Loss of power	Renew with good grade of oil as specified under "Lubrication System."
	Dirt in oil	Burned out bearings	Take engine down and renew bearings.

PART AT FAULT	TROUBLE	HOW IT EFFECTS THE ENGINE	REMEDY
OIL PUMP AND LUBRICATION - <i>Cont'd</i>	Pressure drops at times		Examine vanes in oil pump. Examine the oil to see if it is clean.
	Excessive pressure		Oil relief valve stuck. Remove valve and examine. Oil may be cold.
	Water does not circulate	Loss of power, water boiling	See if water pump shaft is broken, clean water system. Impeller may be broken. Replace.
WATER PUMP AND WATER CIRCULATION SYSTEM			
	Babbitt burned out	Knocking, loss of power, drop in oil pressure	Replace with new bearings.
	Babbitt burned out	Knocking, loss of power, drop in oil pressure	Replace with new bearing.
CONNECTING ROD BEARINGS	Bolts on connecting rods break	Knocking, loss of power	Replace with new bolts and repair any other damage.
	Scored wall	Knocking	Replace with new set of cylinders.
	Water leak in jacket	Will not hold water	Repair leak or replace with new cylinder.
CYLINDERS	Jacket covered with scale or clogged with dirt	Knock caused by over-heating	Dissolve scale and flush out water jacket with water under pressure.
	Worn or broken teeth meshed too deeply	Metallic knock, or rattle, grinding	Replace with new gears. Mesh properly.
TIMING GEARS OR CAMSHAFT DRIVE			

## PART XXI

### DATA

#### HISPANO-SUIZA

#### MODEL I 150 H. P.

Number of cylinders .....	8
Bore of cylinders.....	120 m/m—4.724"
Stroke of cylinders.....	130 m/m—5.118"
Displacement.....	11762.15 cu. cm.—718.88 cu. in.
Weight of engine, complete with propeller hub, flange and bolts, carburetor mounted, and two magnetos but without radiator, water, oil, start- ing device, propeller or gasoline supply system, approximately.....	470 lbs.
Compression ratio.....	4.72 to 1
Brake horsepower at 1450 r. p. m. on ground.....	150
Firing order.....	1L-4R-2L-3R-4L-1R-3L-2R
Rotation of Engine standing at back and looking toward propeller.....	Clockwise
Rotation of camshafts (looking toward propeller) .....	Anti-clockwise
Speed of camshaft.....	One-half engine speed
Tachometer connection speed.....	One-half engine speed
Tachometer connection rotation (looking toward propeller).....	Anti-clockwise
Diameter of valves (at clear).....	50 m/m—1.968"
Lift of valves.....	10 m/m— .393"
Clearance between back of cam and valve tappet .....	2 m/m—.078"
Rotation of right-hand magneto (looking at driv- ing end).....	Anti-clockwise
Rotation of left-hand magneto (looking at driving end).....	Clockwise

# H I S P A N O — S U I Z A

---



---

Magneto speed.....	Same as engine speed
Gap on Magneto platinum points.....	.020"
Spark plug gap.....	.021"
Maximum gasoline consumption per H. P. hour...	.55 lbs.
Gasoline consumption gallons per hour, at 1450 r. p. m. of engine on ground, about.....	13 to 15 gal.
Air pump capacity at 1450 r. p. m. of engine on ground.....	10 lbs.
Gasoline air pressure (not over).....	2 lbs.
Maximum oil consumption lbs. per H. P. hour	.0388 lbs.
Oil consumption gallons per hour at 1450 r. p. m. of engine about.....	$\frac{3}{4}$ gal.
Delivery of oil pump against 50 lbs. pressure at 66° C. of 150° F. and 1450 r. p. m. of engine about .....	2.20 gal.
Oil pressure, with oil temperature at 66°C or 150°F and engine making 1450 r. p. m.....	about 50 lbs.
R. P. M. of oil pump.....	1.2 times engine r. p. m.
Amount of oil in lower crankcase.....	Dry Sump
Rotation of oil pump looking from top.....	Anti-clockwise
Oil temperature even in the hottest weather not to exceed 93°C or 200°F and best not to exceed .....	71°C or 160°F
Delivery of water pump with free outlet, at 49° or 120° F. and 1450 r. p. m. of the engine, about	26½ gal.
R. P. M. of water pump.....	1.2 times engine r. p. m.
Rotation of water pump looking from top.....	Anti-clockwise
Maximum outlet water temperature.....	88° C or 190° F.
Desired outlet water temperature.....	38° C or 100° F.
Intake opens .....	10° after top center
Intake closes.....	50° after bottom center
Exhaust opens.....	45° before bottom center
Exhaust closes.....	10° after top center
Spark advance.....	20°—20' before top center



## A E R O N A U T I C A L   E N G I N E S

---

Degrees inlet valves stay open.....	220°
Degrees exhaust valves stay open.....	235°
Carburetor: Twin Type (Stromberg NA-D4)	
Barrel Diameter.....	1.937"
Choke Diameter at throat.....	1.312"
Body metering nozzle.....	No. 46 Drill
Accelerating metering nozzle.....	No. 44 Drill
Altitude adjustment will lean the mixture about $33\frac{1}{3}\%$ .	

## **PART XXII**

### **APPENDIX**

#### **INSTRUCTION FOR CARE AND OPERATION OF MODEL "E" 180 H. P. HISPANO-SUIZA ENGINE**

##### **GENERAL DESCRIPTION**

The Model "E" Hispano-Suiza Aeronautical engine is similar to Model "I" in that it is an eight-cylinder "V" type, four cycle, water cooled engine, the same size cylinders, namely 120 m/m-4.72" bore and 130 m/m-5.11" stroke; developing 180 H. P. at sea level. There are two cylinder blocks, each containing four cylinders, their center lines making an angle of 90° between them. The propeller is driven directly off the crankshaft as in the Model "I" engine.

The following changes have been made on Model "E" engine over Model "I" with a view to increasing the power output and strengthening the different parts to withstand the additional power.

##### ***Compression Ratio.***

The compression ratio has been raised from 4.72 to 1 to 5.33 to 1. This has been done by increasing the distance from the center of the piston pin holes to the top of the piston.

##### ***Carburetor.***

A larger Stromberg carburetor, with 2" barrels, has replaced the smaller one in order to take care of the increased volume of mixture that will be used in the engine when run at the increased engine speed at which it operates. The adjustments and general make up of the carburetor are the same as Model "I".

## A E R O N A U T I C A L   E N G I N E S

---

### **Model "E" Stromberg Carburetor Specifications.**

Large venturi tube	1.50"	} Stromberg Carburetor
Body metering nozzle	No. 42 Drill	
Accelerating metering nozzle	No. 40 Drill	

### **Magneto Setting.**

The magneto advance is 25° before top dead center whereas in Model "I" and Model "A" it is 20°-20'.

### **Oil Consumption.**

This engine being run with a dry sump, the oil consumption is comparatively low, considering the r. p. m. at which the engine operates—the exact amount will be found in the data following.

### **Size of Propeller—Model "E."**

The engine should be fitted with a suitable propeller to give from 1700 to 1750 r. p. m. on the ground or sea level with the engine wide open.

## **DATA**

### **HISPANO-SUIZA**

#### **MODEL E 180 H. P.**

Number of cylinders.....	8
Bore of cylinders.....	120 m/m—4.724"
Stroke of cylinders.....	130 m/m—5.118"
Displacement.....	11762.15 Cu. Cm.—718.88 Cu. In.
Weight of engine, complete with propeller hub, flange and bolts, carburetor mounted, and two magnetos, but without radiator, water, oil, start- ing device, propeller or gasoline supply system, approximately.....	470 lbs.
Compression ratio.....	5.33 to 1
Brake horsepower, on ground .....	180

# H I S P A N O — S U I Z A

---

Firing order.....	1L-4R-2L-3R-4L-1R-3L-2R
Rotation of Engine standing at back and looking toward propeller.....	Clockwise
Rotation of camshafts (looking toward propeller) .....	Anti-clockwise
Speed of camshaft.....	One-half engine speed
Tachometer connection speed.....	One-half engine speed
Tachometer connection rotation (looking toward propeller).....	Anti-clockwise
Diameter of valves (at clear).....	50 m/m—1.968"
Lift of valves.....	10 m/m— .393"
Clearance between back of cam and valve tappet .....	2 m/m—.078"
Rotation of right-hand magneto (looking at driving end).....	Anti-clockwise
Rotation of left-hand magneto (looking at driving end).....	Clockwise
Magneto speed.....	Same as engine speed
Gap on Magneto platinum points.....	.020"
Spark plug gap.....	.021"
Maximum gasoline consumption per H. P. hour.....	50 lbs.
Gasoline consumption gallons per hour, on ground, about.....	15½ to 16 gal.
Air pump, capacity on ground.....	15 lbs.
Gasoline air pressure (not over) .....	2 lbs.
Maximum oil consumption lbs. per H. P. hour..	.030 lbs.
Oil consumption gallons per hour, about.....	3 qts.
Delivery of oil pump against 50 lbs. pressure at 66° C. of 150° F. and 1800 r. p. m. of engine about .....	2.20 gal.
Oil pressure, with oil temperature at 150°, about.....	60 lbs.
R. P. M. of oil pump.....	1.2 times engine r. p. m.
Amount of oil in lower crankcase.....	Dry Sump
Rotation of oil pump looking from top.....	Anti-clockwise

## A E R O N A U T I C A L   E N G I N E S

Oil temperature even in the hottest weather not to exceed 93° C or 200° F and best not to exceed	71° C or 160° F
Delivery of water pump with free outlet, at 49° C or 120° F. and 1800 r. p. m. of the engine about	2 gal.
R. P. M. of water pump	1.2 times engine r. p. m.
Rotation of water pump looking from top	Anti-clockwise
Maximum outlet water temperature	88° C or 190° F
Desired outlet water temperature	38° C or 100° F
Intake opens	10° after top center
Intake closes	50° after bottom center
Exhaust opens	45° before bottom center
Exhaust closes	10° after top center
Spark advance	25° before top center
Degrees inlet valves stay open	220°
Degrees exhaust valves stay open	235°
Carburetor: Twin type (Stromberg NE-D5)	
Barrel Diameter	2.18"
Large Choke Diameter at throat	1.50"
Body metering nozzle	No. 42 Drill
Accelerating metering nozzle	No. 30 Drill
Altitude adjustment will lean the mixture about	33 $\frac{1}{3}$ %.

### **UNPACKING MODEL "E" ENGINES (EXPORT)**

#### ***Shipping Weight and Size.***

The shipping weight of the Model "E," 180 H. P. Hispano-Suiza Engine, is about 990 lbs.

The Hispano-Suiza Engines are shipped from the factory completely enclosed in a substantial box fitted with permanent slings. The engine itself is covered



## H I S P A N O — S U I Z A

---

with a water-proof oil cloth. The dimensions of the shipping box are:

Length	55"
Width	38"
Height	40"
Displacement	49 cu. ft.

To unpack, cut the two sealing wires, which will be found under tin plates at each end of the box. Remove eight lag screws in the sides of the box. The engine will be found securely bolted down with six bolts to supports or sills fastened and braced to skids, the skids being fastened to the sides of the box with the above-mentioned eight (8) lag screws. The end of the shipping box can be removed by removing the wood screws in the end. The complete engine with engine bed can be removed through the end of the shipping box. Remove the nuts of the engine bed bolts and place two cables around each side of the engine between two or three of the steel sleeves. The engine can then be lifted with a suitable hoist.

### ***What to Rest the Engine On.***

Do not attempt even to partially rest the weight of the engine on the lower half of the crankcase or any part other than the separating flanges on the upper half of the crankcase.

### ***Where Parts are Found in Packing Box.***

At the rear of the shipping box at the top will be found the spare parts and tool equipment box.

The following parts will be found to be covered with paper:

- Carburetor air inlet.
- Water pump.
- Tachometer Drive.
- Crankcase breather.
- Air pump.

## A E R O N A U T I C A L   E N G I N E S

Magnetos, magneto drive and gear oil pump.

Vertical shafts casings.

Propeller hub.

Solid fibre gaskets are placed over the exhaust parts and water outlets and should be removed.

### ***Removing Oil from Outside of Engine.***

The interior of the cylinder sleeves (steel) are slushed with one-half pint of castor oil before shipping. This oil can be removed from the engine by removing the outside spark plugs and turning the engine over a number of revolutions as fast as possible.

This oil can be caught in a can at the spark plug hole and if properly cleaned used for engine lubrication.

Before shipping the Hispano-Suiza Engines, all the steel and aluminum parts are slushed with heavy oil. A spray of gasoline under air pressure will remove this from the engine. If the engine is to be started immediately after washing, keep the magnetos from getting gasoline in them otherwise there will be danger of fire.

## **PART XXIII**

### **INSTRUCTIONS FOR THE CARE AND OPERATION OF MODEL "A" 150 H. P.**

#### **HISPANO-SUIZA ENGINE**

##### **GENERAL DESCRIPTION**

The Model "A" Hispano-Suiza Aeronautical engine is similar to Model "I" in that it is an eight-cylinder "V" type, four cycle, water-cooled engine, the same size cylinders, namely 120 m/m—4.72" bore and 130 m/m—5.11" stroke; developing 150 H. P. at 1450 r. p. m. at sea level. There are two cylinder blocks, each containing four cylinders, their center lines making an angle of 90° between them. The propeller is driven directly off the crankshaft as in Model "I" engine.

The following parts differ in their design from the corresponding parts of the Model "I" engine:

##### ***Magneto Drive***

The magnetos are mounted on extensions of the two main surfaces of the upper half of the crankcase and are driven from small gears located on the top of the lower vertical shaft gears A-9941-B.

The timing of the magnetos is the same as for Model "I."

##### ***Connecting Rods.***

The connecting rods are of tubular section, made of heat-treated alloy steel. The inside rod turns directly on the crankpin while the outside one, which is forked, turns on the outside of the extended part of the former. The inner rod has its cap attached by two bolts and is babbitted both inside and outside on the boxes which are integral with the rod. The outside rod is forked, the cap, which is attached by four bolts, being provided with a bridgepiece to give stiffness. All babbitt is on the inside connecting rod.

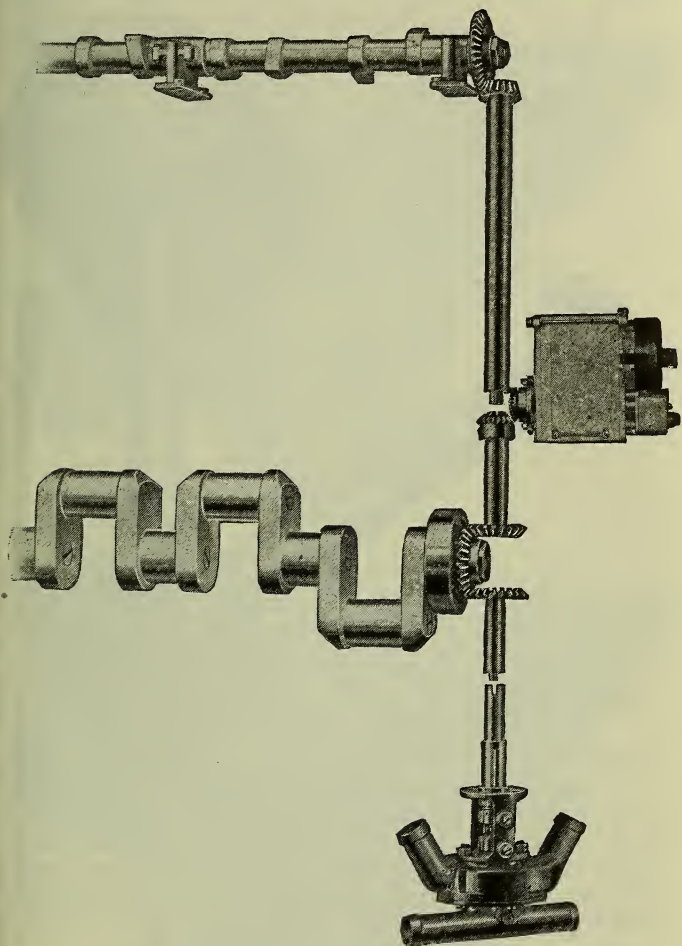


Plate 61

Magneto Drive. Model A

The upper ends of the connecting rods are provided with bronze bushings the same as in Model "I."

Plate 62 shows this type of rod.



Plate 62  
Piston and connecting-rods assembled.  
Model A

### ***Pistons.***

The pistons are aluminum castings, ribbed and provided with four narrow rings at the top in two grooves and one oil ring near the bottom. The hollow piston pins are of large diameter and made of case-hardened alloy steel. Each is fixed in its position by a single set screw passing completely through one end.

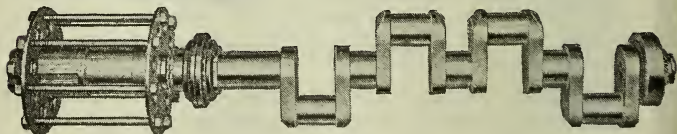


Plate 63  
Crankshaft and propeller hub assembly. Model A



# AERONAUTICAL ENGINES

---

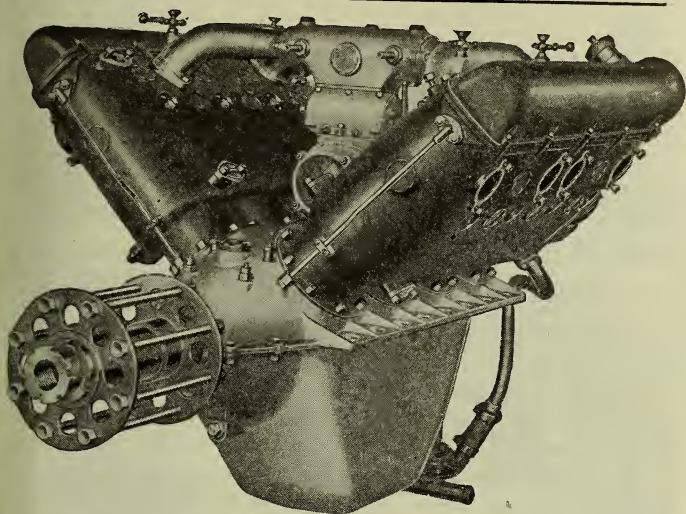


Plate 64  
Three-quarter front view of Model A

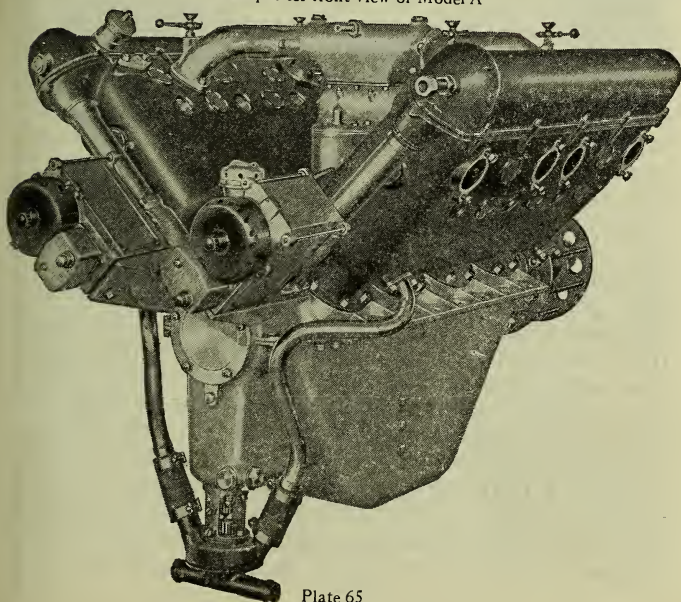


Plate 65  
Three-quarter rear view of Model A

## **CARE AND MAINTAINANCE OF THE MODEL "A" 150 H. P. HISPANO-SUIZA ENGINE**

Any care or maintainance not taken care of below for Model "A" engine will be found under "Care and Maintenance" of Model "I" engine. In other words all parts not taken care of below are similar.

### **(1) *Fitting New Magneto to Model "A" Engines.***

Before fitting the magneto to the engine, the magneto shaft and flanges should be inspected as follows:

Turn the magneto armature shaft by hand to see that it does not bind. It should turn freely and rock back when released.

If the magneto flange and gear are not assembled, remove the key from the magneto shaft. Test the fit of the flange and shaft taper with blue and see that the bearing is good. See that the flange hub does not ride on the top face of the key. If necessary, remove a little of the key on top with a fine file.

It is very essential that the magneto shaft shall run true. Try the hub on the flange to see that the shaft turns true within .002", which is the greatest variation permissible. Use a micro-dial indicator, if one is available, to determine these limits. Also test the face of the magneto coupling 9958 near the circumference to see that the flange does not wobble. The greatest permissible variation here is .003". Assemble the magneto gear A-9642-B and test the gear to see that it also runs true. See that the magneto base is flat and free from high spots or foreign matter, also that the gear teeth are clean and smooth. If any of the above requirements are not met, the defective part is to be replaced by a good part. The magneto bed on the crankcase must also be clean and free from high spots.

Make a trial setting of the magneto without the magneto pinion cover A-9994-B. First see that the dowels on the magneto base are driven out flush. Set magneto on its bed and screw magneto cap screws up

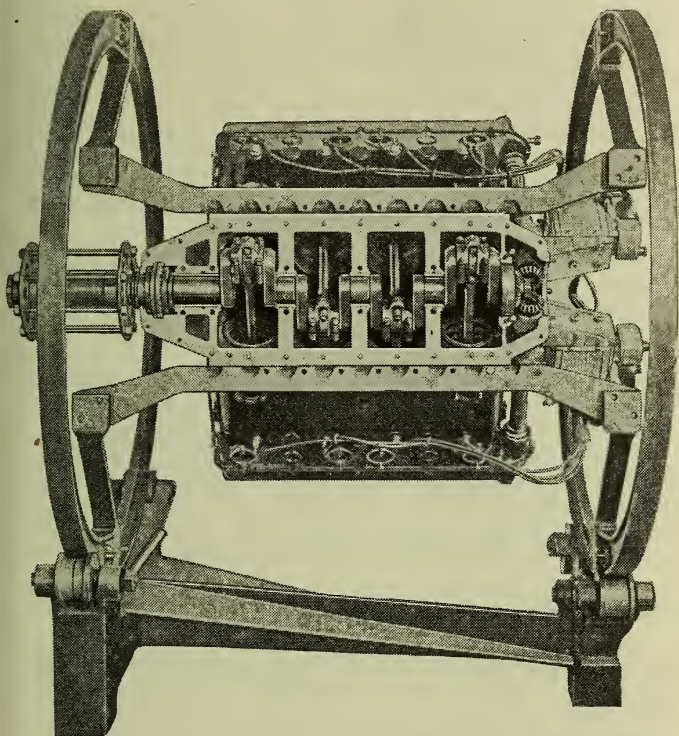


Plate 66

Showing the lower half of the crankcase removed for summary inspection.  
Model A shown, can be done on Model I and E

sufficient with the fingers to hold the magneto flush. Tap dowels back into place. If dowel pin-holes have not been drilled, mark position for them with scriber after magneto is satisfactorily set.

Remove the rear crankcase cover A-11231-B at the rear end of the engine, lift up on the lower vertical shaft gear A-9941-B in order to produce the back-lash that is produced when the engine is running. The magneto shaft should show a back-lash of .020" measured at the nut on the periphery of the flange. This back-



lash should not drop below .015", or shall not exceed .025". It is important to hold the lower vertical shaft up as this effects the back lash .004" to .008".

Before assembling the lower vertical shaft, gear A-9941-B to see if it turns freely in the bearing.

When the magneto sets so it will have the specified amount of back-lash, remove and assemble with magneto pinion cover in place.

When the magneto and housing are tightened down, the magneto must be free so that the back-lash as above specified, can be felt by the fingers at any angle when the engine is turned over by hand.

In fitting a new magneto gear housing, it may be necessary to take a little metal off of the bottom to make it set lower, so that the bearings will not bind. This should be done on a lapping plate. On final assembling, shellac the base on the housing so it will not leak oil.

See "Clearance Allowance Chart Model A."

### ***Timing Magneto to Model "A" Engine.***

The magneto timing is the same as found under Part V "Timing of the Magneto" except for the following:

In order to shift the magneto gear A-9462-B, which is bolted indirectly on the armature shaft of the magneto, the magneto has to be lifted from the base on which it is bolted. To do this, proceed as follows:

Loosen the gear housing packing nut A-10357-A and slide it up on the vertical shaft casing. Remove the four nuts A-B-93-A and then the four magneto cap screws 1440. Lift the magneto up together with the magneto pinion cover A-9994-B and change the setting of the gear as described under "Timing the Magneto" Part V.

The magnetos and pinion cover can be bolted down in place.

If the magnetos do not synchronize properly, the three bolts, holding the flanges 9958 and A-9462-B together, can be loosened. The flanges having elongated holes in them, can be shifted either way in order to correct the synchronizing of the magnetos. The bolts can then be tightened.

## ***Removing Connecting Rods—Model “A” Engines.***

Remove the cotter pins and nuts from the four bolts holding the outer connecting-rod. Remove the cap by a light tap on the lower bridged portion of the rod. Care must be taken not to spring the lower half of the outer connecting rod. A little abuse will cause this member to bind.

Remove the cotter pins and extract the two cap screws on the inner connecting rod.

Make sure when removing the rod that its lower half clears the plug in the end of the main bearing journal between the crankarms on the crankshaft. An interference here will burr the babbitt.

Keep the caps of the connecting rods bolted to their particular rod.

## ***Replacing Connecting Rods on Crankshaft—Model “A” Engine.***

The connecting rods are replaced in the opposite manner in which they are removed. For clearances see “Clearance Allowance Chart” Model “A.”

In fitting Model “A” connecting rods, make sure the stepped joint of the inner rod and cap are a very good fit, otherwise the rod will not hold its shape.

All babbitt is on the inside connecting rod and *cannot* be adjusted for wear. The inside of the inner rod running directly on the crankshaft while the outer rod runs on the babbitt, on the outside of the inner rod.

Rebabbitting these inner connecting rods is purely a factory proposition and should not be attempted at a flying field or repair station.



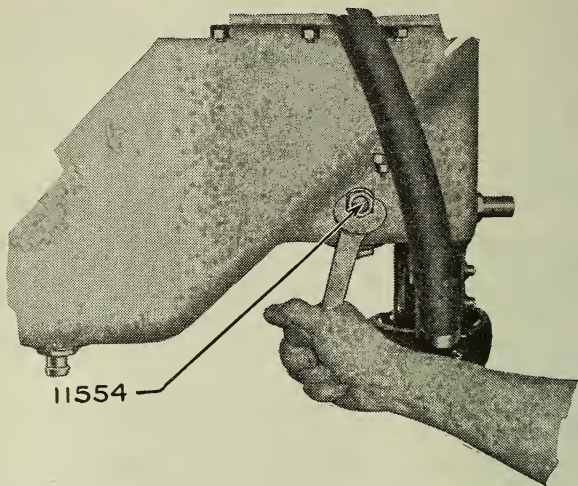


Plate 67

Removing oil pressure relief valve. Model A

### ***Removing Pistons from Connecting Rods—Model "A" Engine.***

Turn the crankshaft so the pistons to be removed are in the upper position.

Turn the oil rings so that the cotter pins in piston pin set screws A-B-862-A may be removed. Remove set-screws by turning to the left and withdrawing. Piston pins can be driven out with a pin driver, which will center itself in the hollow piston. See Plate 47.

The driver should be smaller than the piston pin. Use a mallet to strike with. Always back up the piston. See Plate 47. Always start to drive out the piston pin from the side opposite the piston pin set-screw.

It is not necessary to separate rods and pistons every time an engine is torn down, only when it is necessary to inspect piston pins and bearings.

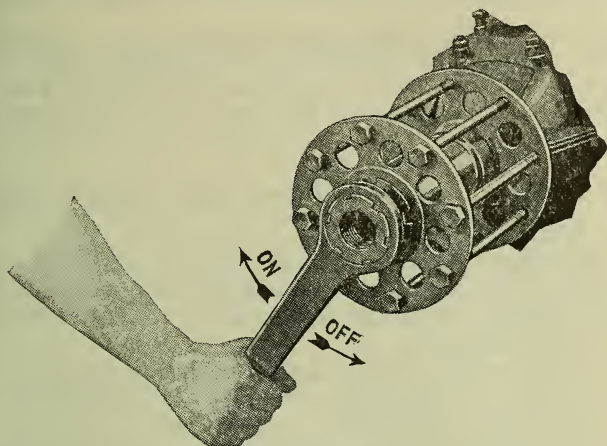


Plate 68

Removing or attaching propeller hub. Model A

## ***Replacing Pistons on Connecting Rods—Model “A” Engine.***

The piston may be assembled to the rods next. Each pin is marked. 1-L goes on the connecting rod nearest the tapered end of the crankshaft on the left side. 1-R goes on the right side just across from 1-L. The half-circular groove which carries the oil to the piston pins should always be turned toward the inside of the engine. The piston pins entering piston at the side where the lock-screw is located.

## ***Circulation with an Oil Radiation—Model “A.”***

When an oil radiator is used, always make sure the oil suction pipe A-6904-A is plugged with a brass plug A-11259-A, which is wired to the intake manifold of each engine when shipped.

## ***Starting a New Model “A” Engine without an Oil Radiator.***

Some of our Model “A” engines have been run without an oil radiator. In the event that oil pressure

does not register, make sure that the end of the oil pump suction pipe A-9604-A is *not* plugged with a brass plug. This can be examined by removing plug A-9606-A in the bottom of the lower half of the crankcase.

***Oil Level of Engine if Being Run Without Oil Radiator—Model "A."***

Before each start, be sure of the level of the oil in the crankcase by the aid of the gage plugs placed for this purpose in the right-hand side of the lower half of the crankcase.

The normal level corresponds to the height of the second plug, giving about 10 litres (2.64 gallons) in the crankcase; and should never be filled above the second gauge plug as the spark plugs will become fouled, in this event due to excess oil.

Always allow three (3) litres (about three (3) quarts) of oil for every hour the engine is run wide open.

## ***Zenith Airplane Carburetor Used on Model "A" Type 48 D. C.***

The Zenith Carburetor is of the compound nozzle type.

### ***Jets.***

The top of the main nozzles or jets are placed in the center of a venturi throat, where the velocity of the air is greatest. The idling jet is between the outside of this venturi or barrel of the carburetor and the float chamber and lets gasoline and air through the throttle in its closed position, thereby enriching the mixture for low speed.

### ***Float Mechanism and Strainer.***

The needle valve is placed through the center of the float. Directly below the float chamber is the strainer, which is held in place by a plug screwed in from the bottom. By removing this plug the strainer can be removed and cleaned. Gasoline is taken in through the side of this strainer chamber, passing through the needle valve seat and into the float chamber.

There is no adjustment for the gasoline level in the float chamber, it being set right at the factory.

## ADJUSTMENTS

### *Altitude Adjustment Zenith Carburetor.*

The mixture proportion delivered by this carburetor is subject to little variation in passing from sea level to approximately 915 meters or 3000 feet altitude. The pilot's control fitted with the proper size jets and the pilot's control lever in the "rich" position gives a slightly richer mixture than necessary. By moving the lever forward to the "lean" position, the mixture can be corrected for about 3050 meters or 10,000 feet altitude.

This control of the mixture is obtained by the rotation of the sleeve of the pilot's control, which opens to a greater or lesser extent, or closes off entirely, communication between the float chamber space and holes drilled in the barrel of the carburetor just above the top of the venturi.

The float chamber has also two smaller atmospheric vent holes communicating through gauze strainers with the interior of the air entrance of the carburetor. When the altitude adjustment is full open a considerable suction is communicated to the float chamber and this suction opposes the suction at the main jets, thereby reducing gasoline flow through the main jets.

When the altitude adjustment is shut off entirely atmospheric pressure exists in the float chamber and the maximum gasoline delivery is obtained. With the throttle only partially opened the gasoline flow is correspondingly reduced.

Since a strong suction exists in the float chamber when the control is in the "lean" position, care should be taken that the joint between the upper and lower halves of the carburetor is kept tight, also that the gasoline channel plugs in the lower part of the carburetor are drawn tight on their gaskets. If these are allowed to leak it will interfere somewhat with the mixture regulation.



## ***Idle Adjustment.***

The idle adjustment affects the low speed only and has practically no effect on the high-speed action. On top of the float chamber on the side of the barrel of the carburetor are two set-screws fastened with wire. Remove these screws and lift out the idling jets. These must be removed in order to be adjusted. Holding the top half and turning the bottom half to the right will cut down the air supply, thereby making the mixture rich at idling speeds. Turning to the left will lean the mixture.

An average adjustment is obtained when the idle adjustment screw is unscrewed about one-and-a-half full turns from a seating position. An exact adjustment is made at the factory when the engine is tested and will require changing only under extreme weather conditions.

It is sometimes found necessary to change the compensating jets to suit the varying weather conditions; using 150 compensating jets for warm weather and 170 for cold weather. In some cases an intermediate compensating jet of 160 has been used.

The jets above referred to are graded and numbered according to millimeters, thus 160 meaning 1.60 m/m or .063".

The venturis are numbered according to the smallest inside diameter, in millimeters.

## ***Carburetor Leaking or "Flooding."***

If leaking or flooding occurs, a careful inspection should first be made to see whether the leakage is due to some plug below the normal gasoline level of the carburetor being loose on its gasket, or whether the float valve is insecurely seated, allowing the level to rise so that the gasoline overflows from the main discharge jets. In the latter case the strainer chamber should be inspected and drained to remove any dirt, and the

carburetor flushed to wash out any particles of dirt on the needle valve seat. If this does not remedy the trouble it will be necessary to replace a new needle valve or seat, or both, as required. To do this the carburetor will have to be taken in half, the seat can then be moved from the bottom of the float chamber and a new needle inserted in the top half of the float chamber.

The level is determined by the float action and should be approximately 32 m/m or  $1\frac{1}{4}$ " below the junction of the two halves of the carburetor.

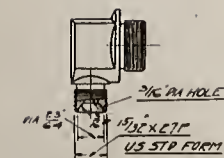
Both the compensator and main jets are readily accessible from the bottom of the carburetor after the air horn has been removed.











ENLARGED VIEW OF OIL CONNECTION

CENTER OF GRAVITY AS SHOWN IS GIVEN WITHOUT STARTING MECHANISM AND PROPELLER, BUT INCLUDES PROPELLER HUB, FLANGE AND BOLTS

WEIGHT OF MOTOR COMPLETE WITH PROPELLER HUB, FLANGE AND BOLTS CARBURETOR, IGNITER, TWO MAGNETOS BUT WITHOUT RADIATOR, WATER, OIL, STARTING DEVICE, PROPELLER OR GASOLINE SUPPLY SYSTEM APPROXIMATELY 450 LBS

WEIGHT OF PROPELLER HUB ASSEMBLY - AVERAGE - 17 LBS


WEIGHT OF PROPELLER - APPROX. 25 LBS


WATER IN JACKETS - 41 LBS

WEIGHT OF OIL IN TANK

- TO FIRST PLUG - 11 LBS
- SECOND - 18 LBS
- THIRD - 26 LBS

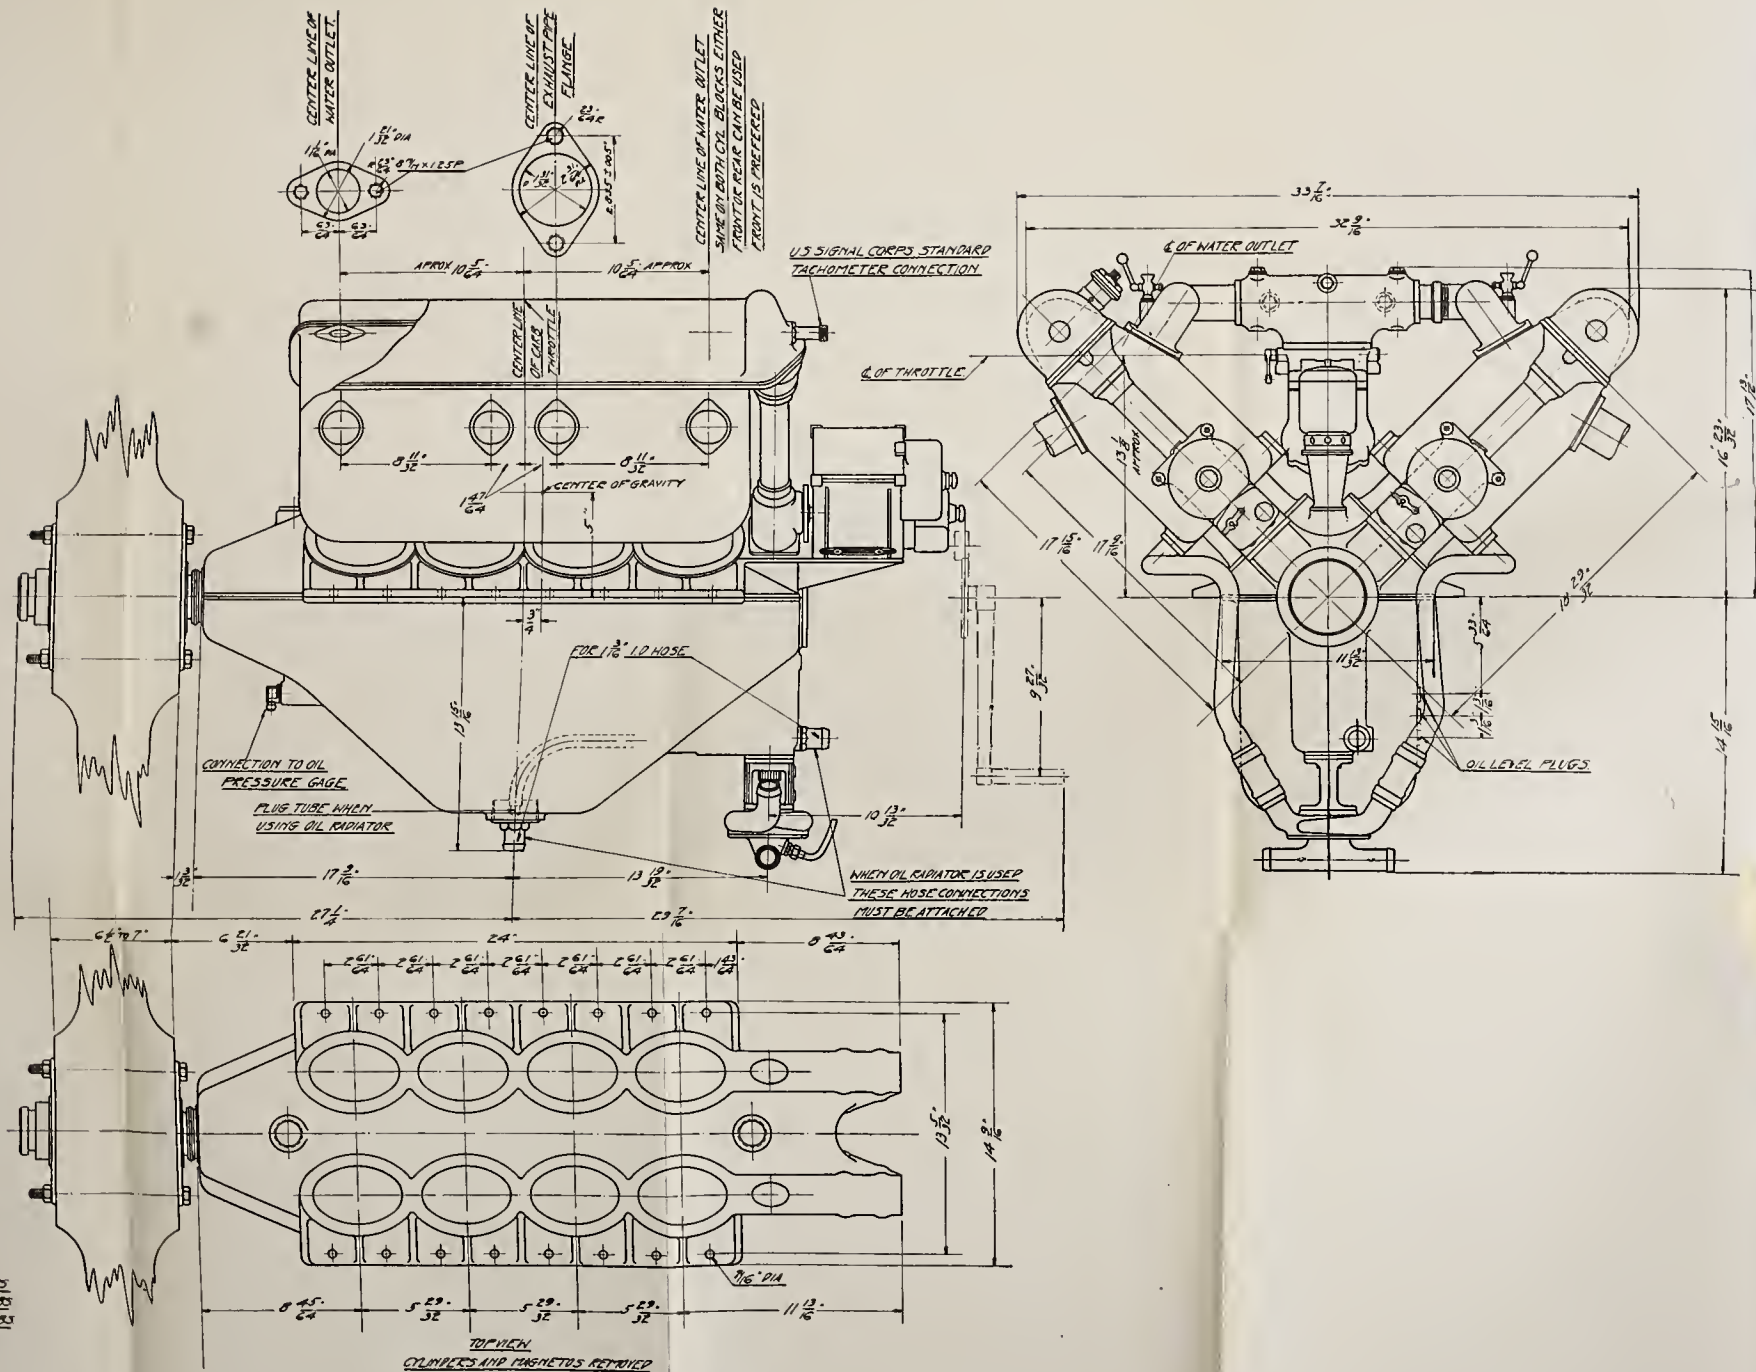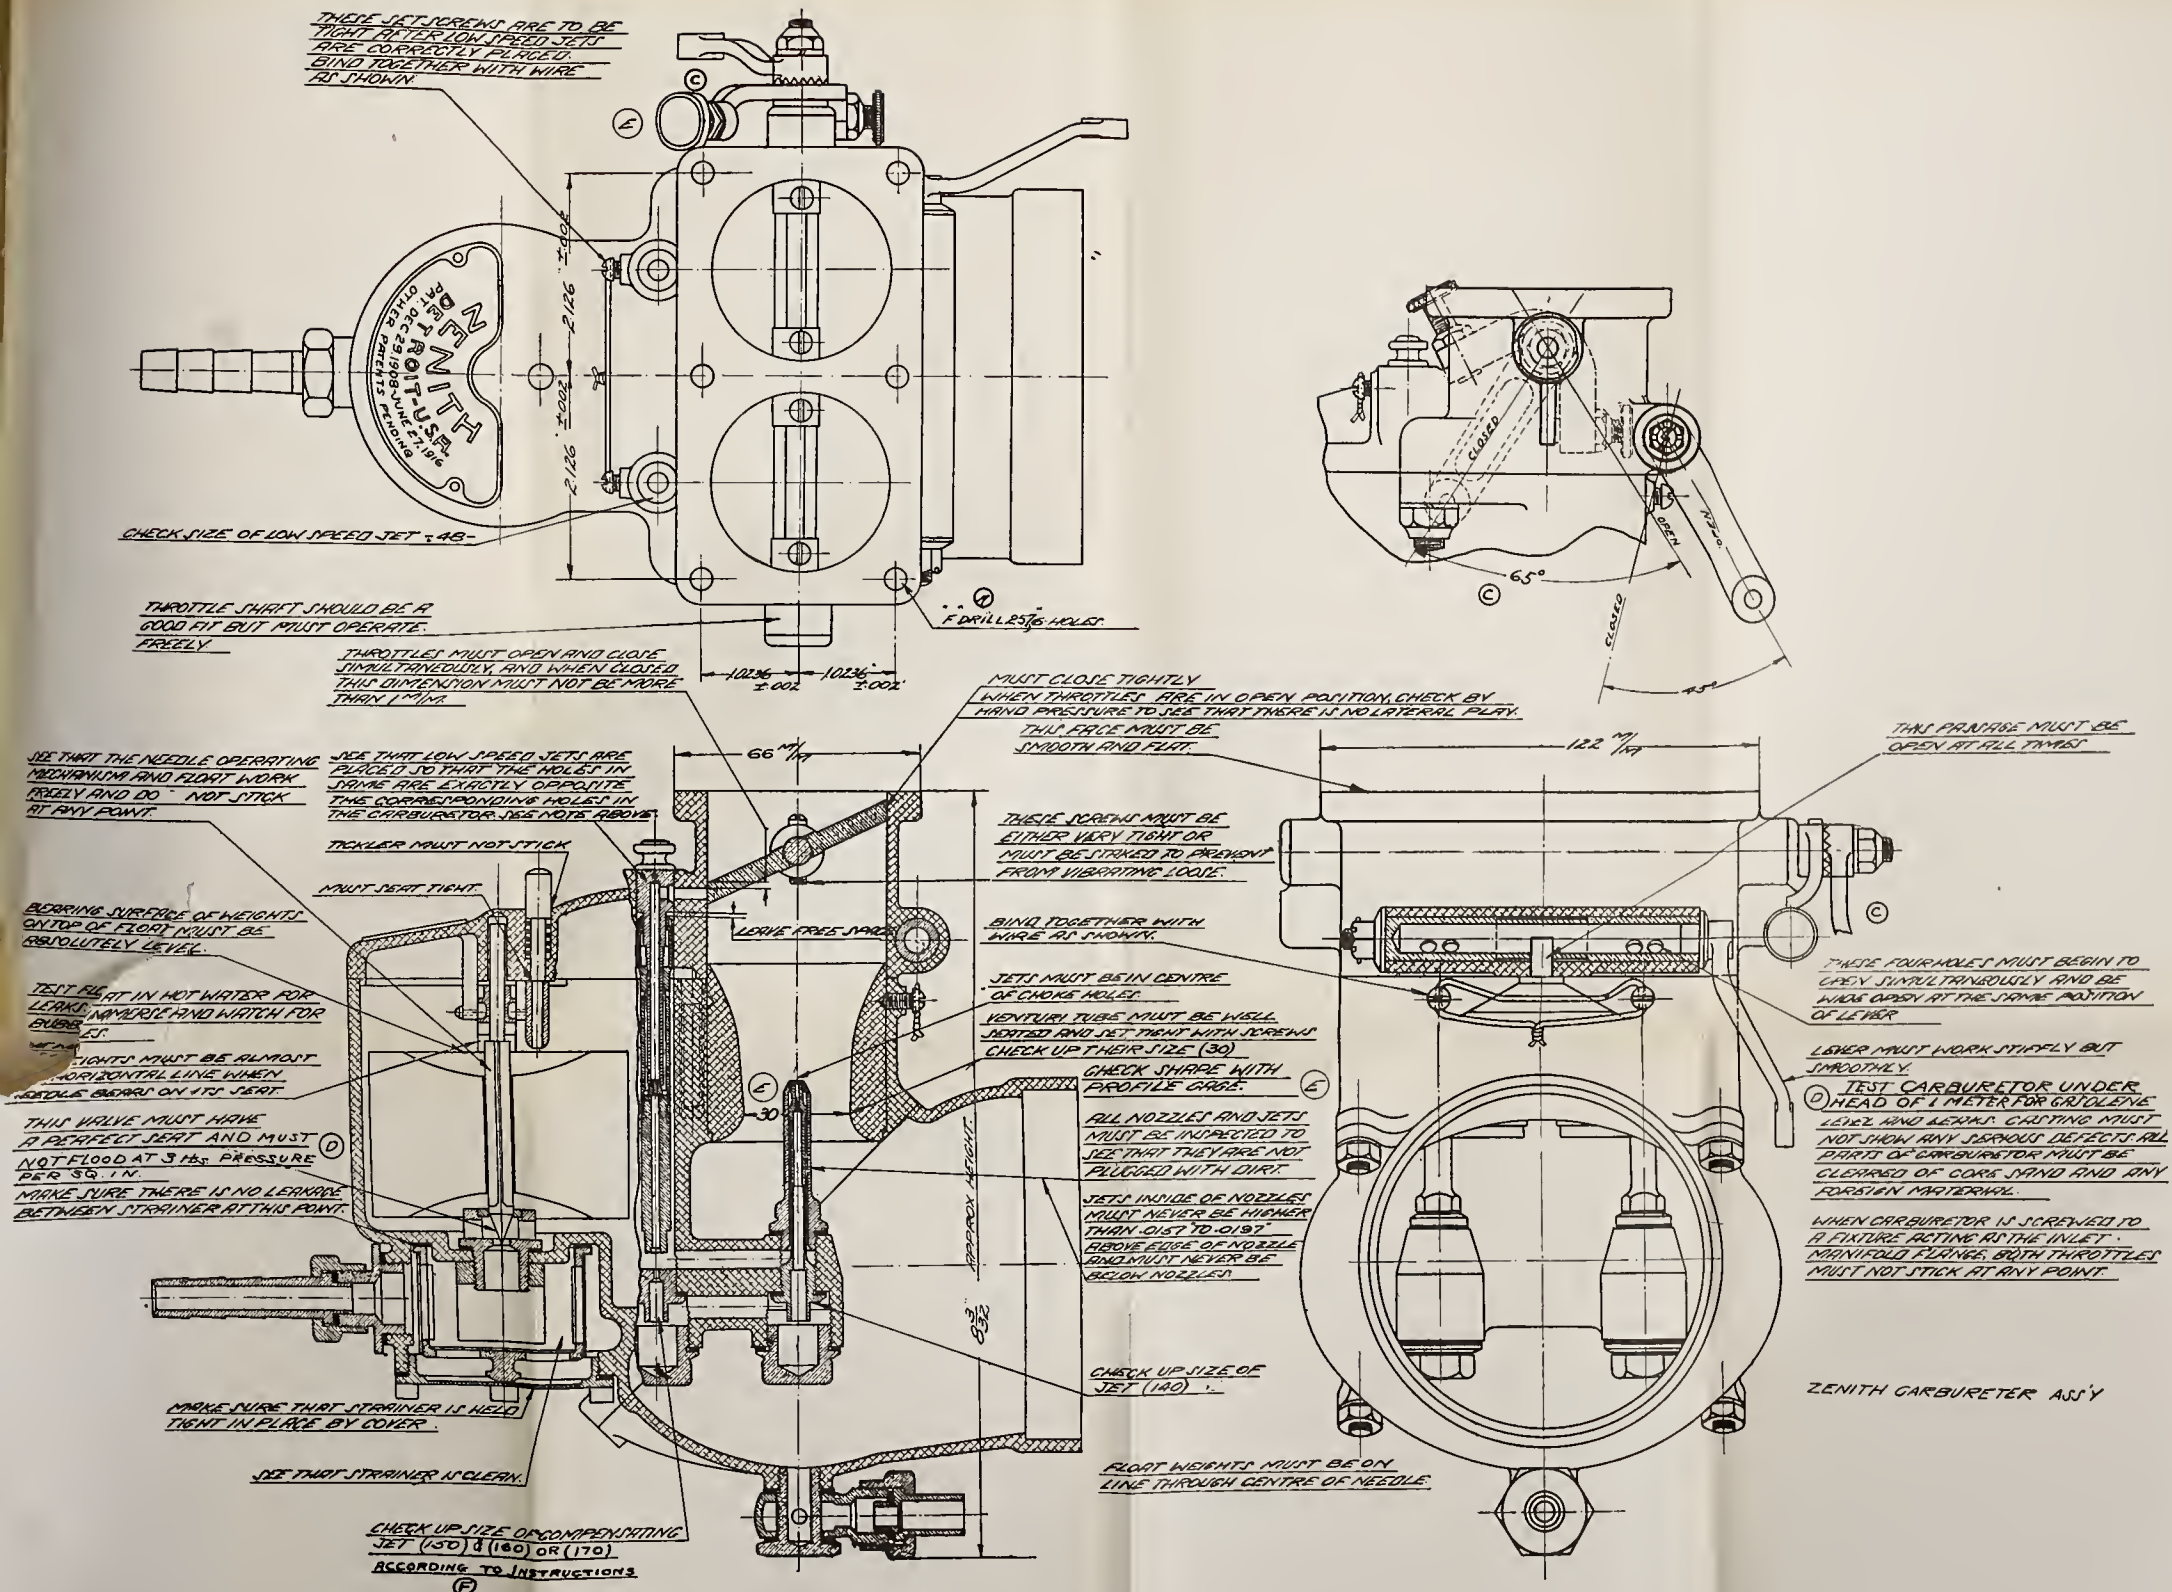SCALE 4-1







1875



1875

1875

1875

1875

1875





# DATA

## HISPANO-SUIZA

### MODEL A 150 H. P.

Number of cylinders.....	8
Bore of cylinders.....	120 m/m—4.724"
Stroke of cylinders.....	130 m/m—5.118"
Displacement.....	11762.15 cu. cm.—718.88 cu. in.
Weight of engine, complete with propeller hub, flange and bolts, carburetor mounted, and two magnetos, but without radiator, water, oil, start- ing device, propeller or gasoline supply system, approximately.....	445 lbs.
Compression ratio.....	4.72 to 1
Brake horsepower at 1450 r. p. m. on ground.....	150
Firing order.....	1L-4R-2L-3R-4L-1R-3L-2R
Rotation of Engine standing at back and looking toward propeller.....	Clockwise
Rotation of camshafts (looking toward propeller) .....	Anti-clockwise
Speed of camshaft.....	One-half engine speed
Tachometer connection speed.....	One-half engine speed
Tachometer connection rotation (looking toward propeller.....)	Anti-clockwise
Diameter of valves (at clear).....	50 m/m—1.968"
Lift of valves.....	10 m/m— .393"
Clearance between back of cam and valve tappet .....	2 m/m—.078"
Rotation of right-hand magneto (looking at driv- ing end).....	Anti-clockwise
Rotation of left-hand magneto (looking at driving end).....	Anti-clockwise
Magneto speed.....	Same as engine speed
Gap on Magneto platinum points.....	.020"
Spark plug gap.....	.021"
Maximum gasoline consumption per H. P. hour .....	55 lbs.
Gasoline consumption gallons per hour at 1450 r. p. m. of engine on ground, about.....	13 to 15 gal.



# A E R O N A U T I C A L   E N G I N E S

---

Air pump capacity at 1450 r. p. m. of engine on ground.....	10 lbs.
Gasoline air pressure (not over).....	2 lbs.
Maximum oil consumption lbs. per H. P. hour...0388	lbs.
Oil consumption gallons per hour at 1450 r. p. m. of engine about.....	$\frac{3}{4}$ gal.
Delivery of oil pump against 50 lbs. pressure at 66° C. or 150° F and 1450 r. p. m. of engine about.....	2.20 gal.
Oil pressure, with oil temperature at 66° C or 150° F and engine making 1450 r. p. m. about.....	50 lbs.
R. P. M. of oil pump.....	1.2 times engine r. p. m.
Amount of oil in lower crankcase to bottom plug.....	12½ lbs—7 qts.
Amount of oil in lower crankcase to center plug when run without an oil radiator.....	18 lbs.—10 qts.
Amount of oil in lower crankcase when run with an oil radiator.....	Dry Sump
Rotation of oil pump looking from top.....	Anti-clockwise
Oil temperature even in the hottest weather not to exceed 93° C or 200° F. and best not to exceed.....	71° C or 160° F
Delivery of water pump with free outlet, at 49° C or 120° F and 1450 r. p. m. of the engine about.....	26½ gal.
R. P. M. of water pump.....	1.2 times engine r. p. m.
Rotation of water pump looking from top.....	Anti-clockwise
Maximum outlet water temperature.....	88° C or 190° F
Desired outlet water temperature.....	28° C or 100° F
Intake opens.....	10° after top center
Intake closes.....	50° after bottom center
Exhaust opens.....	45° before bottom center
Exhaust closes.....	10° after top center
Spark advance.....	20°—20' before top center
Degrees inlet valves stay open.....	220°
Degrees exhaust valves stay open.....	235°
Carburetor: Twin type (Stromberg NA-D4)	
Barrel Diameter.....	1.937"
Choke Diameter at throat.....	1.312"
Body metering nozzle.....	No. 46 Drill

Accelerating metering nozzle...No. 44 Drill  
 Altitude adjustment will lean the mixture about..... $33\frac{1}{3}\%$

Carburetor: Twin type (Zenith)  
 Barrel Diameter.....48 m/m= 1.88"  
 Choke Diameter.....28m/m= 1.10"  
 Compensating Jet, 150, 160, 170 (according to weather conditions)  
 Main Jet.....140  
 Altitude adjustment will lean the mixture about 10%.

# AERONAUTICAL ENGINES

## PART XXIV REFERENCE TABLE

### METRIC CONVERSION TABLES METRIC TO ENGLISH

Metric Units	M/M to Inches	Meters to Feet	Kilometers to Miles	Liters to Gallons	Kilograms to Pounds
1	0.03937	3.28083	0.62137	0.26418	2.2046
2	.07874	6.56167	1.24274	0.52836	4.4092
3	.11811	9.84250	1.86411	0.79253	6.6139
4	.15748	13.12333	2.48548	1.05671	8.8185
5	.19685	16.40417	3.10685	1.32089	11.0231
6	.23622	19.68500	3.72822	1.58507	13.2277
7	.27559	22.96583	4.34959	1.84924	15.4324
8	.31496	26.24667	4.97096	2.11342	17.6370
9	.35433	29.52750	5.59233	2.37760	19.8416
10	.39370	32.80833	6.21370	2.64178	22.0462
11	.43307	36.08917	6.83507	2.90595	24.2508
12	.47244	39.37000	7.45644	3.17013	26.4555
13	.51181	42.65083	8.07781	3.43431	28.6601
14	.55118	45.93167	8.69918	3.69849	30.8647
15	.59055	49.21250	9.32055	3.96266	33.0693
16	.62992	52.49333	9.94192	4.22684	35.2740
17	.66929	55.77417	10.56329	4.49102	37.4786
18	.70866	59.05500	11.18466	4.75520	39.6832
19	.74803	62.33583	11.80603	5.01937	41.8878
20	.78740	65.61667	12.42740	5.28355	44.0924
21	.82677	68.89750	13.04877	5.54773	46.2971
22	.86614	72.17833	13.67014	5.81191	48.5017
23	.90551	75.45917	14.29151	6.07608	50.7063
24	.94488	78.74000	14.91288	6.34026	52.9109
25	.98425	82.02083	15.53425	6.60444	55.1156
26	1.02362	85.30167	16.15562	6.86862	57.3202
27	1.06299	88.58250	16.77699	7.13280	59.5248
28	1.10236	91.86333	17.39836	7.39697	61.7294
29	1.14173	95.14417	18.01973	7.66115	63.9340
30	1.18110	98.42500	18.64110	7.92533	66.1387
31	1.22047	101.70583	19.26247	8.18951	68.3433
32	1.25984	104.98667	19.88384	8.45368	70.5479
33	1.29921	108.26750	20.50521	8.71786	72.7525
34	1.33858	111.54833	21.12658	8.98204	74.9572
35	1.37795	114.82917	21.74795	9.24622	77.1618
36	1.41732	118.11000	22.36932	9.51039	79.3664
37	1.45669	121.39083	22.99069	9.77457	81.5710
38	1.49606	124.67167	23.61206	10.03875	83.7756
39	1.53543	127.95250	24.23343	10.30293	85.9803
40	1.57480	131.23333	24.85480	10.56710	88.1849
41	1.61417	134.51417	25.47617	10.83128	90.3895
42	1.65354	137.79500	26.09754	11.09546	92.5941
43	1.69291	141.07583	26.71891	11.35964	94.7988
44	1.73228	144.35667	27.34028	11.62381	97.0034
45	1.77165	147.63750	27.96165	11.88799	99.2080
46	1.81102	150.91833	28.58302	12.15217	101.4126
47	1.85039	154.19917	29.20439	12.41635	103.6173
48	1.88976	157.48000	29.82576	12.68052	105.8219
49	1.92913	160.76083	30.44713	12.94470	108.0265
50	1.96850	164.04167	31.06850	13.20888	110.2311
100	3.93700	328.08334	62.13700	26.41776	220.4622

**METRIC CONVERSION TABLES**  
**ENGLISH TO METRIC**

English Units	Hundredths of an Inch to M/M	Feet to Meters	Miles to Kilometers	Gallons to Liters	Pounds to Kilometers
1	0.254	0.30480	1.6093	3.7853	0.45359
2	0.508	.60960	3.2187	7.5707	.90718
3	0.762	.91440	4.8280	11.3560	1.36078
4	1.016	1.21920	6.4374	15.1413	1.81437
5	1.270	1.52400	8.0467	18.9267	2.26796
6	1.524	1.82880	9.6561	22.7120	2.72155
7	1.778	2.13360	11.2654	26.4973	3.17515
8	2.032	2.43840	12.8748	30.2827	3.62874
9	2.286	2.74321	14.4841	34.0680	4.08233
10	2.540	3.04801	16.0935	37.8533	4.53592
11	2.794	3.35281	17.7028	41.6387	4.98552
12	3.048	3.65761	19.3122	45.4240	5.44311
13	3.302	3.96241	20.9215	49.2093	5.89670
14	3.556	4.26721	22.5309	52.9947	6.35029
15	3.810	4.57201	24.1402	56.7800	6.80389
16	4.064	4.87681	25.7496	60.5653	7.25748
17	4.318	5.18161	27.3589	64.3506	7.71107
18	4.572	5.48641	28.9682	68.1360	8.16466
19	4.826	5.79121	30.5776	71.9213	8.61826
20	5.080	6.09601	32.1869	75.7066	9.07185
21	5.334	6.40081	33.7963	79.4920	9.52544
22	5.588	6.70561	35.4056	83.2773	9.97903
23	5.842	7.01041	37.0150	87.0626	10.43263
24	6.096	7.31521	38.6243	90.8480	10.88622
25	6.350	7.62002	40.2337	94.6333	11.33981
26	6.604	7.92482	41.8430	98.4186	11.79340
27	6.858	8.22962	43.4524	102.2040	12.24700
28	7.112	8.53442	45.0617	105.9893	12.70059
29	7.366	8.83922	46.6711	109.7746	13.15418
30	7.620	9.14402	48.2804	113.5600	13.60777
31	7.874	9.44882	49.8898	117.3453	14.06137
32	8.128	9.75362	51.4991	121.1306	14.51496
33	8.382	10.05842	53.1085	124.9160	14.96855
34	8.636	10.36322	54.7178	128.7013	15.42214
35	8.890	10.66802	56.3272	132.4866	15.87573
36	9.144	10.97282	57.9365	136.2720	16.32933
37	9.398	11.27762	59.5458	140.0573	16.78292
38	9.652	11.58242	61.1552	143.8426	17.23651
39	9.906	11.88722	62.7645	147.6280	17.69010
40	10.160	12.19202	64.3739	151.4133	18.14370
41	10.414	12.49682	65.9832	155.1986	18.59729
42	10.668	12.80163	67.5926	158.9840	19.05088
43	10.922	13.10643	69.2019	162.7693	19.50447
44	11.176	13.41123	70.8113	166.5546	19.95807
45	11.430	13.71603	72.4206	170.3400	20.41166
46	11.684	14.02083	74.0300	174.1253	20.86525
47	11.938	14.32563	75.6393	177.9106	21.31880
48	12.192	14.63043	77.2487	181.6960	21.77244
49	12.446	14.93523	78.8580	185.4813	22.22603
50	12.700	15.24003	80.4674	189.2666	22.67962
100	25.400	30.48006	160.9347	378.5330	45.35924

# A E R O N A U T I C A L   E N G I N E S

## SPECIFIC GRAVITY EQUIVALENTS FOR DEGREES BEAUMÉ FOR LIQUIDS LIGHTER THAN WATER

$$\text{FORMULA: DEGREES BEAUMÉ} = \frac{140}{\text{SP. GR.} \frac{60^\circ}{60^\circ \text{F.}}} = 130$$

SP. GR. TAKEN AT 60° F. AND REFERRED TO DISTILLED WATER  
AT 60° F

Beau- mé	Specific Gravity	Pounds Per Gallon	Beau- mé	Specific Gravity	Pounds Per Gallon	Beau- mé	Specific Gravity	Pounds Per Gallon
10	1.0000	8.33	37	.8383	6.98	64	.7217	6.01
11	.9929	8.27	38	.8333	6.94	65	.7179	5.98
12	.9859	8.21	39	.8285	6.90	66	.7143	5.95
13	.9790	8.16	40	.8235	6.86	67	.7107	5.92
14	.9722	8.10	41	.8187	6.82	68	.7071	5.89
15	.9655	8.04	42	.8139	6.78	69	.7035	5.86
16	.9589	7.99	43	.8092	6.74	70	.7000	5.83
17	.9524	7.93	44	.8046	6.70	71	.6965	5.80
18	.9459	7.88	45	.8000	6.66	72	.6931	5.78
19	.9396	7.83	46	.7955	6.63	73	.6897	5.75
20	.9333	7.78	47	.7909	6.59	74	.6863	5.72
21	.9272	7.72	48	.7865	6.55	75	.6829	5.69
22	.9211	7.67	49	.7821	6.52	76	.6796	5.66
23	.9150	7.62	50	.7777	6.48	77	.6763	5.63
24	.9091	7.57	51	.7735	6.44	78	.6730	5.60
25	.9032	7.53	52	.7692	6.41	79	.6698	5.58
26	.8974	7.48	53	.7650	6.37	80	.6666	5.55
27	.8917	7.43	54	.7609	6.34	81	.6635	5.52
28	.8861	7.38	55	.7568	6.30	82	.6604	5.50
29	.8805	7.34	56	.7527	6.27	83	.6573	5.48
30	.8750	7.29	57	.7487	6.24	84	.6542	5.45
31	.8696	7.24	58	.7447	6.20	85	.6511	5.42
32	.8642	7.20	59	.7407	6.17	86	.6481	5.40
33	.8589	7.15	60	.7368	6.14	87	.6451	5.38
34	.8537	7.11	61	.7329	6.11	88	.6422	5.36
35	.8485	7.07	62	.7292	6.07	89	.6392	5.33
36	.8433	7.03	63	.7254	6.04	90	.6363	5.30



H I S P A N O — S U I Z A

---

*MEMORANDUM*

## PART XXV

### Model I and E, 150 H. P. and 180 H. P.

### Hispano-Suiza Engine

### PARTS CATALOGUE

Part No.	No. Per Engine	Name of Part
B-23	1	12 m/m x 1.25 P. Brazing Union Nut
B-26	4	$\frac{1\frac{3}{32}}{32}$ " ID Gasket
B-27	4	$\frac{1\frac{1}{2}}{2}$ " ID Gasket
B-28	9	$\frac{4\frac{7}{64}}{64}$ " ID x $\frac{1\frac{5}{16}}{16}$ " OD Gasket
B-31	1	$\frac{1\frac{31}{32}}{32}$ " ID x $2\frac{\frac{9}{32}}{32}$ " OD Gasket
B-32	1	$2\frac{1\frac{7}{32}}{32}$ " ID x $2\frac{\frac{27}{32}}{32}$ " OD Gasket
B-33	2	1" ID X $1\frac{1\frac{7}{4}}{4}$ " OD Gasket
B-64	12	Cotterpins, $\frac{5}{16}$ " dia. x 1" long
B-93	14	6 m/m x 1 P. Nut
T-129	2	Camshaft Gear Key
B-194	2	Oil Pump Spring
T-210	20	8 m/m x 1.25 P. Stud, x $1\frac{1}{16}$ " long
B-351	4	Priming Cups
657	10	Cotterpin, $\frac{3}{32}$ " dia. x 1" long
594-P	16	Piston Ring, L. H.
595-P	16	Piston Ring, R. N.
596-P	8	Piston Oil Ring
Y656	2	Cotterpin, $\frac{5}{32}$ " dia. x $\frac{3}{4}$ " long
B-754	2	6 m/m x $\frac{5\frac{3}{4}}{64}$ " Lock Screw
B-757	2	Stud, 8 m/m x 1.25 P. x $\frac{7}{8}$ " long
B-759	1	$1\frac{1}{2}$ " ID X $1\frac{1\frac{31}{32}}{32}$ OD x $\frac{3}{32}$ " Tk. Gasket
B-760	1	Oil Manifold Plug Gasket $\frac{2\frac{3}{32}}{32}$ " ID x $1\frac{1}{32}$ " OD
B-761	3	$\frac{3\frac{1}{64}}{64}$ " ID X $\frac{2\frac{5}{32}}{32}$ " OD Gasket
B-767	10	.315" dia. x $\frac{5}{8}$ " Dowel
B-768	12	.236" dia. x $\frac{5}{8}$ " Dowel
B-781	2	Propeller Hub Key Screw
B-782	2	Stud, 8 m/m dia. x 1.25 P. x $1\frac{1}{32}$ "

# H I S P A N O — S U I Z A

Part No.	No. Per Engine	Name of Part
B-783	5	Stud, 8 m/m dia. x 1.25 P. x $1\frac{27}{64}$ "
B-784	6	Stud, 6 m/m dia. x 1 P. x $1\frac{9}{64}$ " long
A-B-785-A	2	Intake Pipe and Tee Gasket
A-B-786-A	1	Carburetor Gasket
B-788	4	Intake Pipe Gasket
B-789	8	Lockwasher for 6 m/m Bolt
B-790	34	Lockwasher for 8 m/m Bolt
B-794	8	Stud, 6 m/m x 1 P. x $\frac{81}{8}$ " long
B-797	8	Propeller Hub Bolt Nut
B-803	1	5 m/m x .75 P. x $\frac{5}{16}$ " Fill. Head Mach. Scr.
B-807	1	Magneto B. B. Nut Lock Spring
T-853	2	No. 2 Taperpin x $1\frac{1}{4}$ " long
B-886	1	Air Pump Valve Washer
B-887	1	Air Pump Cover Gasket
T-948	12	8 m/m x 1.25 P. x $3\frac{5}{32}$ " Stud
T-949	8	Stud, 8 m/m x 1.25 P. x $1\frac{17}{64}$ " long
T-950	22	Cylinder Cover Screw Bushing
T-952	8	Camshaft Center Bearing Screws
T-954	10	8 m/m x 1.25 P. Stud, x $1\frac{11}{32}$ " long
A-T-955-A	72	Cylinder Studs
A-T-956-A	8	Crankshaft Center Bearing Studs
A-T-957-A	2	Crankshaft Rear Bearing Studs
A-T-958-A	2	Crankshaft Front Bearing Studs
A-T-960-A	6	Water Pump Cover Screws
T-961	8	Stud, 8 m/m x 1.25 P. x $1\frac{3}{16}$ " long
T-964	24	Stud, 8 m/m x 1.25 P. x $1\frac{5}{32}$ " long
T-970	4	Main Bearing Screws
T-982	1	Water Pump Cover Gasket
T-984	2	Oil Pipe Flange Gasket
T-987	1	Oil Pump Gasket
T-988	1	Water Pump Bkt. Gasket
T-989	2	Oil Pipe Nipple

# A E R O N A U T I C A L   E N G I N E S

---



---

Part No.	No. Per Engine	Name of Part
T-990	2	Oil Pipe Nipple Packing Nut
A-T-1019A	8	Crankshaft Bearing Stud Nut
T-1032	2	Cylinder Cover Gasket
T-1035	4	10 m/m Special Nut
T-1037	4	Oil Pipe Bkt. Screws
T-1092	12	Water Pipe Gasket
1437	4	$\frac{5}{16}$ " dia. x $\frac{3}{4}$ " Dowel
1439	2	Cylinder Base Gasket
1440	8	Magneto Cap Screws
1441	3	10 m/m x 1.5 P. x $1\frac{5}{16}$ " Stud
1444	3	10 m/m x 1.5 P. Plain Nut
1455	1	Running Magneto, R. H.
1456	1	Running Magneto, L. H.
1458	13	$\frac{18}{32}$ " ID Plain Washer
6204	2	H. B. Ball Bearing No. 6204
6207	1	H. B. Ball Bearing No. 6207
6408	1	H. B. Ball Bearing No. 6408
9608	1	Crankcase Rear Plug
9615	16	Valve Tappet
A-9616-B	16	Valve Tappet Washer
9619	2	Camshaft Bearing, Front
A-9620-B	2	Camshaft Bearing, Center
A-9621-B	2	Camshaft Center Bearing Cap
A-9622-B	2	Camshaft Bearing, Rear
10729	2	Camshaft Nut
9635	8	Connecting Rod Bushing
9638	1	Crankshaft Gear
9644	2	Vertical Shaft Collar
9645	2	Vertical Shaft Thrust Washer
A-9646-B	2	Vertical Shaft Bearing, Upper
A-9647-B	2	Vertical Shaft Bearing, Lower
A-9648-A	1	Oil Pump Gear Bushing
9667	31	38 m/m x 1.5 m/m P. Plug
A-9668-C	2	Camshaft
A-9908-A	16	Valve Spring, Outer
A-9909-A	16	Valve Spring, Inner
9930	2	Magneto Drive Pinion Taperpin
9939	2	Camshaft Front Bearing Washer
A-9941-B	2	Vertical Shaft Gear, Lower

Part No.	No. Per Engine	Name of Part
9943	2	Oil Pipe Flange
9960	1	Breather Cap
A-9967-B	3	Crankshaft Inter. Bearing, Lower
A-9968-B	3	Crankshaft Inter. Bearing, Upper
10357	2	Gear Housing Packing Nut
A-10372-B	1	Water Pump Bracket
A-10374-C	1	Water Pump Cover
A-10376-A	1	Water Pump Shaft
A-10378-A	1	Water Pump Bushing
A-10379-B	1	Oil Pump Shaft
A-10380-A	1	Oil Pump Gland Nut
10381	16	Spark Plug Bushing
10424	1	Oil Pump Body
A-10428-C	1	Inlet Manifold Tee
A-10430-A	1	Inlet Flange Tube
A-10431-A	1	Inlet Pipe Flange
A-10432-A	1	Inlet Pipe Packing Nut
10433	5	18 m/m x 1.5 m/m Plug
A-10434-A	3	Water Nozzle
10435	1	Oil Manifold Cap
A-10443-C	1	Inlet Manifold L. H.
A-10444-C	1	Inlet Manifold R. H.
10473	2	Vertical Shaft
10487	2	Vertical Shaft Casing Nut Lock Ring
A-10490-D	1	Cylinder Casting R. H.
10495	2	Oil Pump Vane
A-10499-B	1	Oil Pump Drive Pinion
10500	1	Oil Filter Ferrule
A-10510-A	1	Crankshaft B. B. Washer
10540	1	Propeller Hub Flange
10561	1	Tachometer Coupling
10637	1	Crankshaft Centering Lock Nut
10659	2	Vertical Shaft Gear Collar
10661	2	Vertical Shaft Gear Cover
10685	2	Vertical Shaft Gear Cover Gasket
10687	1	Oil Pump Hose Connection
10693	1	Crankshaft Centering Nut Lock
10832	8	Exhaust Pipe Flange



# A E R O N A U T I C A L   E N G I N E S

---

Part No.	No. Per Engine	Name of Part
10946	8	Exhaust Pipe Flange Gasket
10963	8	Adm. Valve
A-11003-A	1	Propeller Thrust Bearing Nut
11006	1	Thrust-Bearing (Propeller)
A-11008-B	1	Crankshaft Front Bearing, Upper
A-11009-B	1	Crankshaft Front Bearing, Lower
11012	1	Thrust Bearing Nut Lock
A-11018-B	2	Propeller Thrust Bearing Washer
11025	1	Oil Filter Cap
11026	1	Oil Filter Ring
11027	1	Oil Filter, 35 Mesh per Inch
11028	1	Oil Filter Bottom, 18 Mesh per Inch
11041	2	Cyl. Oil Pipe Bracket
11053	1	Oil Manifold Plug
A-11107C	8	Cyl. (Steel Sleeve)
A-11108-D	1	Cyl. Casting L. H.
11137	8	Water Hole Plate
11160	2	Wire Manifold End Tube (Rub- ber Hose)
11161	4	.066"-072" dia. x $\frac{3}{16}$ " Long, Rivet
11162	8	.035"-042" dia. x $\frac{1}{4}$ " Long, Rivet
11163	8	Connecting Rod Bushing Dowel
11164	4	Oil Manifold Tube
A-11165-B	2	Camshaft Oil Pipe
11168	1	Water Pump Packing
11169	10	Cotterpin, $\frac{1}{16}$ " dia. x $\frac{1}{2}$ " long
11171	1	Oil Manifold Sleeve
11185	1	Main Oil Tube Plug
11188	1	Stuffing Box Packing (Asbestos Cord $\frac{1}{8}$ " dia.)
A-11189-A	1	Manifold Water Pipe Nipple
A-11190-A	1	Manifold Water Pipe Nozzle
A-11191-A	1	Manifold Water Pipe Nut
A-11192-A	1	Manifold Water Pipe
A-11194-C	1	Water Pump Body
A-11198-A	2	Water Pump Thrust Button .

Part No.	No. Per Engine	Name of Part
11201	1	Oil Manifold Tube, Rear
A-11202-B	1	Oil Manifold Tube, Front
A-11204-A	3	Manifold Water Pipe Coupling Hose, $\frac{3}{8}$ " ID x 3 ply
11206	1	Tachometer Coupling Pins
11207	3	Cotterpins, $\frac{3}{4}$ " dia. x $\frac{1}{2}$ " long
11208		$\frac{1}{16}$ " Dia. Wire (Soft Iron)
11233	1	$\frac{3}{4}$ " Pipe Plug
A-11236-A	4	Water Pump Hose Clamps
A-11245-A	6	Clamp for $\frac{3}{8}$ " ID Hose
11269	4	Air Pump Valve Washer
11301	4	Blind Nut, 8 m/m
11302	12	8 m/m x 1.25 P. Slotted Nut
11303	73	Nut, 8 m/m x 1.25 m/m P. x $\frac{5}{16}$ " long
11304	16	Nut, 8 m/m x 1.25 P. x $\frac{1}{8}$ " long
11305	72	10 m/m x 1.5 P. x $\frac{1}{2}$ " Nut
11311	1	8 m/m x 1.25 P. x $1\frac{5}{4}$ " Hex. Hex. Set Scr.
11312	6	Crankcase Flange Bo't
11313	3	Plug, 12 m/m x 1.25 P.
A-11314-A	2	Vertical Shaft Bearing Screw
11322	4	$\frac{3}{16}$ " Dia. x $\frac{1}{2}$ " long, Flat Hd. Rivet
11323	8	Crankshaft Plug, 25 m/m
11324	4	Crankshaft Plug, Small
11340	16	Ignition Wire Terminals
11342	1	Starting Magneto
11348	2	Cotterpins ( $\frac{1}{8}$ " dia. x $1\frac{1}{2}$ " long)
11326		Ignition Wire, $7\frac{1}{2}$ m/m dia.
11378	1	12 m/m x 1.25 P. Brazing Union Nozzle
11397	1	Nut Lock Ring
11403	2	Camshaft Gear
11429	1	Ignition Manifold
11440	33	$1\frac{1}{2}$ " ID x $1\frac{9}{4}$ OD. x $\frac{5}{4}$ Tk. Gasket, Copper and Asbestos
11442	2	Ignition Manifold Straps

# A E R O N A U T I C A L   E N G I N E S

---



---

Part No.	No. Per Engine	Name of Part
11449	12	Ignition Wire Ring, Large
11457	4	Ignition Wire Ring, Small
11468	1	Tachometer Drive Shaft
11469	1	Tachometer Drive Shaft Bushing
11497	2	Vertical Shaft Casting Nut
11513	16	Valve Spring Washer, Lower
11512	16	Spark Plugs
11527	1	Oil Pressure Relief Body
11530	1	Oil Pressure Relief Spring
11531	1	Oil Pressure Relief Plunger
11570	2 Sets	Ignition Wire Markers
11574	16	Spark Plug Bushing Gasket
11626	1	Propeller Hub Key
11657	1	Magneto Pinion
11658	1	Water Pump Impeller
11659	1	Air Pump Body
11660	1	Air Pump Tappet
11661	1	Air Pump Tappet Spring
11662	1	Air Pump Tappet Spring Re- taining Wash.
11663	1	Air Pump Plunger Buffer
11664	1	Air Pump Valve Spring
11670	8	Piston (Low Compression) 4.72 to 1 ratio
11671	8	Piston Pin
11672	8	Piston Pin Lock Ring
11673	4	Connecting Rod, Outer
11674	4	Connecting Rod, Inner
11675	4	Connecting Rod Bearing
11676	4	Connecting Rod Bearing Cap
11677	22	Cylinder Cover Screw
11678	2	Vertical Shaft Casing
11680	2	Magneto Coupling Gear Key
11682	1	Water Pump Gland Nut
11683	8	Connecting Rod Outer Bolt
11686	8	Valve Guide, Admission
11687	8	Valve Guide, Exhaust
11688	8	Connecting Rod Outer Bolt Nut
11689	16	Connecting Rod Inner Bolt

# H I S P A N O — S U I Z A

Part No.	No. Per Engine	Name of Part
11690	16	Connecting Rod Inner Bolt Nut
11691	1	Cylinder Cover R. H.
11692	1	Cylinder Cover L. H.
11707	16	Connection Rod Inner Cotter
11724	2	Water Pump to Cylinder Hose (4 Ply Rubber Hose) $1\frac{3}{16}$ " I.D.
11773	2	Cyl. Water Inlet Connection
11774	2	Cyl. Water Outlet Connection
11782	1	Running Magneto (Simms) L. H.
11783	1	Starting Magneto (Simms)
11787	1	Breather Tube Valve Stem
11788	1	Breather Tube Valve
11791	1	Breather Tube
11800	1	Carburetor (Stromberg) (Type NA-D4)
11813	1	Magneto Support Bracket
11818	1	Oil Pump Drive Nut
11861	1	Crankcase, Upper Half
11862	1	Crankcase, Lower Half
11863	1	Magneto Support Gasket
11865	1	Crankshaft
11867	1	Magneto Supp. Cover Gasket
11871	1	Running Magneto (Simms) R. H.
11879	8	8 m/m x 1.25 P. x $1\frac{11}{16}$ " Stud
11893	1	Oil Pressure Relief Cap
11896	2	Magneto Coupling Spring
11897	2	Magneto Coupling
11898	2	Magneto Coupling Spring Washer
11899	2	Magneto Pinion Nut
11900	2	Magneto Shaft Gear Nut
11901	24	R. H. Iron Rivet $\frac{1}{8}$ " Diam. x $\frac{3}{8}$ " long
11902	2	Magneto Pinion B. B. Nut
11903	2	Coupling Gear (23 Teeth) In- ternal
11904	2	Coupling Gear (24 Teeth) In- ternal

# A E R O N A U T I C A L   E N G I N E S

---



---

Part No.	No. Per Engine	Name of Part
11905	2	Magneto Drive Shaft Gear (24 Teeth)
11906	2	Magneto Shaft Gear (23 Teeth)
11910	1	Propeller Hub
11913	1	Propeller Hub Nut, Inner
11914	1	Propeller Hub Nut, Outer
11915	8	Propeller Hub Bolt
11924	8	Exhaust Valve
11929	1	Oil Gage Hose Connection
12053	7	Round Head Brass Machine Screw
13018	1	Magneto Pinion Shaft
13047	1	Air Pump Cover
13048	1	Air Pump Valve
13049	1	Air Pump Valve Leather
13051	1	Air Pump Plunger Washer
13052	1	Air Pump Plunger Nut
13050	1	Air Pump Plunger Leather
B-777	2	.1585" dia. x $\frac{2.5}{64}$ " long, Dowel
11820	8	Fillister Head Screw
11868	2	$\frac{1.3}{16}$ " ID Gasket
11819	2	Plug, $\frac{5}{8}$ " x 18 P.
11776	2	21 m/m Hose Connection
11630	.85 ft.	Wire, Soft Iron .030" to .045" Thick
11814	1	Magneto Supp. Oil Pump Body
11815	1	Magneto Supp. Oil Pump Cover
11816	1	Oil Pump Gear
11817	1	Oil Pump Idler Gear
11936	1	Crankcase Hose Conn. for $\frac{3}{4}$ " Hose
11963	1	Crankcase Hose Connection Screen
11937	2	Cyl. Cover Screw Dowel Bushing
11945	2	Cotterpin, $\frac{5}{32}$ " Dia. x $2\frac{1}{4}$ " long
A-11143-B	2	Valve Adjusting Wrench
A-11144-A	2	Valve Adjusting Wrench Handle
A-11145-A	1	10 m/m Square Head Socket Wrench



Part No.	No. Per Engine	Name of Part
A-11150-B	1	Propeller Thrust Bearing Nut Wrench
A-11151-B	1	Water Inlet and Pump Packing Nut Wrench
11229	1	Magneto Repair Kit
A-11236-A	4	Water Pump Hose Clamps
A-11237-A	1	Handle for A-11145-A
A-11239-A	1	Handle for Spark Plug Wrench
11241	1	Box for Spare Parts
A-11244-A	1	Rubber Connection for Mani- fold
A-11245-A	2	Clamp for $\frac{3}{8}$ " ID Hose
A-11315-A	1	Single End Wrench for $\frac{9}{16}$ " hex.
11326	1	Ignition Wire $7\frac{1}{2}$ m/m Diam.
A-11339-A	1	Spark Plug Wrench
11440	4	Gasket $1\frac{1}{2}$ " ID x $1\frac{4}{8}$ " O. D. x $\frac{5}{8}$ " Tk.
11512	6	Spark Plugs
11724	2	Water Pump to Cylinder Hose
11779	1	Gasoline Strainer Ass'y. (Strom- berg)
11785	1	Magneto Repair Kit
11823	2	Gasket (Stromberg P6544)
11824	2	Gasket (Stromberg P6558)
11825	4	Gasket (Stromberg P6559)
11826	4	Gasket (Stromberg P6562)
11827	2	Gasket (Stromberg P6563)
11828	4	Gasket (Stromberg P6564)
11829	4	Gasket (Stromberg P6571)
11830	4	Gasket (Stromberg P6572)
11831	6	Gasket (Stromberg P-6573)
11832	8	Gasket (Stromberg P-6580)
11833	2	Gasket (Stromberg P-6582)
11834	2	Gasket (Stromberg P-3260)
11835	4	Gasket (Stromberg P-5238)
11863	2	Magneto Support Gasket
11867	2	Magneto Support Cover Gasket
11868	4	$\frac{13}{16}$ " ID Gasket
11907	1	Instruction Book

# A E R O N A U T I C A L   E N G I N E S

---

Assembly No.		Name of Assembly
A-11149B	1	Spanner Wrench
A-11141A	2	Valve Clearance Gauge
11433	1	Propeller Hub Nut Wrench, Inner
11434	1	Propeller Hub Nut Wrench, Outer
11435	1	Propeller Hub Nut Wrench Pivot Pin
11436	1	Propeller Hub Nut Wrench Washer
11437	1	Propeller Hub Nut Wrench Spring
11438	1	Propeller Hub Nut Wrench Spring Pin
11924	1	Exhaust Valve
B-887	1	Air Pump Cover Gasket
A-10507-A	8	Exhaust Port Plate (for shipping engine)
A-11272	1	Motor Cover (for shipping engine)
A-11273	1	Starting Magneto Cover (for shipping engine)

## PART XXVI

### *Additional Parts Covering Model "E" 180 H. P. Hispano-Suiza Engine.*

For Model "E" parts all Model "1" parts are used except 11670 and 11800. The following parts are also used on Model "E."

Part No.	No. Per Engine	Name of Part
11908	1	Carburetor (Stromberg) Type NE-D4
11803	8	Piston (High Compression) 5.30 to 1 ratio

The following is a list of parts used for synchronizer (Nelson Type "L" interrupter). These parts are adaptable for either the right or left-hand cylinder block and are used on Model "E" engine.

Part No.	No. Per Engine	Name of Part
11954	1	Interrupter Brace (Short) Headpin
11955	1	Interrupter Brace (Short) Yoke Headpin
11169	1	Cotterpin, $\frac{1}{16}$ " dia. x $\frac{1}{2}$ " long
11303	1	8 m/m x 1.25 P. Nut
11971	1	8 m/m x 1.25 P. x $\frac{7}{8}$ " Stud
11953	1	Gear Shaft Ball Bearing Lock Nut
11946	1	Interrupter B. B. Spacer
6203	2	Ball Bearing
B-790	1	8 m/m Lock Washer
11951	1	Interrupter Gear Shaft
11949	1	Interrupter Gear Shaft Housing
11960	1	Interrupter Gear Shaft Housing Gasket
11947	1	Interrupter Drive Gear
11948	1	Interrupter Drive Gear Housing
11899	1	Castled Nut
657	1	Cotterpin

# A E R O N A U T I C A L   E N G I N E S

---

Part No.	No. Per Engine	Name of Part
9930	1	Taperpin
11207	1	Cotterpin, $\frac{3}{16}$ " dia. x $\frac{1}{2}$ " long
11950	1	Interrupter Drive Pinion
B-794	8	6 m/m Stud
B-93	8	6 m/m Nut
B-789	8	6 m/m Lock Washer

# **MODEL "E" 180 H. P.**

## **ASSEMBLIES**

Assembly No.	Name of Assembly
11193	Carburetor Manifold Water Pipe Assembly
11203	Oil Manifold Assembly
11234	Vertical Shaft Casing and Nut Assembly
11439	Propeller Hub Nut Wrench Assembly
11576	Tachometer Drive Shaft and Bushing Assembly
11718	Air Pressure Pump Assembly
11722	Oil Pressure Relief Valve Assembly
11798	Crankshaft and Connecting Rod Assembly
11862	Crankcase Lower Casting Assembly
11882	Magneto Support Oil Pump Assembly
12003	Admission Manifold Tee Assembly
12008	Water Pump Shaft and Impeller Assembly
12009	Oil Pump Assembly
12011	Camshaft Center Bearing Assembly
12017	Vertical Shaft Upper Assembly
12022	Admission Manifold Adj. Flange and Tube Assembly
12028	Valve Adjusting Wrench Assembly
12030	Admission Manifold Assembly, L. H.
12031	Admission Manifold Assembly, R. H.
12032	Camshaft Oil-Pipe and Flange Assembly
12041	Oil Filter Screen Assembly
12043	Water Pump Assembly
12046	Admission Valve and Adj. Nut Assembly
12067	Propeller Thrust-Bearing Assembly
12109	Connecting Rod Inner and Bushing Assembly (for Service and Replacement Purposes only)
12110	Connecting Rod Outer Assembly
12111	Ignition Wiring Manifold Assy.
12113	Motor Assembly Before Valve Timing
12115	Crankcase Stud and Bearing Assy.
12116	Camshaft Assembly
12117	Vertical Shaft Lower Assembly



# A E R O N A U T I C A L   E N G I N E S

---

Assembly No.	Name of Assembly
12118	Crankshaft Assembly
12119	Piston Assembly (High Compression)
12120	Propeller Hub Assembly
12121	Crankcase Machining Assembly
12122	Running Magneto Assembly, L. H.
12123	Running Magneto Assembly, R. H.
12125	Magneto Coupling Assembly
12126	Magneto Support Assembly
12130	Breather Tube Assembly
12132	Connecting Rod Inner and Outer Assembly
12134	Motor Assembly after Valve Timing
12135	Spare Parts and Box Assembly
12136	Motor Packing Assembly
12137	Exhaust Valve and Adjusting Nut Assembly
12138	Crankcase and Oil Plug Assembly
12139	Cylinder Assembly Complete, R. H.
12140	Cylinder Assembly Complete, L. H.
12156	Connecting Rod Inner and Bearing Assembly
12158	Motor Packing Case Assembly
12162	Magneto Support and Oil Pump Complete Assy.
12165	Cylinder Bushing and Core Plug Assembly, L. H.
12166	Cylinder Bushing and Core Plug Assembly, R. H.
12168	Crankcase Hose Connection and Screw As- sembly
12169	Connecting Rod Inner Bearing and Cap Assy. (for Service and Replacement Pur- poses only)
12170	Cylinder and Camshaft Bearing Assembly, R. H.
12171	Cylinder and Camshaft Bearing Assembly, L. H.

# Model A, 150 H. P. Hispano-Suiza Engine

## PARTS CATALOGUE

Part No.	No. Per Engine	Name of Part
B-98	1	10 m/m dia. x 1.5 m/m P. Nut
B-777	2	.158" dia. x 25/64" Dowel
B-795	1	Starting Crank Shaft Screw
T-1094	3	No. 2 Taperpin x 1½" Long
10385	1	Starting Crank Shaft
10389	1	Starting Crank Collar
10391	1	Starting Magneto Pinion
10392	1	Starting Magneto Gear
10394	1	Starting Crank Handle
10400	1	Starting Crank Handle Sleeve
10415	1	Starting Crank Spring
10517	1	Starting Crank Double Gear
10518	1	Starting Crank Gear
10521	1	Starting Crank Gear Shaft
10556	1	Starting Crank
11208	1.2 ft.	1/16" dia. Wire
11711	1	Starting Crank Bracket
11715	1	Starting Crank Double Gear Bushing
11716	1	Starting Crank Gear Bushing
11723	4	Starting Magneto Cap Screw
11726	1	Starting Magneto
11741	1	Starting Crank Shaft Bushing
11742	1	No. 0 Taperpin x 7/8" Long

Note: The above parts are only used when starting cranks are required.

11240	1	Crankshaft Gear Nut
11231	1	Crankcase Cover, Rear
Y652	2	Cotterpin, 1/16" dia. x 3/4" long
Y656	8	Cotterpin, 3/32" dia. x 3/4" long
B-754	2	6 m/m x 5 3/4" Lock Screw
A-B-757-A	2	Stud, 8 m/m x 1.25 P. x 7/8" long
A-B-758-A	31	1 3/8" ID x 1 7/8" OD. Gasket for 38 m/m thread dia.

# A E R O N A U T I C A L   E N G I N E S

---

Part No.	No. Per Engine	Name of Part
A-B-759-A	1	1 $\frac{3}{64}$ " ID x 1 $\frac{31}{32}$ " OD. Breather tube gasket.
A-B-760-A	1	$\frac{47}{64}$ " ID x 1 $\frac{1}{2}$ " OD. Gasket for 18 m/m tread.
A-B-761-A	4	$\frac{1}{2}$ " ID x $\frac{25}{32}$ " OD. Gasket for 12 m/m thread.
A-B-763-A	1	Crankcase Rear Cover Gasket
A-B-766-A	1	Crankshaft Key
A-B-767-A	8	Crankcase Dowel
A-B-768-A	12	Camshaft Bearing Dowel
A-B-769-A	6	5 m/m x 75 P. Nut
A-B-777-A	4	Dowel, .1586" dia. x 25/64" long
A-B-779-A	6	Lockwasher for 5 m/m Bolt
A-B-781-A	1	Crankshaft Key Screw
A-B-782-A	2	Stud, 8 m/m dia. x 1.25 P. x 1 $\frac{1}{32}$ "
A-B-783-A	2	Stud, 8 m/m dia. x 1.25 P. x 1 $\frac{27}{64}$ "
A-B-784-A	8	Stud, 6 m/m x 1 P. x 1 $\frac{9}{64}$ " long
A-B-785-A	2	Intake Pipe and Tee Gasket
A-B-786-A	1	Carburetor Gasket
A-B-788-A	4	Intake Pipe Gasket
A-B-789-A	8	Lockwasher for 6 m/m Bolt
A-B-790-A	24	Lockwasher for 8 m/m Bolt
A-B-794-A	8	Stud, 6 m/m x 1 P. x 1 $\frac{61}{64}$ " long
A-B-796-A	8	Propeller Hub Bolt
A-B-797-A	8	Propeller Hub Bolt Nut
A-B-798-A	1	Propeller Hub Nut Lock
A-T-853-A	2	No. 2 Taperpin x 1 $\frac{1}{4}$ " long
A-B-862-A	8	Piston Pin Set Screw
A-T-945-A	8	Connecting Rod Screw, Inner
A-T-946-A	16	Connecting Rod Bolt, Outside
A-T-948-A	12	Camshaft Bearing Stud
A-T-949-A	8	Stud, 8 m/m x 1.25 P. x 1 $\frac{17}{64}$ " long
A-T-950-A	22	Cylinder Cover Screw Bushing
A-T-951-A	22	Cylinder Cover Screw
A-T-952-A	8	Camshaft Center Bearing Screws
A-T-954-A	18	8 m/m x 1.25 P. Stud, x 1 $\frac{11}{32}$ " long
A-T-955-A	64	Cylinder Studs
A-T-956-A	8	Crankshaft Center Bearing Studs
A-T-957-A	2	Crankshaft Rear Bearing Studs

Part No.	No. Per Engine	Name of Part
A-T-958-A	2	Crankshaft Front Bearing Studs
A-T-959-A	5	Stud, 8 m/m x 1.25 P. x $\frac{7}{8}$ " long
A-T-960-A	6	Water Pump Cover Screws
A-T-961-A	4	Stud, 8 m/m x 1.25 P. x $1\frac{3}{16}$ " long
A-T-964-A	24	Stud, 8 m/m x 1.25 P. x $1\frac{7}{16}$ " long
A-T-968-A	8	Exhaust Pipe Flange Gasket
A-T-970-A	4	Main Bearing Screws
A-T-981-A	6	Magneto Coupling Bolt
A-T-982-A	1	Water Pump Cover Gaskets
A-T-984-A	2	Oil Pipe Flange Gasket
A-T-987-A	1	Oil Pump Gasket
A-T-988-A	1	Water Pump Bkt. Gasket
A-T-989-A	2	Oil Pipe Nipple
A-T-990-A	2	Oil Pipe Nipple Packing Nut
A-T-1019-A	8	Crankshaft Bearing Stud Nut
A-T-1032-B	2	Cylinder Cover Gasket
A-T-1035-A	4	10 m/m Special Nut
A-T-1037-A	4	Oil Pipe Bkt. Screws
A-T-1055-B	2	Cylinder Base Gasket
A-T-1092-A	12	Water Pipe Gasket
1437	4	Magneto Dowel
1440	8	Magneto Cap Screws
1458	8	Washer ( $\frac{13}{32}$ " ID Plain)
A-9604-B	1	Oil Pump Suction Pipe
A-9608-A	1	Crankcase Rear Plug
A-9615-B	16	Valve Tappet
A-9616-B	16	Valve Tappet Washer
A-9617-A	16	Valve Spring Washer, Lower
A-9619-B	2	Camshaft Bearing, Front
A-9620-B	2	Camshaft Bearing, Center
A-9621-B	2	Camshaft Center Bearing Cap
A-9622-B	2	Camshaft Bearing, Rear
A-9623-A	2	Camshaft Nut
A-9635-A	8	Connecting Rod Bushing
A-9638-B	1	Crankshaft Gear
A-9641-B	2	Magneto Pinion
A-9642-B	2	Magneto Gear
A-9644-A	2	Vertical Shaft Collar
A-9645-A	2	Vertical Shaft Thrust Washer

# A E R O N A U T I C A L   E N G I N E S

---

Part No.	No. Per Engine	Name of Part
A-9646-B	2	Vertical Shaft Bearing, Upper
A-9647-B	2	Vertical Shaft Bearing, Lower
A-9648-A	1	Oil Pump Gear Bushing
A-9649-B	2	Vertical Shaft Casing
A-9650-A	2	Vertical Shaft Casing Nut
A-9667-A	30	Cylinder Core Plug
A-9668-C	2	Camshaft
A-9908-A	16	Valve Spring, Outer
A-9909-A	16	Valve Spring, Inner
A-9930-A	2	Magneto Drive Pinion Taperpin
A-9939-A	2	Camshaft Front Bearing Washer
A-9941-B	2	Vertical Shaft Gear, Lower
A-9943-X	2	Oil Pipe Flange
A-9958-B	2	Magneto Coupling
A-9959-B	1	Breather Tube
A-9960-B	1	Breather Cap
A-9967-B	3	Crankshaft Inter-Bearing, Lower
A-9968-B	3	Crankshaft Inter-Bearing, Upper
A-9994-B	2	Magneto Pinion Cover
10341	8	Piston (Low Compression) 4.72 to 1 ratio
A-10357-A	2	Gear Housing Packing Nut
A-10372-B	1	Water Pump Bracket
A-10374-C	1	Water Pump Cover
A-10375-A	1	Water Pump Gland Nut
A-10376-A	1	Water Pump Shaft
A-10378-A	1	Water Pump Bushing
A-10379-B	1	Oil Pump Shaft
A-10380-A	1	Oil Pump Gland Nut
A-10381-A	16	Spark Plug Bushing
A-10383-C	1	Cylinder Cover L. H.
A-10404-A	1	Air Pump Cover
10405	1	Air Pump Valve
A-10406-A	1	Air Pump Valve Spring
A-10407-B	1	Air Pump Body
A-10408-A	1	Air Pump Plunger Nut
A-10409-A	1	Air Pump Plunger Washer
A-10410-A	1	Air Pump Tappet
10411	1	Air Pump Tappet Spring



Part No.	No. Per Engine	Name of Part
A-10421-A	1	Air Pump Valve Leather
A-10424-B	1	Oil Pump Body
A-10428-C	1	Inlet Manifold Tee
A-10430-A	1	Inlet Flange Tube
A-10431-A	1	Inlet Pipe Flange
A-10432-A	1	Inlet Pipe Packing Nut
A-10433-A	6	18 m/m x 1.5 m/m Plug
A-10434-A	3	Water Nozzle
-10435-	1	Oil Manifold Cap
A-10443-C	1	Inlet Manifold L. H.
A-10444-C	1	Inlet Manifold R. H.
10388	1	Starting Dog
A-10473-B	2	Vertical Shaft
A-10474-B	2	Camshaft Gear
A-10484-A	8	Valve Guide (Admission)
A-10487-A	2	Vertical Shaft Casing Nut Lock Ring
A-10488-A	2	Camshaft Washer Snap Ring
A-10489-A	2	Camshaft Washer
A-10490-D	1	Cylinder Casting R. H.
A-10495-A	2	Oil Pump Vane
A-10499-B	1	Oil Pump Gear
A-10500-A	1	Oil Filter Ferrule
A-10510-A	1	Crankshaft B. B. Washer
A-10536-D	1	Crankshaft
11693	4	Connecting Rod, Inner
A-10538-C	4	Connecting Rod, Outer
A-10539-C	1	Propeller Hub
A-10540-C	1	Propeller Hub Flange
A-10541-A	1	Propeller Hub Nut
A-10561-A	1	Tachometer Coupling
A-10562-A	1	Speedometer Drive Shaft
A-10721-C	1	Cylinder Cover R. H.
A-10832-A	8	Exhaust Pipe Flange
A-11003-A	1	Propeller Thrust Bearing Nut
11006	1	Propeller Thrust Bearing
A-11008-B	1	Crankshaft Front Bearing, Upper

# A E R O N A U T I C A L   E N G I N E S

---

Part No.	No. Per Engine	Name of Part
A-11009-B	1	Crankshaft Front Bearing, Lower
A-11012-A	1	Thrust Bearing Nut Lock
A-11015-D	1	Crankcase, Upper Half
A-11016-D	1	Crankcase, Lower Half
A-11018-B	2	Propeller Thrust Bearing Washer
A-11025-B	1	Oil Filter Cap
11026	1	Oil Filter Ring
A-11027-A	1	Oil Filter
A-11028-A	1	Oil Filter Bottom
A-11030-A	8	Piston Pin
A-11041-A	2	Cyl. Oil Pipe Bracket
A-11107-C	8	Cylinders (Steel Sleeve)
A-11108-D	1	Cylinder Casting, L. H.
A-11137-A	8	Water Hole Plate
A-11155-A	1	Air Pump Cover Gasket
A-11157-B	1	Water Pump Impeller
A-11159-C	1	Ignition Wire Manifold
A-11160-A	2	Wire Manifold End Tube
A-11161-A	4	Rivet (Vert. Shaft Casing Nut)
A-11162-A	3	Rivet
11163	8	Connecting Rod Bushing Dowel
A-11164-A	4	Oil Manifold Tube
A-11165-B	2	Camshaft Oil Pipe
A-11168	1	Water Pump Packing
A-11169-A	10	Cotterpin $\frac{1}{16}$ " dia. x $\frac{1}{2}$ " long
A-11171-A	1	Oil Manifold Sleeve
A-11185-A	1	Main Oil Tube Plug
A-11188	1 ft.	Stuffing Box Packing, Asbestos Cord $\frac{1}{8}$ " dia.
A-11189-A	1	Manifold Water Pipe Nipple
A-11190-A	1	Manifold Water Pipe Nozzle
A-11191-A	1	Manifold Water Pipe Nut
A-11192-A	1	Manifold Water Pipe
A-11194-C	1	Water Pump Body
A-11197-A	2	Water Pipe Flange
A-11198-A	2	Water Pump Thrust Button
A-11199-A	2	Water Outlet Pipe Coupling Hose
A-11201-B	1	Oil Manf. Tube, Rear

Part No.	No. Per Engine	Name of Part
A-11202-B	1	Oil Manf. Tube, Front
A-11204-A	3	Manifold Water Pipe Coupling Hose $\frac{3}{8}$ " ID x 3 ply
A-11206-A	1	Tachometer Coupling Pins
A-11207-A	3	Cotterpins, $\frac{3}{16}$ " dia. x $\frac{1}{2}$ " long
A-11231-B	1	Crankcase Cover, Rear
A-11233-A	1	Crankshaft End Plug
A-11236-A	4	Water Pump Hose Clamps
A-11245-A	6	Adm. Manifold Water Hose Clamps
A-11258-C	1	Zenith Carburetor Type No. 48 D. C.
A-11259-A	1	Oil Suction Pipe Plug
A-11269-A	3	Air Pump Valve Washer
A-11279-A	8	Exhaust Valve Guides
A-11300-A	16	Connecting Rod Outer Nut
A-11301-A	4	Blind Nut, 8 m/m
A-11302-A	12	Camshaft Bearing Nut
A-11303-A	66	Nut 8 m/m x 1.25 m/m P
A-11304-A	21	Nut 8 m/m x 1.25 m/m P
A-11305-A	64	Cylinder Stud Nut
A-11307-D	1	Water Outlet Pipe R. H.
A-11308-D	1	Water Outlet Pipe L. H.
A-11311-A	1	Oil Pump Gear Bearing Screw
A-11312-A	6	Crankcase Flange Bolt
A-11313-A	4	Plug, 12 m/m x 1.25 P
A-11314-A	2	Vertical Shaft Bearing Screw
A-11322-A	4	Water Pump Impeller Rivet
A-11323-A	8	Crankshaft Plug, Large
A-11324-A	4	Crankshaft Plug, Small
10963	8	Admission Valve
10964	8	Exhaust Valve
11468	1	Tachometer Drive Shaft
11469	1	Tachometer Drive Shaft Bushing
11556	1	Oil Pressure Relief Valve
11555	1	Oil Pressure Relief Plug
11558	1	Oil Pressure Relief Body
11559	1	$\frac{5}{8}$ " ID Gasket $\frac{15}{16}$ " OD
11570	2 Sets	Ignition Wire Markers

# A E R O N A U T I C A L   E N G I N E S

---

Part No.	No. Per Engine	Name of Part
11574	16	Spark Plug Bushing Gasket
11584	1	Oil Gauge Pipe Elbow
11599	2	Compensating Jet-150, Zenith Carb.
11600	2	Compensating Jet-160, Zenith Carb.
11601	2	Compensating Jet-170, Zenith Carb.
11583	1	Oil Pressure Relief Spring, Type A
10687	1	Oil Pump Hose Connection
11309	1	Crankcase Hose Connection
11937	2	Cover Screw Dowel Bushing
A-11331-B	1	Magneto Switch
A-11340-A	16	Ignition Wire Terminals
A-11341-C	2	Running Magneto
A-11342-C	1	Starting Magneto
A-11348-A	2	Cotterpins, $\frac{1}{8}$ " dia. x $1\frac{1}{2}$ " long
A-12053-A	7	Round Head Machine Screw, No. 4-32 x $\frac{1}{4}$ " long
11449	8	Ignition Wire Ring, Large
11457	4	Ignition Wire Ring, Small
11326		Ignition Wire, $7\frac{1}{2}$ " m/m dia.
11512	16	Spark Plugs
11630	1.2 ft.	Soft Iron Wire, .030" to .045" Thick
11635	1	Oil Pressure Relief Plug Gasket
A-B-28-A	32	Gasket for 18 m/m Thread dia. $\frac{47}{84}$ " ID x $\frac{15}{16}$ " OD
A-11141-A	2	Valve Clearance Gauge
A-11143-B	2	Valve Adjusting Wrench
A-11144-A	2	Valve Adjusting Wrench Handle
A-11145-A	1	10 m/m Sq. Head Socket Wrench
A-11146-A	1	7 m/m Sq. Head Socket Wrench
A-11147-B	1	Propeller Hub Nut Wrench
A-11149-B	1	Spanner Wrench
A-11150-B	1	Propeller Thrust Bearing Nut Wrench

# H I S P A N O — S U I Z A

---

Part No.	No. Per Engine	Name of Part
A-11151-B	1	Water Inlet and Pump Packing Wrench
A-11229	1	Magneto Repair Kit
A-11230-A	1	Rubber Conn. for Radiator
A-11235-A	2	Radiator Hose Clamps
A-11237-A	1	Handle for A-11145-A
A-11238-A	1	Handle for A-11146-A
A-11239-A	1	Handle for Spark Plug Wrench
A-11241-C	1	Box for Spare Parts
A-11243-A	1	Rubber Conn. for Water Pump
A-11244-A	1	Rubber Conn. for Manifold
A-11284-A	2	Filter Chamber Cover Washer
A-11285-A	1	Carburetor Filter Assembly
A-11286-A	2	Filter Washer
A-11287-A	2	Gas. Nipple Union Washer
A-11288-A	4	Gas. Nipple and Drain Union Washer
A-11289-A	4	Compensating Jet Fibre Washer
A-11290-A	2	Needle Valve Seat Fibre Washer
A-11291-A	8	Main and Cap Jet Fibre Washer
A-11292-A	4	Drainage Union Body and Screw Washer
A-11293-A	1	Carburetor Float
A-11294-A	8	Lower Plug Fibre Washer
A-11315-A	1	Wrench, Single End for $\frac{9}{16}$ " hex.
A-11337	1	English Instruction Book
A-11339	1	Spark Plug Wrench for 1" hex. Plugs
A-10506-A	2	Water Hole Cover
A-10507-A	8	Exhaust Port Plate
A-11272	1	Engine Cover
A-11273	2	Starting Magneto Cover
A-11274	1	Starting Magneto Switch Cover
A-11327-A	12	Water Hole Plate Washer



## PART XXVIII

List of Special Tools that can be furnished by the Wright-Martin Aircraft Corporation for Service Work on Models A, E and I Hispano-Suiza Engines

Item No.	Tool No.	Name	Operation Used For
1	11794	Crankshaft Nut and Starting Dog Wrench Assembly	Removing or installing crankshaft gear nut of starting dog.
2	TA-12027-C1	Camshaft gear puller	Removing gear from camshaft.
3	D-101-M	Cylinder Assembly Stand	Holding cylinders while assembling valves, camshafts, etc.
4	TA-12066-E-6	Valve Lifter Assembly	Removing valves from cylinder.
5	TA-12066-E-27	Screw-driver, long	Grinding in valves.
6	TA-12066-E-8	2 m/m Feeler Gauge	Adjusting clearance of valves over tappet.
7	474 (Williams)	Adjustable Spanner Wrench	Removing or installing vertical shaft casing nut.
8	TA-12055-E-7	Spark Plug Bushing Wrench	Removing or installing spark plug bushing.
9	TA-11108-D124	Camshaft Lining Bar	Lining camshaft bearings at assembly.
10	D-369	Wooden form	Holding valves while assembling to tappets to prevent distortion of stem.
11	T-A-M-269	Camshaft Stud Driver	Installing camshaft intake and exhaust manifold studs.
12	T-A-M-321	Camshaft Gear Nut wrench	Removing camshaft gear nut.
13	TA-12066-E18	Valve Tappet Wrench	Removing or installing valve tappets.
14	TA-12066-E-1	Timing Disc and Scale	For installation on crankcase to check timing of valves and ignition at assy.
15	TA-12066-E-2	Dead Center Indicator	Finding upper dead center of piston.
16	T-A-M-323	Main Bearing Stud Nut Wrench	Removing main bearing stud Nuts.
17	TA-12066-E-20	Cyl. Cover Screw High Speed Wrench	Removing cylinder cover screws.
18	TA-12066-E58	Cyl. Stud Nut Wrench	Removing cylinder base stud nuts.

Item No.	Tool No.	Name	Operation Used For
19	723J (Std. B & S)	Inner Conn. Rod Bolt Wrench	Removing or installing inner conn. rod bolts.
20	TA-12066-E-10	Outer Conn. Rod Nut Wrench	Removing or installing outer conn. rod bolts and camshaft bearing nuts.
21		Engine Assembly Stand	Dismantling and assembling engine.
22	TA-12075-C-8	631 Reamer	Reaming new exhaust valve guides.
23		629 Reamer 16 m/m	Reaming new inlet valve guide.
24	TA-12101-E-4	Propeller Hub Nut Wrench	Installing or removing propeller hub nut.
25	TA-11339	Spark Plug Wrench	Installing or removing thrust bearing nuts.
26		Reamer 1" .1833	Reaming piston pin bushing on new inner connecting rods.
27	TA-12066-E5 & 9	Valve Seating Cutter Complete	Reseating valve seats.
28	TA-12066-C-63	Thrust Ball Brg. Nut Wrench (Williams)	Installing or removing thrust bearing nuts.
29	TA-12066-F-21	Thrust Ball Bearing Puller	Removing thrust ball bearings.
30	TA-12066-E-23	Crankshaft Gear Ball Bearing Puller	Removing crankshaft geared ball bearings.
31	TA-12006-E-5	Crankshaft Plug Bench Screw Driver	Removing plugs in crankshaft throws.
32	T-A-M-321	High Speed Wrench for 8 m/m Nut	Removing lower half crankcase.
33	TA-12045-C-2	Line Reamer for Main Bearings. (Martel Reamer, Field Service Type.)	Reaming crankshaft bearings when installing new bearings.
34	TA-12000-E-1A	Piston Ring Clamps	To hold rings compressed while assembling cylinder blocks to crankcase.
35	TA-12015-C-2	Square Socket Wrench	Removing piston pin locking screws, model "A."
36	TA-12066-E-50	Magneto Coupling Wrench (Double End)	Synchronizing magneto timing and removing magneto gear housing, Model "A."
37	TA-12015-C-1	Piston Pin Drift	Removing piston pin.
38	TA-12046-A-1	Valve Tappet Spanner Wrench	Adjusting tappets when re-timing engines.
39	TA-12066-E-60	Oil Pump Wrench	Removing oil pump bracket and water pump.

# AERONAUTICAL ENGINES

---

## *MEMORANDUM*

H I S P A N O — S U I Z A

---

---

*MEMORANDUM*

# AERONAUTICAL ENGINES

---

## *MEMORANDUM*

.



H I S P A N O — S U I Z A

---

*MEMORANDUM*

# AERONAUTICAL ENGINES

---

## *MEMORANDUM*

H I S P A N O — S U I Z A

---

*MEMORANDUM*

# AERONAUTICAL ENGINES

---

## *MEMORANDUM*

H I S P A N O — S U I Z A

---

*MEMORANDUM*



# AERONAUTICAL ENGINES

---

## *MEMORANDUM*

H I S P A N O — S U I Z A

---

*MEMORANDUM*

# AERONAUTICAL ENGINES

---

## *MEMORANDUM*

H I S P A N O — S U I Z A

---

*MEMORANDUM*

2

# AERONAUTICAL ENGINES

---

## *MEMORANDUM*



H I S P A N O — S U I Z A

---

*MEMORANDUM*

# AERONAUTICAL ENGINES

---

## *MEMORANDUM*

H I S P A N O — S U I Z A

---

*MEMORANDUM*

# AERONAUTICAL ENGINES

---

## *MEMORANDUM*

H I S P A N O — S U I Z A

---

*MEMORANDUM*


THE JOURNAL OF THE









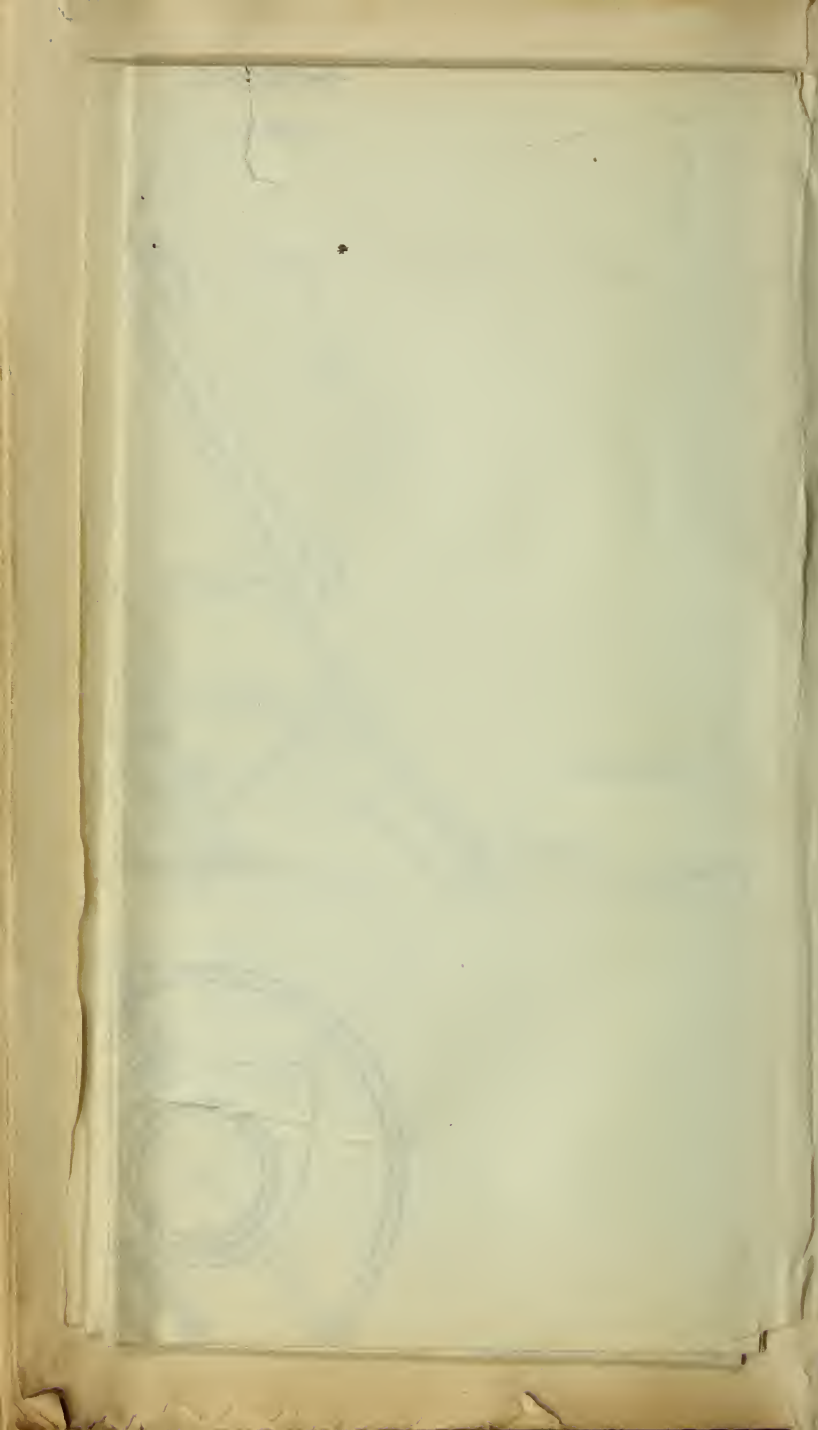












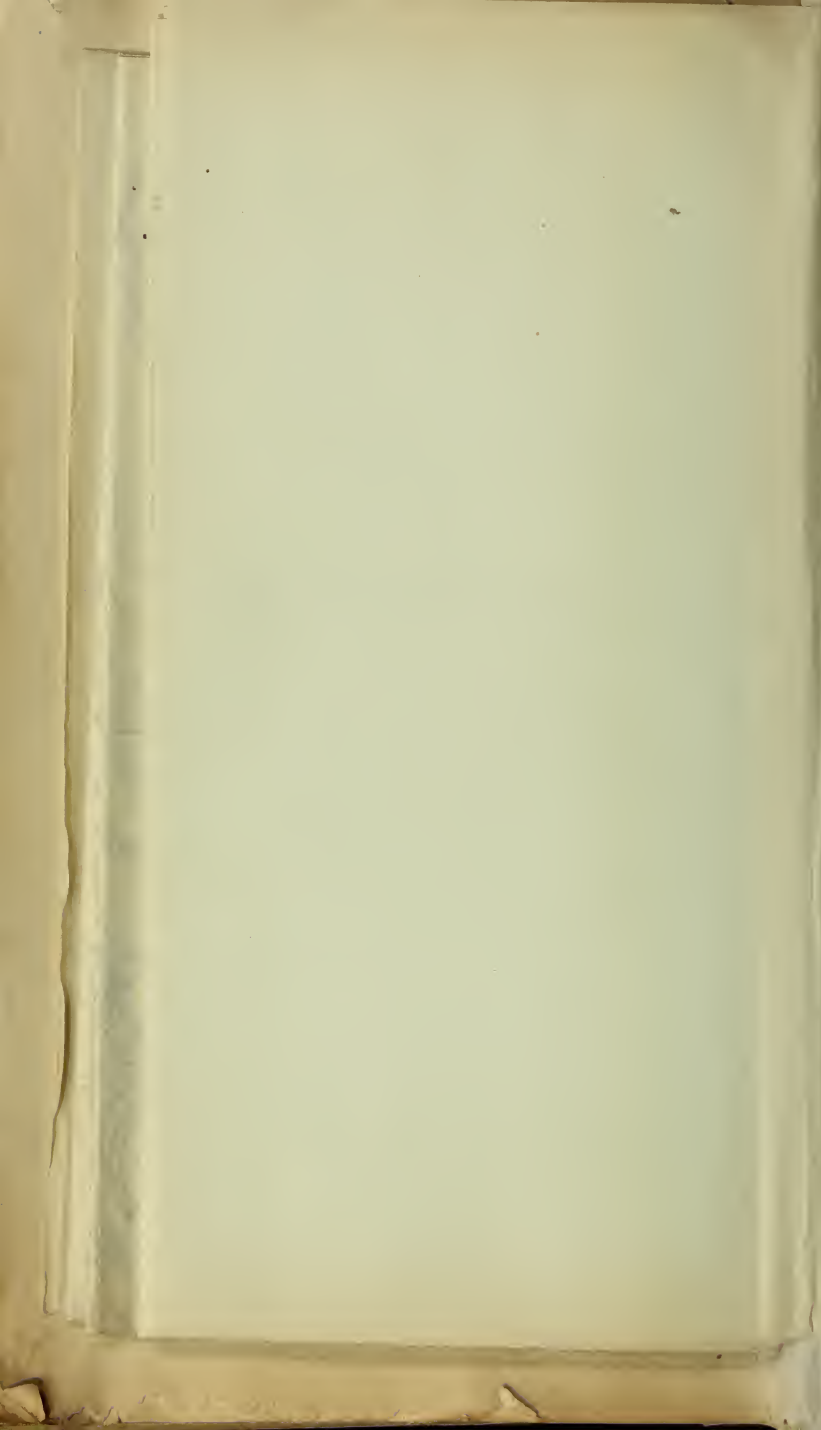





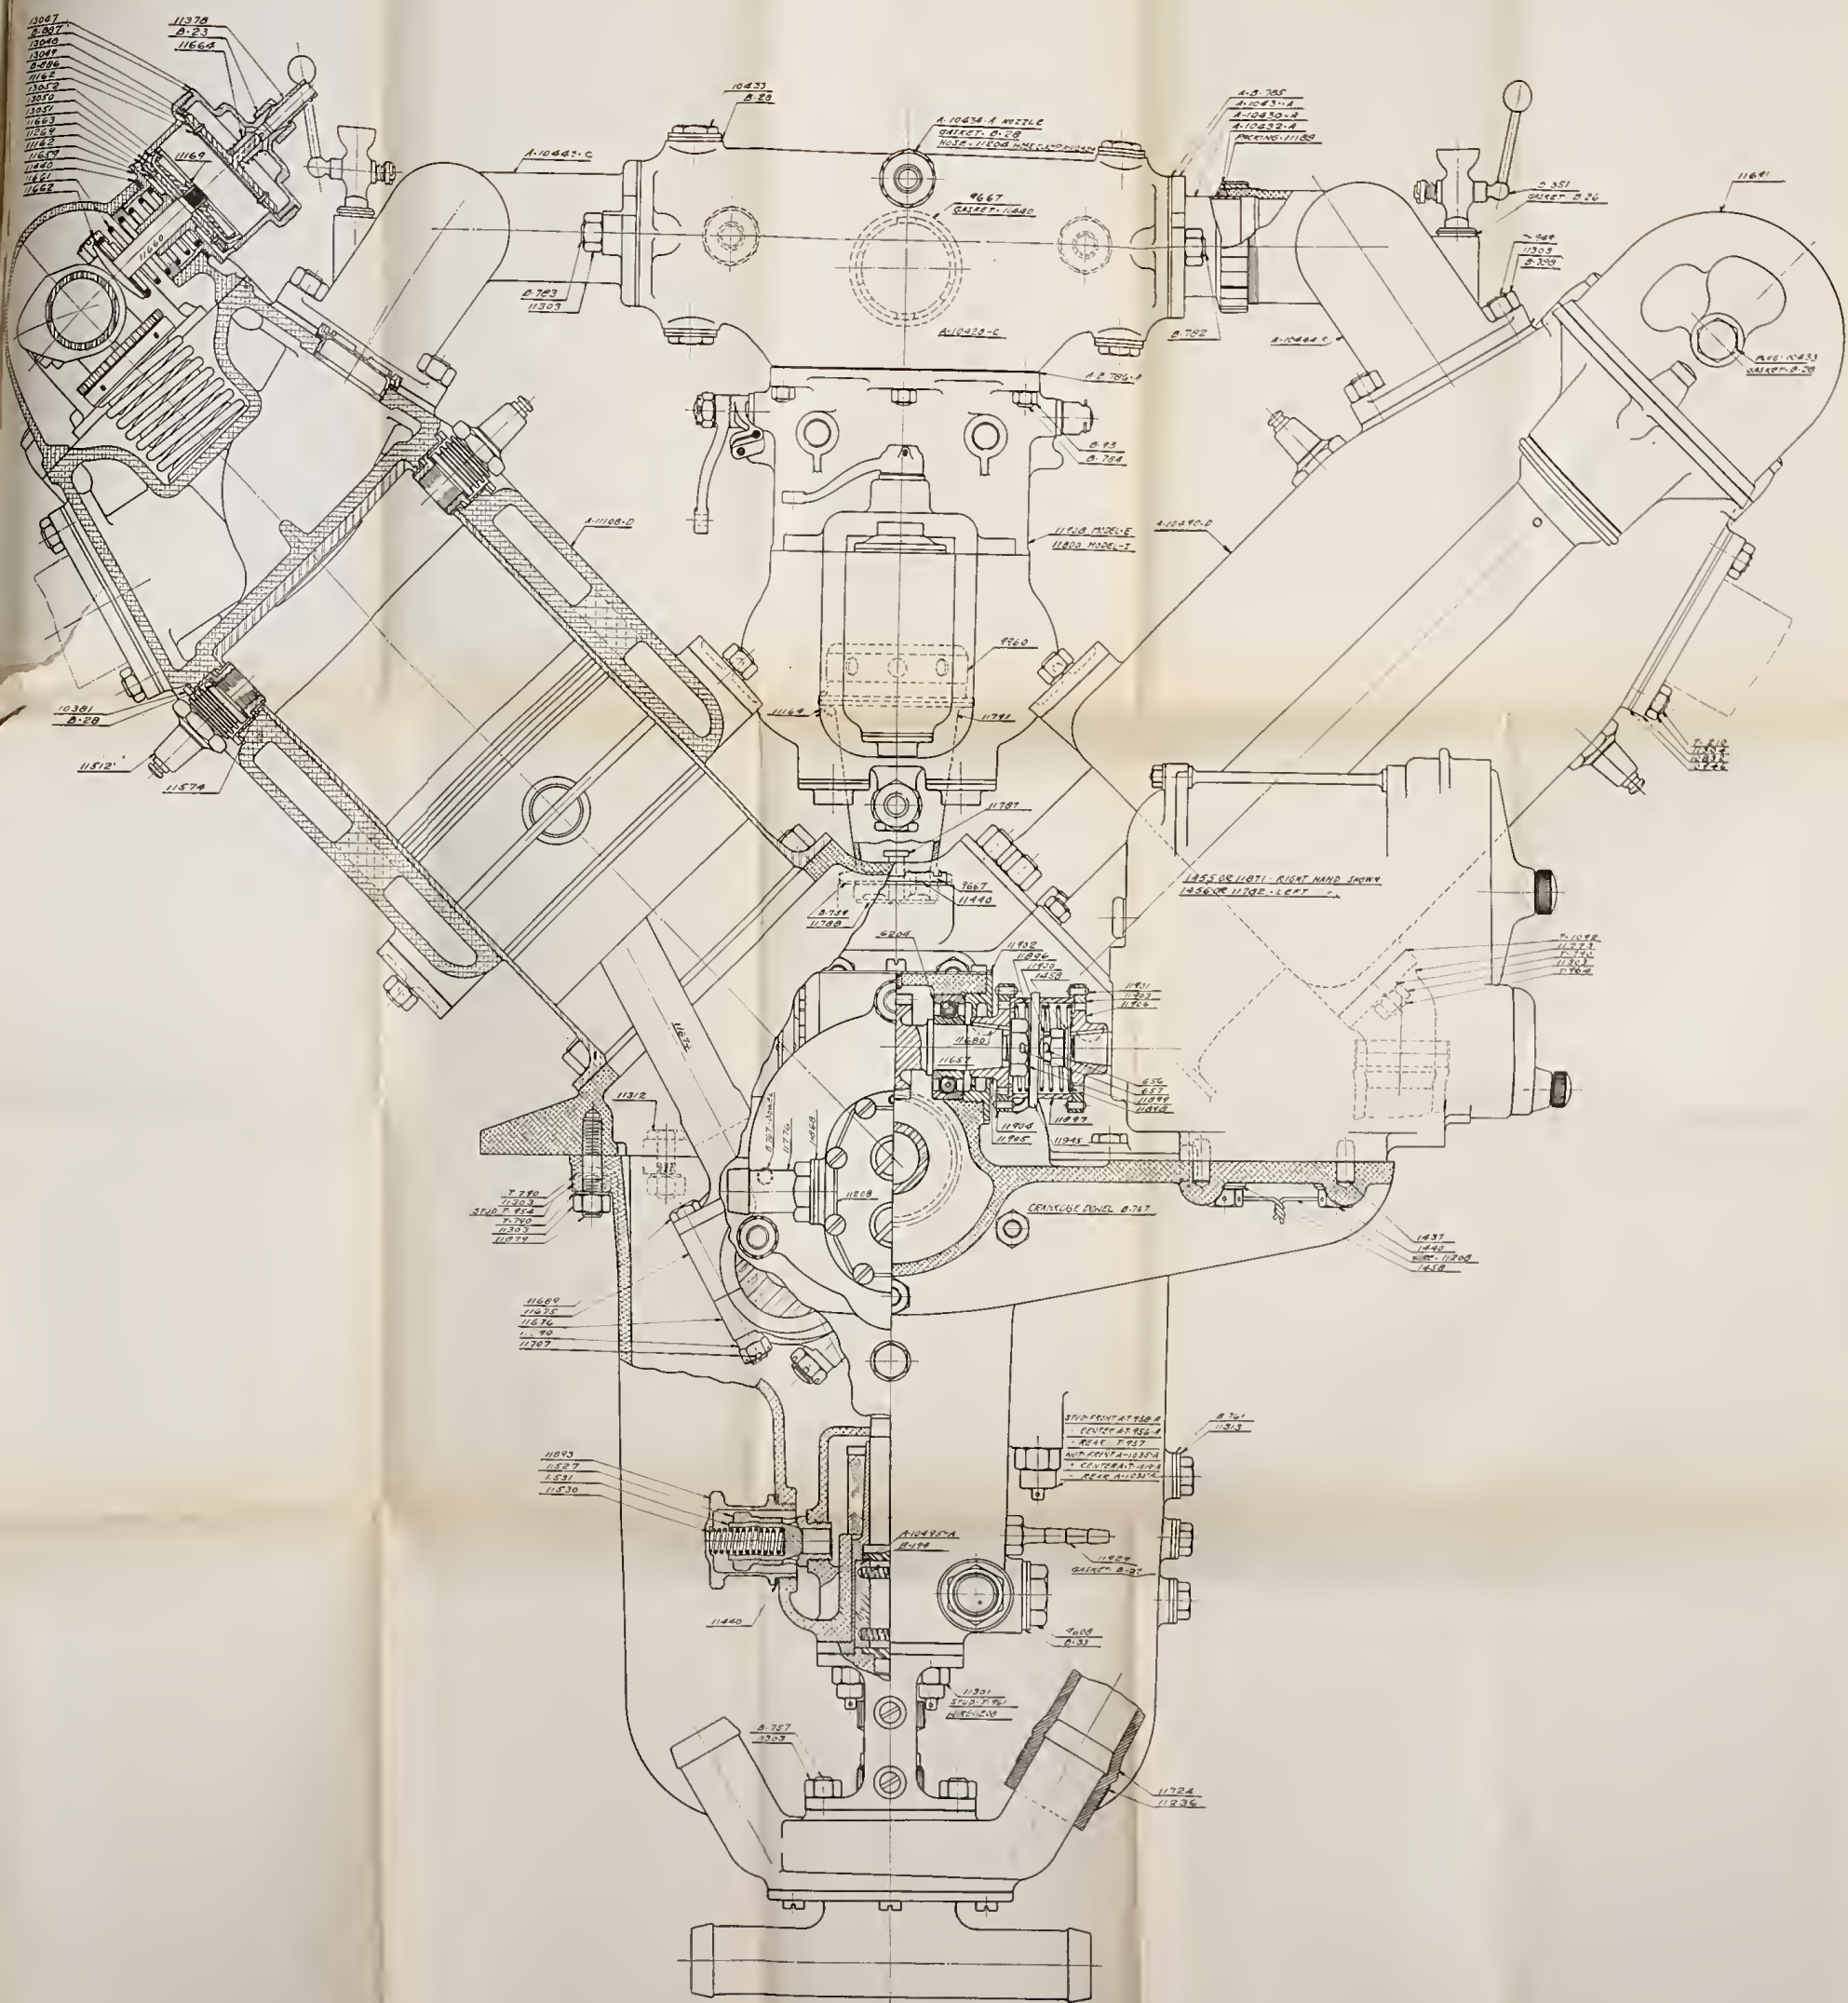


Plate 74







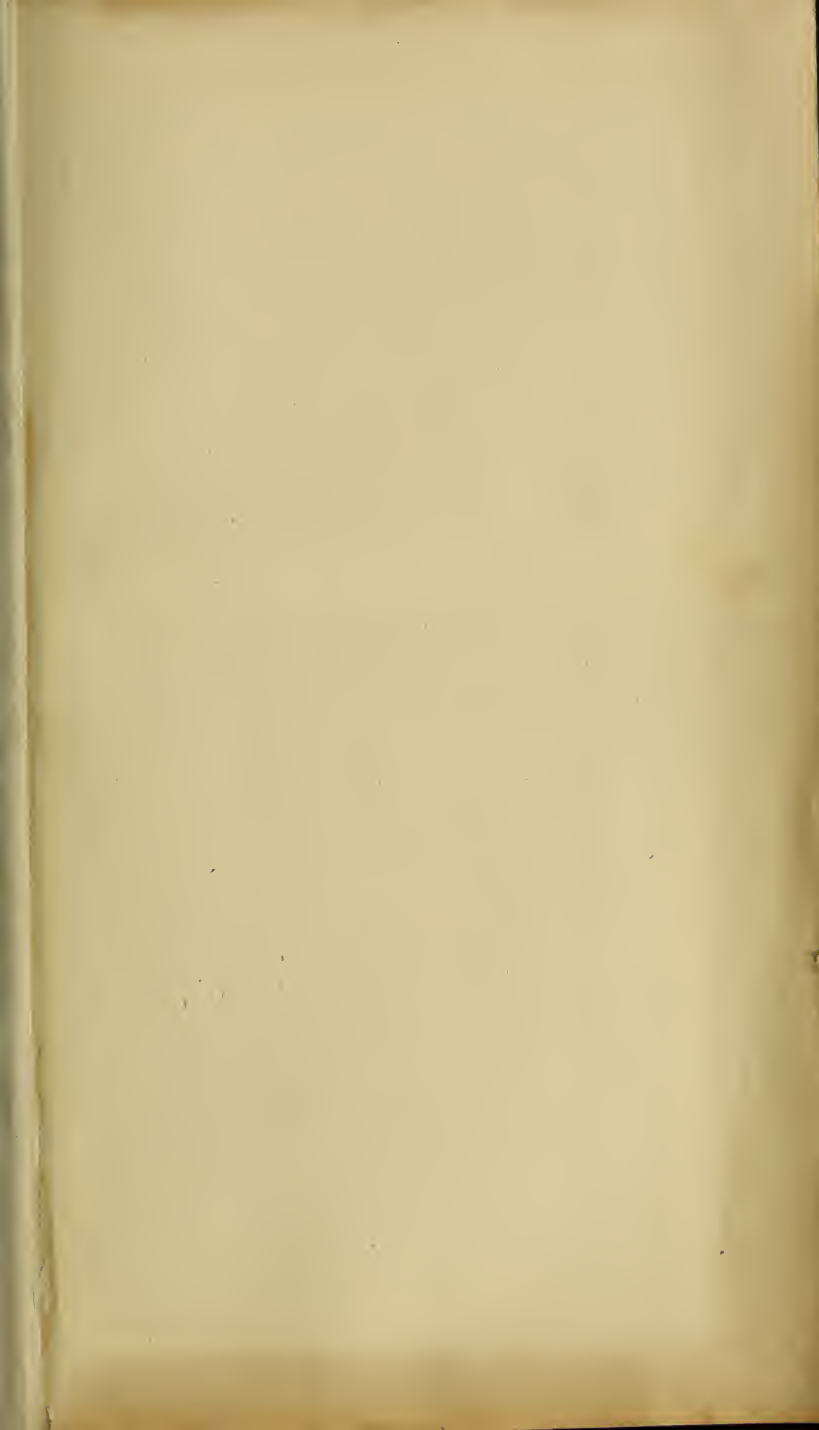


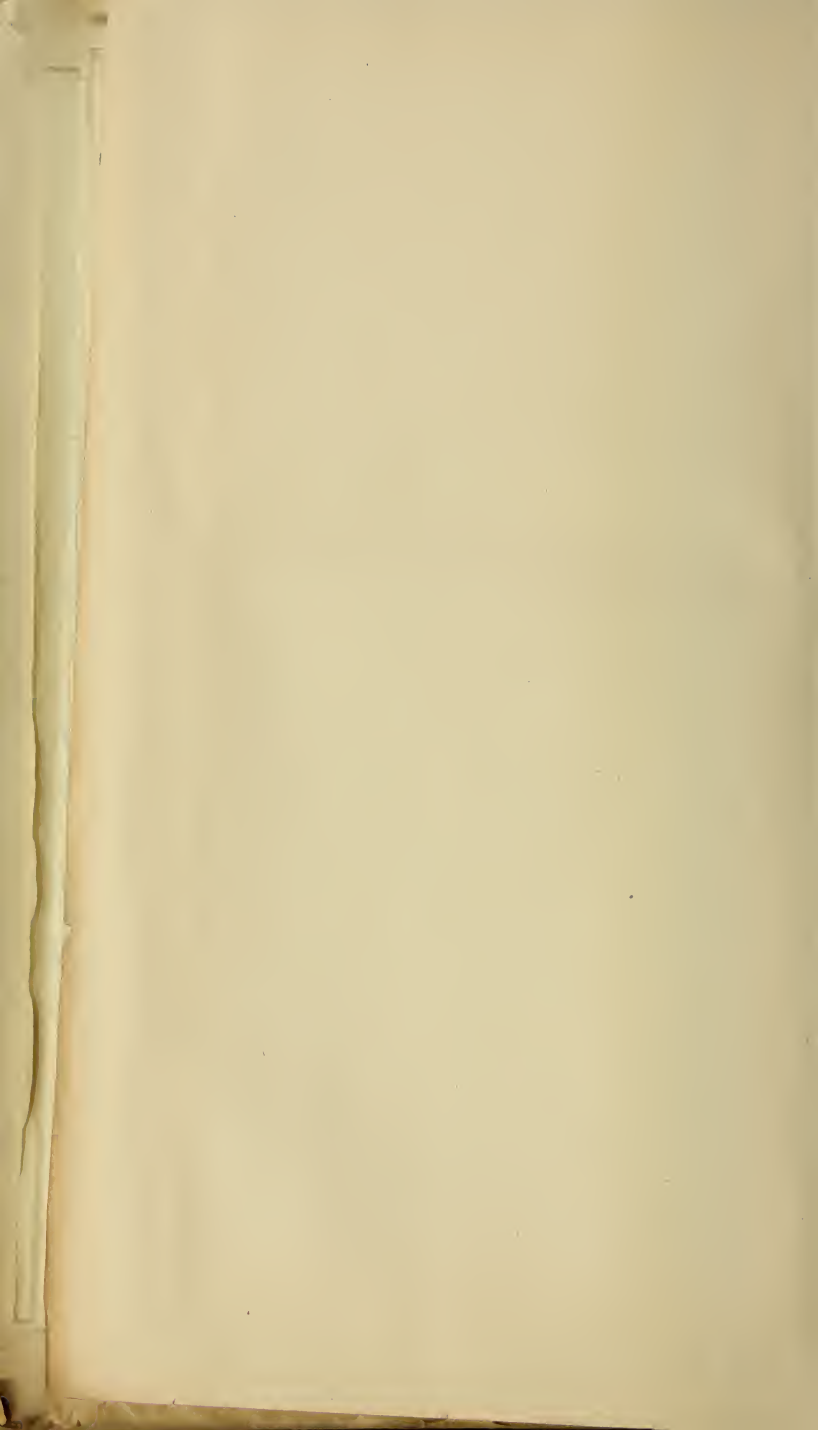


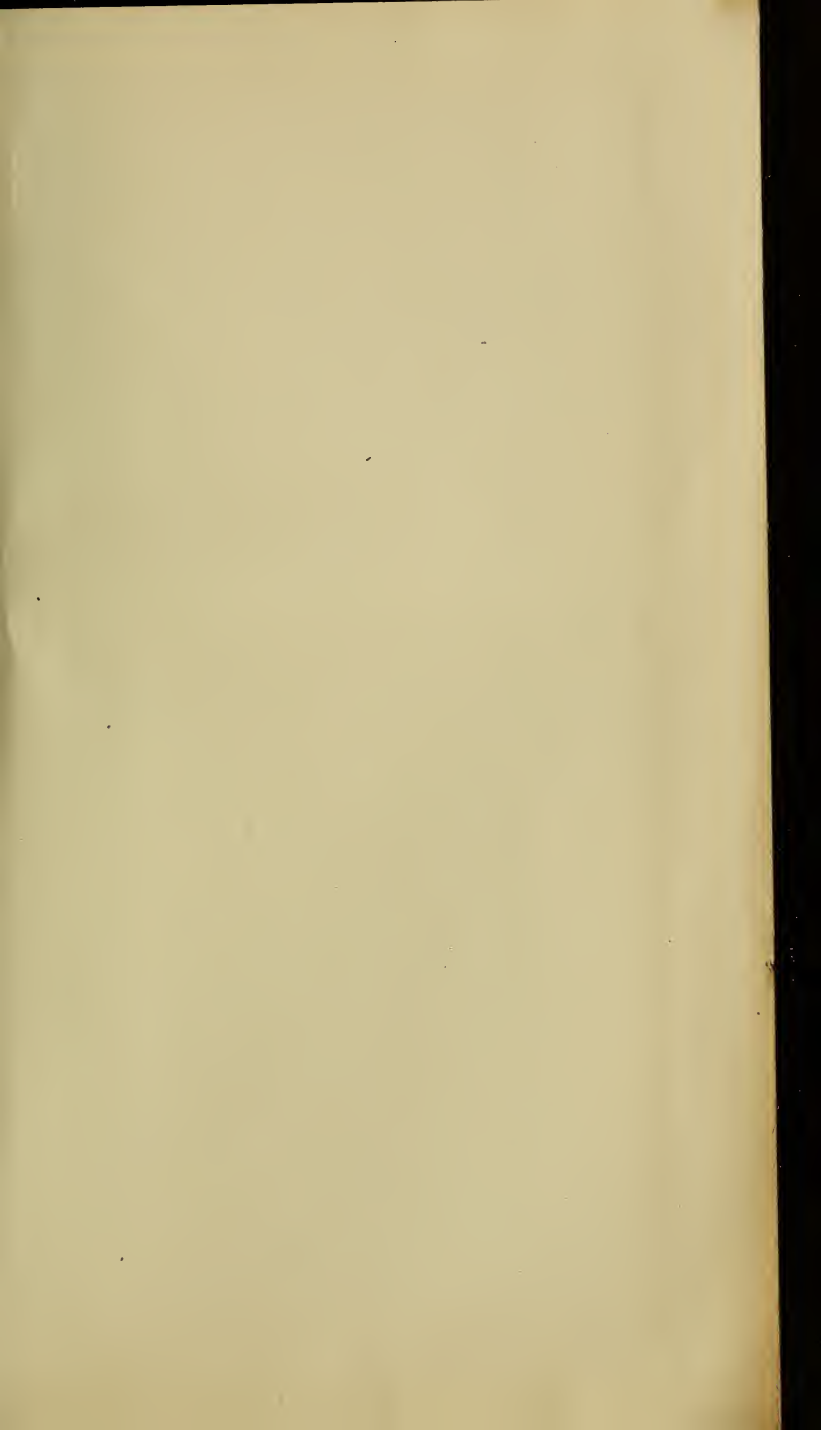




Page

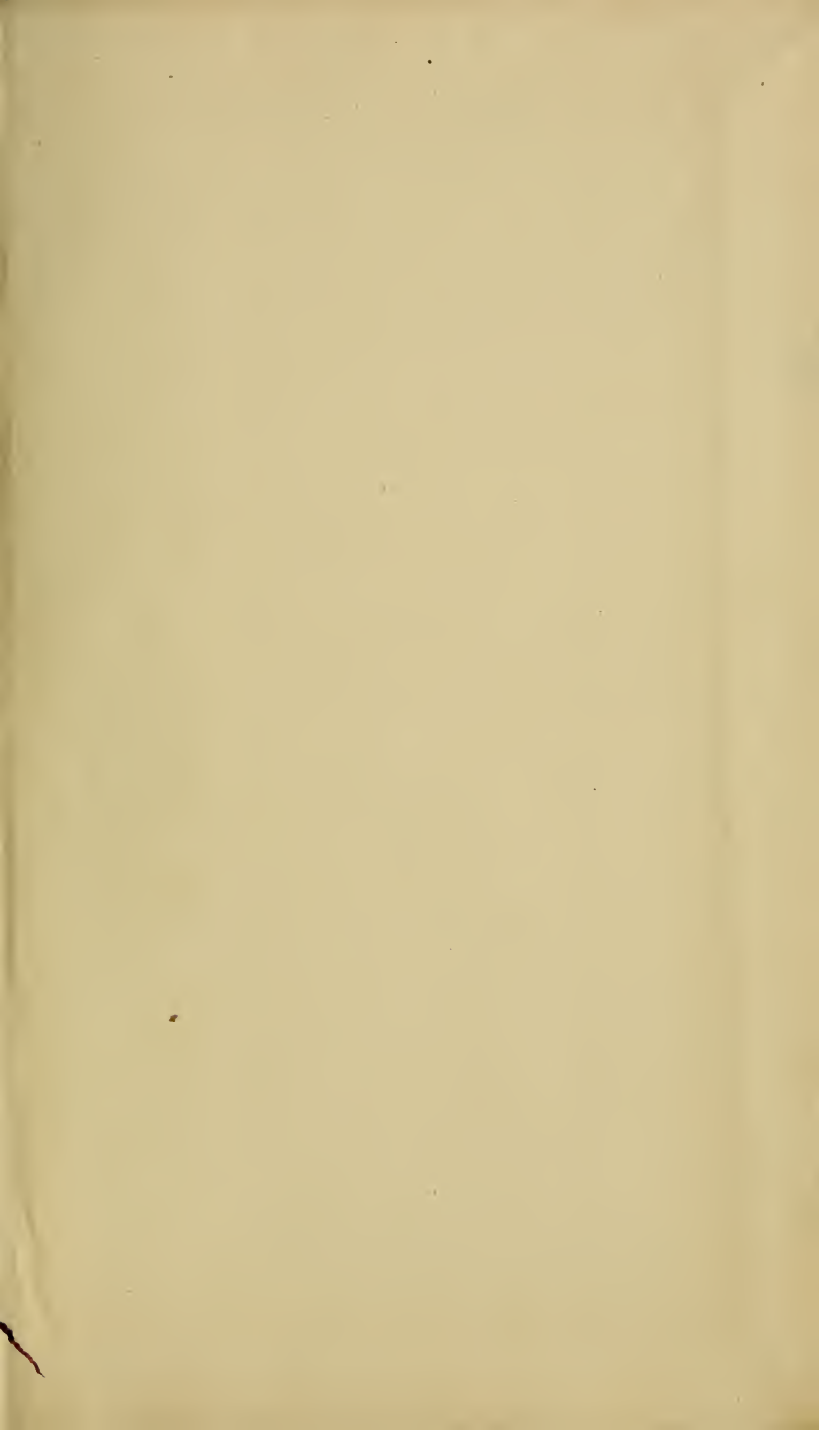












LIBRARY OF CONGRESS



0 021 094 281 6